



**Application notes for TeleMatrix 3302IP SIP Telephones
with Avaya Communication Server 1000 Release 6.0
– Issue 1.0**

Abstract

These Application Notes describe a solution comprised of Avaya Communication Server 1000 SIP Line Release 6.0 and TeleMatrix 3302IP SIP telephones. During the compliance testing, the TeleMatrix 3302IP was able to register as a SIP client endpoint with the Communication Server 1000. The TeleMatrix 3302IP SIP telephones were able to place and receive calls from Communication Server 1000 Release 6.0 non-SIP and SIP Line clients. The compliance tests focused on basic telephone features.

Information in these Application Notes has been obtained through DevConnect compliance testing and additional technical discussions. Testing was conducted via the DevConnect Program at the Avaya Solution and Interoperability Test Lab.

1. Introduction

These application notes provide detail configurations of Avaya Communication Server 1000 SIP Line release 6.0 (hereafter referred to as CS1000) and the TeleMatrix 3302IP SIP telephone release V1.8.3-781 (aka SC2-1.8.3-781) used during the compliance testing. The TeleMatrix 3302IP was tested with the non-SIP and SIP clients of the CS1000 SIP line release 6.0. All the applicable telephony feature test cases of release 6.0 SIP line were executed on the TeleMatrix 3302IP, where applicable, to ensure the interoperability with CS 1000.

1.1. Interoperability Compliance Testing

The focus of this testing was to verify that the TeleMatrix 3302IP SIP telephone was able to interoperate with the CS1000 SIP line system. The following areas were tested:

- The TeleMatrix 3302IP must be able to be installed in the same local VLAN network as the CS1000 successfully.
- Registration of the TeleMatrix 3302IP SIP telephone to the CS1000 SIP Line Gateway.
- Calls establishment of TeleMatrix 3302IP with CS1000 SIP and non-SIP telephones.
- Telephony features: Basic calls, conference, DTMF (dual tone multi frequency) transmission, voicemail with Message Waiting Indication (MWI) notification, busy, hold, speed dial, group call pickup, call waiting, ring again busy/no answer, multiple appearances Directory Number.
- Codec negotiation – G.711 and G.729.

1.2. Support

For technical support on TeleMatrix 3302IP SIP endpoints, please contact TeleMatrix, Inc technical support at website www.TeleMatrix.net or telephone: +1 719 638 8821 or email sipsupport@TeleMatrix.net.

2. Reference Configuration

Figure 1 illustrates the test configuration used during the compliance testing between the Avaya CS1000 and the TeleMatrix 3302IP.

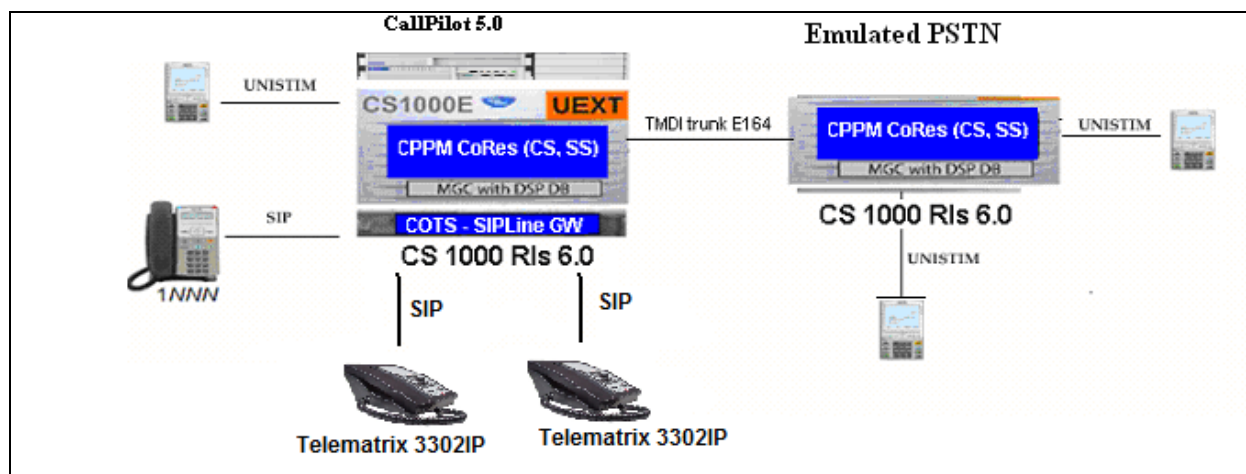


Figure 1: Test Bed Configuration

3. Equipment and Software Validated

System	Software Version
Avaya CS1000	<ul style="list-style-type: none"> Call Server (CPPM): 6.00RJ Signaling Server (CPPM): 6.00.18 SIP Line Gateway (HP DL320)
Avaya voicemail system	<ul style="list-style-type: none"> CallPilot 5.0 system
Avaya 11xx SIP client (Sigma)	<ul style="list-style-type: none"> 02.02.16.00
Avaya SIP soft-phones	<ul style="list-style-type: none"> SMC3456: v2.6 Build 53715
Avaya IP phones	<ul style="list-style-type: none"> 2050PC: 3.02.0045
TeleMatrix 3302IP	<ul style="list-style-type: none"> 3302IP V1.8.3-781 (aka SC2-1.8.3-781)

4. Configure Avaya CS 1000 - SIP LINE

This section describes the steps to configure the Avaya CS1000 SIP Line using CS 1000 Element Manager. A command line interface (CLI) option is available to provision the SIP Line application on CS 1000 system. For detailed information see [1] in section 9.

4.1. Prerequisite

- A CS1000 server which has been:
 - o Installed with CS 1000 Release 6.0 Linux Base.
 - o Joined CS 1000 Release 6.0 Security Domain.
 - o Deployed with SIP Line Application.

For more information, see [6] in section 9.

- Following packages are enabled in the keycode. If any of these features have not been enabled, please contact your Avaya account team or Avaya technical support at <http://www.avaya.com>.

Package Mnemonic	Package Number	Package Description	Package Type (New or Existing or Dependency)	Applicable Market
SIP_LINES	417	SIP Line Service package	New package	Global
FFC	139	Flexible Feature Codes	Existing package	Global
SIPL_NORTEL	415	Nortel SIP Line package	Existing package	--
SIPL_3RDPARTY	416	Third-Party SIP Line Package	Existing package	--

4.2. Login to Unified Communications Management (UCM) and Element Manager (EM)

- Using internet browser, launch CS 1000 UCM web portal at <http://<IP Address or FQDN>> where <IP address or FQDN> is the UCM Framework IP address or FQDN for UCM server.
- Login with the username/password which was defined during the primary security server configuration. For more information, see [8] in section 9.

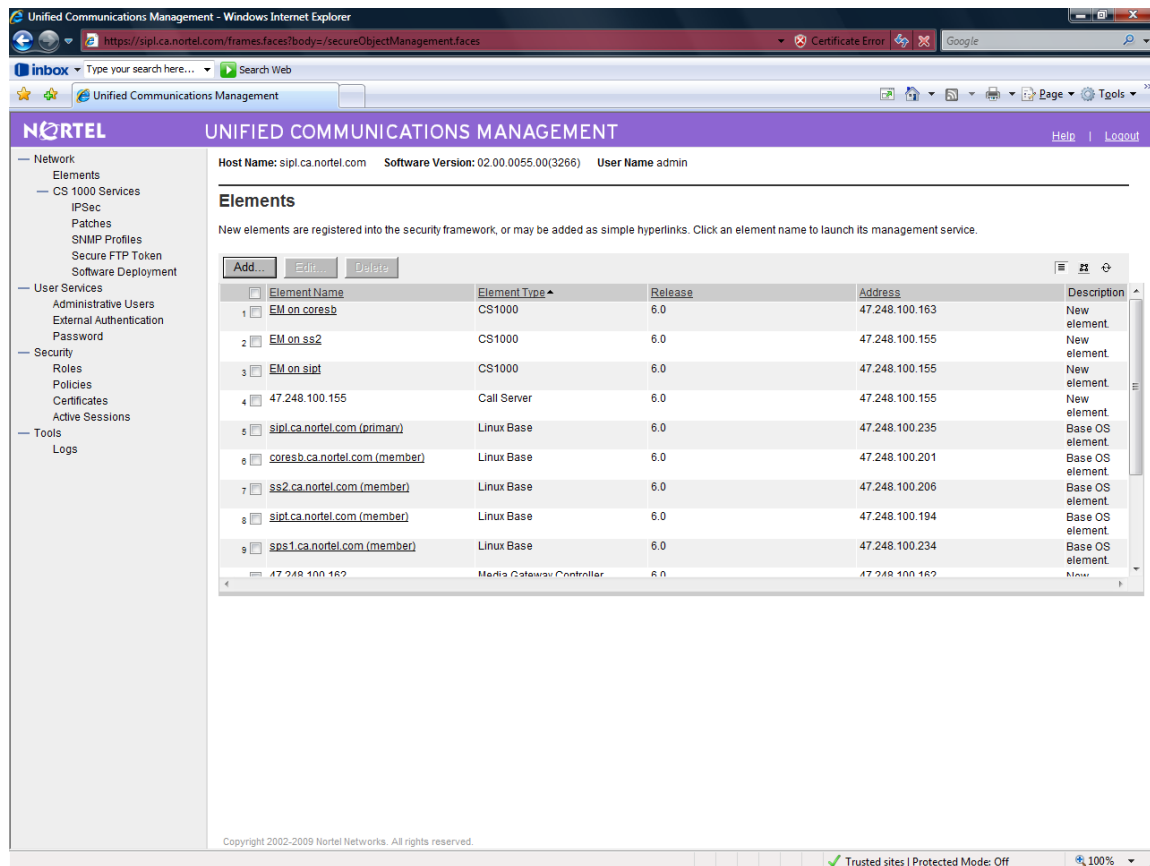


Figure 2: UCM Home Page

- On the Unified Communications Management page, under the Element Name column, click on the server name to navigate to Element Manager for that server. The CS 1000 Element Manager page appears as show in Figure 3 below.

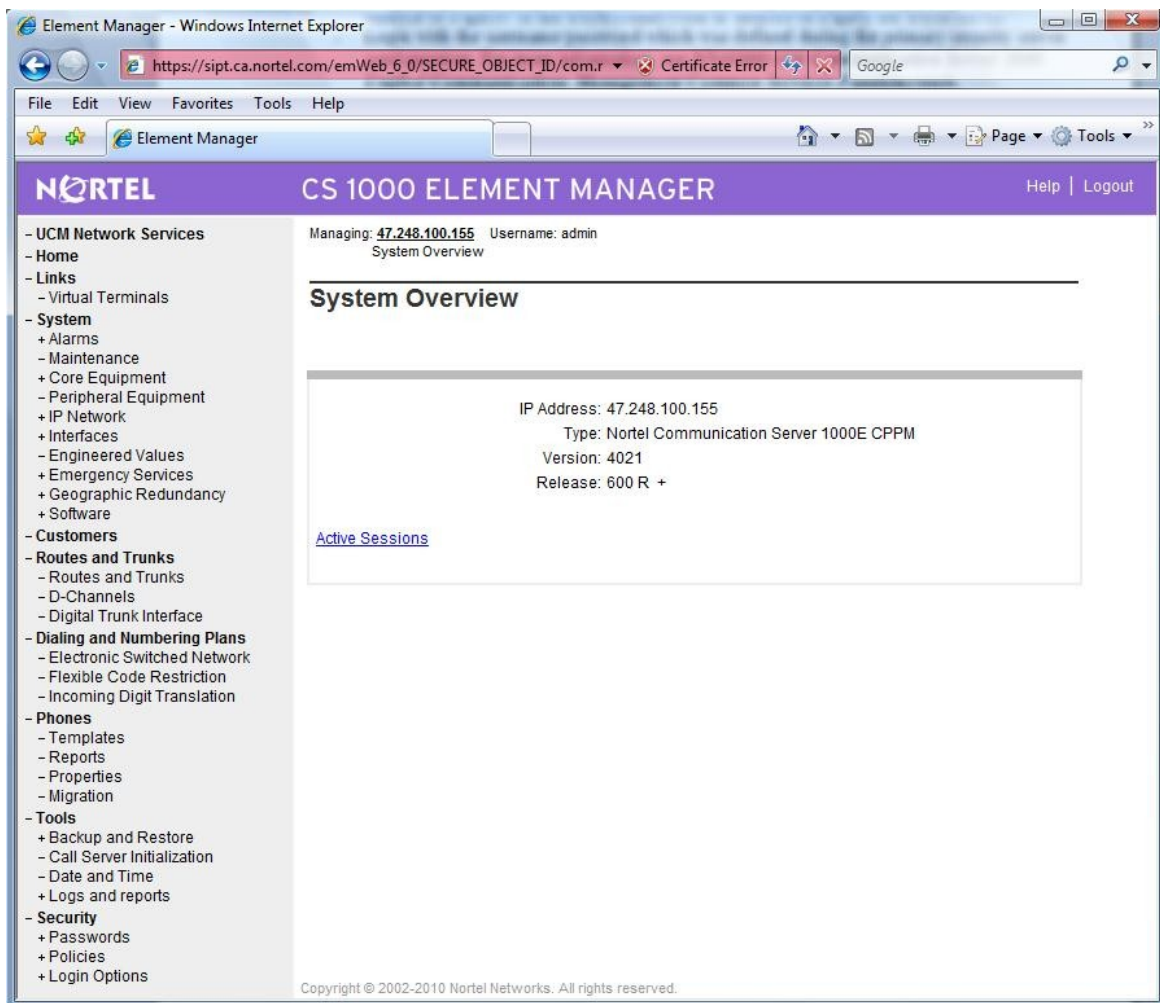


Figure 3: CS 1000 EM Home Page

4.3. Enable SIP Line Service and Configure the Root Domain in Customer Data Block (CDB)

- On the EM page, navigate to **Customers** on the left column menu, select the customer number to be enabled with SIP Line Service (not shown).
- Enable SIP Line Service by clicking on the **SIP Line Service** check box.

- Enter the SIP Line **Root Domain** name in the **Root Domain** text box as shown in Figure 4.

The screenshot displays the Nortel CS 1000 Element Manager web interface. The top header shows the Nortel logo and 'CS 1000 ELEMENT MANAGER'. The left sidebar contains a navigation menu with various system management options. The main content area is titled 'SIP Line Service' and shows configuration fields for a SIP Line. The 'SIP Line Service' checkbox is checked. The 'Root domain' field is populated with 'DPLAB.COM'. The 'User agent DN prefix' field is empty. Under 'Optional features', the 'Nortel Multimedia' checkbox is also checked. 'Save' and 'Cancel' buttons are located at the bottom right of the configuration area. The bottom status bar shows the IP address '47.248.100.155' and the user 'admin'.

Figure 4: SIP Line Service in Customers Data Block

4.4. SIP Line Telephony Node Configuration

- On the EM page, navigate to **System** → **IP Network** → **Nodes: Servers, Media Cards**.
- Click **Add** to add a new SIP Line Node to IP Telephony Nodes. To see the SIP Line node details, click on the SIP Line Node ID (not shown).
- Enter the following as show in Figure 5:
- Enter Node ID in the **Node ID** text box.
- Enter Call Server IP Address in the **Call Server IP Address** text box.
- Enter Node IP Address in the **Node IP Address** text box.
- Enter TLAN Subnet Mask in the **Subnet Mask** text box.
- Enter ELAN Gateway IP Address in the **Gateway IP Address** text box.
- Enter ELAN Subnet Mask in the **Subnet Mask** text box.
- Check **SIP Line** check box to enable SIP Line for this Node.

NORTEL CS 1000 ELEMENT MANAGER Help | Logout

Managing: 47.248.100.155 Username: admin
System » IP Network » IP Telephony Nodes

New IP Telephony Node

Step 1: Define the new Node and its services.
You will also require pre-configured servers with appropriate application software already deployed to host the selected services.

Node ID: 556 * (0-9999)

Call Server IP Address: 47.248.100.155 *

Telephony LAN (TLAN)
Node IP Address: 47.248.100.237 *
Subnet Mask: 255.255.255.240 *

Embedded LAN (ELAN)
Gateway IP address: 47.248.100.129 *
Subnet Mask: 255.255.255.224 *

Applications ☒ SIP Line
☐ UNISim Line Terminal Proxy Server (LTPS)
☐ Virtual Trunk Gateway (SIPGw, H323Gw)
☐ Personal Directory (PD)
☐ Presence Publisher

* Required Value. Next > Cancel

Copyright © 2002-2010 Nortel Networks. All rights reserved.

Figure 5 – IP Telephony Node

- Click **Next**. The page, New IP Telephony Note with Node ID, will appear as shown in Figure 6.
- On Add Server page, from the **drop down menu** list, select the desired server to add to the node.
- Click **Add** (Do not click the Next button).
- Select the check box next to the newly added server, and click **Make Leader**.

NORTEL CS 1000 ELEMENT MANAGER Help | Logout

Managing: 47.248.100.155 Username: admin
System » IP Network » IP Telephony Nodes

New IP Telephony Node (ID:557)

Step 2: Associate required signaling servers for SIP Line services.
In order to appear in the list below, servers must already be defined within ECM, should not be part of any other IP telephony node and deployed application(s) on the server(s) should match the service(s) selected for this node.

sip1 Add Remove Make Leader Print | Refresh

<input type="checkbox"/>	Hostname	Type	Deployed Applications	ELAN IP	TLAN IP	Role
Select from the list above and click Add to associate servers with this node. Selected servers must have identical application deployments.						

Copyright © 2002-2010 Nortel Networks. All rights reserved.

Figure 6 – IP Telephony Node – Add Server

- Click **Next**. The SIP Line Configuration Detail page appears as shown in Figure 7.
- Enter SIP Line domain name in **SIP Domain name** text box. This must be the same as the domain name configured in **Customers**.

Figure 7 – SIP Line Node Details

- Under the **SIP Line Gateway Services** section, select **MO** from the **SLG Role** list.
- From the **SLG Mode** list, select **S1/S2** (SIP Proxy Server 1 and Server 2), see Figure 8.

Figure 8 – SIP Line Node Details (cont.)

- Click **Next**. The **Confirm new Node details** page appears (not shown).
- Click **Finish** and wait for the configuration being saved. The **Node Saved** page appears, see Figure 9.

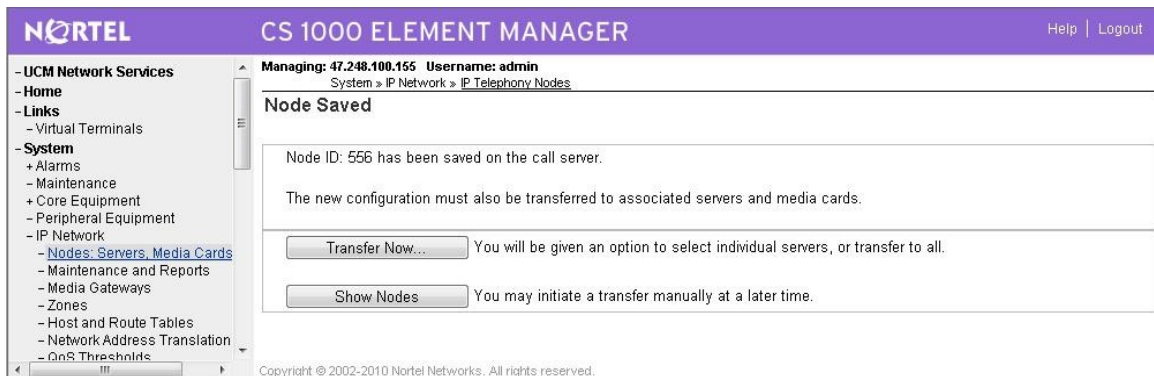


Figure 9 – Transfer Configuration

- Click **Transfer Now**. The **Synchronize Configuration Files (Node ID 556)** page appears.
- Select some or all of the node elements and then click **Start Sync** to transfer the configuration files to the selected servers, see Figure 10.

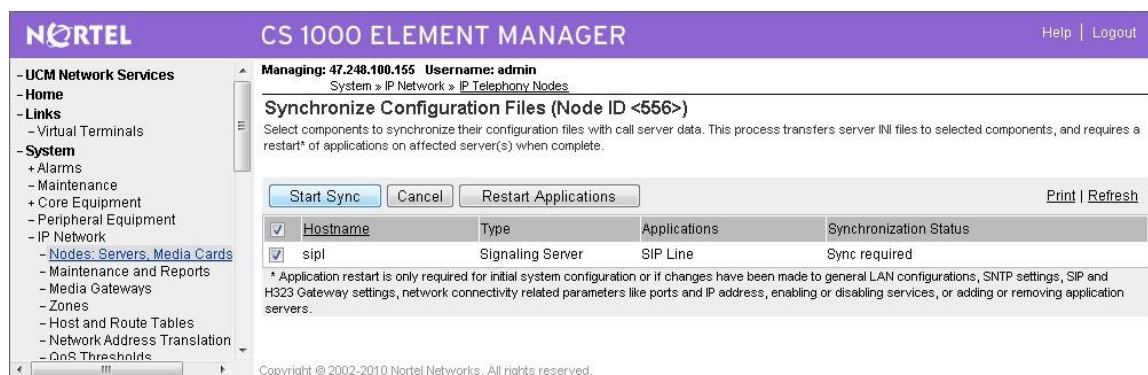


Figure 10 – Synchronize Configuration Files

4.5. D-Channel over IP Configuration

- On the EM page, on the left column menu navigate to **Routes and Trunks** → **D-Channels**.
- Under the **Configuration** section, from the **Choose a D-Channel Number** list, select a D-Channel number, channel 30 in this configuration.
- Under the **Configuration** section, from the **Type** list, select **DCH**.
- Click **Add**.
- From the **D channel Card Type (CTYP)** list, select **D-Channels is over IP (DCIP)**.
- Click **Add**.
- The **D-Channels xx Property Configuration** page appears as shown in Figure 11.
- From the **Interface type for D-channel (IFC)** list, select **Meridian Meridian1 (SL1)**.
- Others are at default values.

- Click the **Basic options (BSCOPT)** link. The **Basic options (BSCOPT)** list expands.

NORTEL CS 1000 ELEMENT MANAGER Help | Logout

Managing: 47.248.100.155 Username: admin
Routes and Trunks > D-Channels > D-Channels 30 Property Configuration

D-Channels 30 Property Configuration

- Basic Configuration

Input Description	Input Value
Action Device And Number (ADAN) (TYPE)	DCH
D channel Card Type (CTYP)	DCIP
Designator (DES)	SIPLine
Recovery to Primary (RCVP)	<input type="checkbox"/>
PRI loop number for Backup D-channel (BCHL)	
User (USR)	Integrated Services Signaling Link Dedicated (ISLD)
Interface type for D-channel (IFC)	Meridian Meridian1 (SL1)
Country (CNTY)	ETS 300 =102 basic protocol (ETSI)
D-Channel PRI loop number (DCHL)	
Primary Rate Interface (PRI)	<input type="button" value="more PRI"/>
Secondary PRI2 loops (PRI2)	
Meridian 1 node type (SIDE)	Slave to the controller (USR)
Release ID of the switch at the far end (RLS)	5
Central Office switch type (CO_TYPE)	100% compatible with Bellcore standard (STD)
Integrated Services Signaling Link Maximum (ISLM)	4000 Range: 1 - 4000
Signaling Server Resource Capacity (SSRC)	1800 Range: 0 - 4000

- Basic options (BSCOPT)

Primary D-channel for a backup DCH (PDCH) Range: 0 - 254

- PINX customer number (PINX_CUST)

- Progress signal (PROG)

- Calling Line Identification (CLID)

- Output request Buffers (OTBF) 32

- D-channel transmission Rate (DRAT) 56 kb/s when LCMT is AMI (56K)

- Channel Negotiation option (CNEG) No alternative acceptable, exclusive. (1)

- Remote Capabilities (RCAP) Edit

+ - Change protocol timer value (TIMR)

- B channel Service messaging. (BSRV) ☐

+ Advanced options (ADVOPT)

+ Feature Packages

Figure 11 – SIP Line D-Channel Property Configuration

- Click **Edit** to configure **Remote Capabilities (RCAP)**. The **Remote Capabilities Configuration detail page** will appear as shown in Figure 12.
- Select the **Message waiting interworking with DMS-100 (MWI)** check box.
- Select the **Network name display method 2 (ND2)** check box.

- At the bottom of the *Remote Capabilities Configuration* page, click *Return - Remote Capabilities*.
- The *D-Channel xx Property Configuration* page reappears.

Managing: 47.248.100.155 Username: admin
Routes and Trunks » D-Channels » D-Channels 30 Property Configuration » - Remote Capabilities Configuration

- Remote Capabilities Configuration

Input Description	Input Value
Basic rate interface (BRI)	<input type="checkbox"/>
Call completion on busy using integer value (CCBI)	<input type="checkbox"/>
Call completion on busy using object identifier (CCBO)	<input type="checkbox"/>
Call completion on busy for QSIG and EuroISDN BRI (CCBS)	<input type="checkbox"/>
Call completion on no response using integer value (CCNI)	<input type="checkbox"/>
Call completion on no response using object identifier (CCNO)	<input type="checkbox"/>
Call completion to no reply for QSIG and EuroISDN BRI (CCNR)	<input type="checkbox"/>
Network call park (CPK)	<input type="checkbox"/>
Connected line identification presentation (COLP)	<input type="checkbox"/>
Call transfer integer (CTI)	<input type="checkbox"/>
Call transfer object (CTO)	<input type="checkbox"/>
Diversion info. is sent using integer value (DV1)	<input type="checkbox"/>
Diversion info. is sent using object identifier (DV1O)	<input type="checkbox"/>
Rerouting requests processed using integer value (DV2)	<input type="checkbox"/>
Rerouting requests processed using object identifier (DV2O)	<input type="checkbox"/>
Diversion info. sent. rerouting requests processed (DV3)	<input type="checkbox"/>
EuroISDN - div. info sent. rerouting req. processed (DV3O)	<input type="checkbox"/>
Call transfer notification and invocation to EuroISDN (ECTO)	<input type="checkbox"/>
Malicious call identification (MCID)	<input type="checkbox"/>
MCDN QSIG conversion (MQC)	<input type="checkbox"/>
Remote D-channel is on a MSDL card (MSL)	<input type="checkbox"/>
Message waiting interworking with DMS-100 (MWI)	<input checked="" type="checkbox"/>
Network access data (NAC)	<input type="checkbox"/>
Network call trace supported (NCT)	<input type="checkbox"/>
Network name display method 1 (ND1)	<input type="checkbox"/>
Network name display method 2 (ND2)	<input checked="" type="checkbox"/>
Network name display method 3 (ND3)	<input type="checkbox"/>
Name display - integer ID coding (NDI)	<input type="checkbox"/>
Name display - object ID coding (NDO)	<input type="checkbox"/>
Path replacement uses integer values (PRI)	<input type="checkbox"/>
Path replacement uses object identifier (PRO)	<input type="checkbox"/>
Release Link Trunks over IP (RLTI)	<input type="checkbox"/>
Remote virtual queuing (RVQ)	<input type="checkbox"/>
Trunk anti-tromboning operation (TAT)	<input type="checkbox"/>
User to user service 1 (UUS1)	<input type="checkbox"/>
NI-2 name display option. (NDS)	<input type="checkbox"/>
Message waiting indication using integer values (QMWI)	<input type="checkbox"/>
Message waiting indication using object identifier (QMWIO)	<input type="checkbox"/>
User to user signalling (UUI)	<input type="checkbox"/>

Return - Remote Capabilities Cancel

Figure 12 – SIP Line D-Channel RCAP Configuration Details

Message Waiting Interworking with DMS-100 (MWI) must be enabled to support voice mail notification on SIP Line endpoints.

Network Name Display Method 2 (ND2) must be enabled to support name display between SIP Line endpoints.

Others check boxes are left unchecked.

4.6. Application Module Link (AML) over Embedded LAN (ELAN) Configuration

- On the EM page, navigate to **System** → **Interfaces** → **Application Module Link**.
- Click **Add** to add an Application Module Link. **New Application Module Link** page appears as shown in Figure 13.
- Enter AML port in the **Port number** text box. The SIP Line Service can use port 32 to port 127. In this case, SIP Line Service is configured to use port 32.
- Click **Save** to save the configuration.

The screenshot shows the 'New Application Module Link' configuration page in the Nortel CS 1000 Element Manager. The page has a purple header with the Nortel logo and 'CS 1000 ELEMENT MANAGER'. A breadcrumb trail indicates the path: System > Interfaces > Application Module Link > New Application Module Link. The left sidebar contains a tree view with categories like UCM Network Services, Home, Links, System, Customers, and Routes and Trunks. Under 'System', 'Application Module Link' is selected. The main content area contains the following fields: 'Port number' with a value of 32 and a range of (16 - 127); 'AML over ELAN' checkbox which is checked; 'Description' with the value 'SIPLine'; 'Link control system parameters' checkbox which is unchecked; and 'Maximum octets' with a value of 512 and a note '(per HDLC frame)'. At the bottom right are 'Save' and 'Cancel' buttons. A copyright notice at the bottom reads 'Copyright © 2002-2010 Nortel Networks. All rights reserved.'

Figure 13 – Application Module Link Configuration

4.7. Value Added Server (VAS) Configuration

- On the EM page, navigate to **System** → **Interfaces** → **Value Added Server**.
- Click **Add** to add new Value Added Server. The **Add Value Added Server** page appears.
- Click on the **Ethernet LAN Link** as shown in Figure 14.
- Enter the Ethernet LAN Link number in the **Ethernet LAN Link** text box.
- Ensure that the **Application Security** check box is unchecked.

NORTEL CS 1000 ELEMENT MANAGER Help | Logout

Managing: 47.248.100.155 Username: admin
System > Interfaces > Value Added Server > Edit Value Added Server 032

Edit Value Added Server 032

Ethernet LAN Link: 032
ELAN port configured in ADAN

Application Security:

Interval: 1
Time interval for checking the link for overload in five second increments

Message Count Threshold: 9999 * (10 - 9999)

Save Cancel

Copyright © 2002-2009 Nortel Networks. All rights reserved.

Figure 14 – Value Added Service for Application Module Link

4.8. Virtual Trunk Zone Configuration

- On the EM page, navigate to *System* → *IP Network* → *Zones*.
- On the *Zones* page, select *Bandwidth Zones*.
- On the *Bandwidth Zones* page, select a *Bandwidth Zone number* from the list, and click to *Add* (not shown).
- On the *Zone Basic Property and Bandwidth Management* page, set the zone properties based on bandwidth availability. It is recommended to set the *Zone Strategy* to *BestQuality (BQ)* as shown in Figure 15.
- From the *Zone Intent (ZBRN)* list, select *VTRK (VTRK)*.
- Click *Submit* button at the bottom of the page to save and commit the changes.

NORTEL CS 1000 ELEMENT MANAGER Help | Logout

Managing: 47.248.100.155 Username: admin
System > IP Network > Zones > Bandwidth Zones > Bandwidth Zones 254 > Zone Basic Property and Bandwidth Management

Zone Basic Property and Bandwidth Management

Input Description	Input Value
Zone Number (ZONE):	254
Intrazone Bandwidth (INTRA_BW):	100000
Intrazone Strategy (INTRA_STGY):	Best Quality (BQ)
Interzone Bandwidth (INTER_BW):	100000
Interzone Strategy (INTER_STGY):	Best Quality (BQ)
Resource Type (RES_TYPE):	Shared (SHARED)
Zone Intent (ZBRN):	VTRK (VTRK)
Description (ZDES):	

Submit Refresh Delete Cancel

Copyright © 2002-2009 Nortel Networks. All rights reserved.

Figure 15 – Virtual Trunk Zone Configuration

4.9. SIP Line Route Data Block (RDB) Configuration

- On the EM page, navigate to *Routes and Trunks* → *Routes and Trunks*.
- Click *Add* for the customer number.
- On the *Customer xx, New Route Configuration* page as shown in Figure 16.
- From the *Route number (ROUT)* list, select a route number.
- From the *Trunk type (TKTP)* list, select *TIE trunk data block (TIE)*.
- When Trunk Type (TKTP) is selected, the following options appear:
 - Trunk type M911P (M911P).
 - The route is for a virtual trunk route (VTRK).
 - Digital trunk route (DTRK).
 - Integrated services digital network option (ISDN).
- From the *Incoming and outgoing trunk (ICOG)* field, select *Incoming and Outgoing (IAO)*.
- In the *Access code for the trunk route (ACOD)* field, enter the access code.
- Select *The route is for virtual trunk route (VTRK)* check box.
- In the *Zone for codec selection and bandwidth management (ZONE)* field, enter the zone number. (Use the same zone as configured in 4.8 “Virtual Trunk Zone Configuration”).
- In the *Node ID of signaling server of this route (NODE)* field, enter the node ID of the SIP Line Gateway.
- From the *Protocol ID for the route (PCID)* list, select *SIP Line (SIPL)*.
- Select the *Integrated services digital network option (ISDN)* check box.
- From the *Mode of operation (MODE)* list, select *Route uses ISDN Signaling Link (ISLD)*.
- In the *D channel number (DCH)* field, enter the D-channel number.
- From the *Interface type for route (IFC)* list, select *Meridian M1 (SL1)*.
- Ensure the *Network calling name allowed (NCNA)* check box is selected.
- Select the *Trunk route optimization (TRO)* check box. (Optional)
- *Basic Route Options, Network Options, General Options, and Advanced Configurations* sections set as default.
- Click *Submit button to save the configuration changes*.

NORTEL CS 1000 ELEMENT MANAGER Help | Logout

Managing: 47,248,100,155 Username: admin
Routes and Trunks > Routes and Trunks > Customer 0, Route 30 Property Configuration

Customer 0, Route 30 Property Configuration

- Basic Configuration

Route data block (RDB) (TYPE)

Customer number (CUST)

Route number (ROUT)

Designator field for trunk (DES)

Trunk type (TKTP)

Incoming and outgoing trunk (ICOG)

Access code for the trunk route (ACOD)

Trunk type M911P (M911P) ☐

The route is for a virtual trunk route (VTRK) ☒

Zone for codec selection and bandwidth management (ZONE) Range: 0 - 255

Node ID of signaling server of this route (NODE) Range: 0 - 9999

Protocol ID for the route (PCID)

Integrated services digital network option (ISDN) ☒

Mode of operation (MODE)

D channel number (DCH) Range: 0 - 254

Interface type for route (IFC)

Private network identifier (PNI) Range: 0 - 32700

Network calling name allowed (NCNA) ☒

Network call redirection (NCRD) ☒

Trunk route optimization (TRO) ☐

Recognition of DTI2 ABCD FALT signal for ISL (FALT) ☐

Channel type (CHTY)

Call type for outgoing direct dialed TIE route (CTYP)

Insert ESN access code (INAC) ☒

Integrated service access route (ISAR) ☐

Display of access prefix on CLID (DAPC) ☐

Mobile extension route (MBXR) ☐

+ Basic Route Options

+ Network Options

+ General Options

+ Advanced Configurations

Submit Refresh Delete Cancel

Figure 16 –SIP Line Route Configuration

Note: There is an outstanding issue with the CS 1000 Call Waiting feature which occurs when **Network Call Redirection** is enabled. If the Network Call Redirection feature is not required, uncheck the feature to make the Call Waiting work.

4.10. SIP Line Virtual Trunk Configuration

- On the EM page, navigate to **Routes and Trunks** → **Routes and Trunks**.
- Select the customer for which you are configuring Virtual Trunks.
- Click **Add trunk associated with the route listing** to add new trunk members.
- The **Customer xx, Route yy, New Trunk Configuration** Web page appears as show in Figure 17.
- Choose **Multiple trunk input number (MTINPUT)** if you are using more than one trunk.
- From the **Trunk data block (TYPE)** list, select **IP Trunk (IPTI)**.
- In the **Terminal Number (TN)** field, enter a TN.
- Enter a **Route number, Member number (RTMB)**.
- Enter a **Trunk Group Access Restriction (TGAR)** value.

- In the **Channel ID for this trunk (CHID)** field, enter a **channel ID** (where the range is 1 to 382).
- To specify a **Class of Service (CLS)** for the trunk, click **Edit**. The **Class of Service Configuration** Web page appears (not shown).
- Select a **Class of Service**.
- Click **Return Class of Service** to return to the **New Trunk Configuration** Web page.
- Select **Basic Configuration**. The **Basic Configuration** list expands.
- From the **Start arrangement Incoming (STRI)** list, select a value for the start arrangement for incoming calls.
- From the **Start arrangement Outgoing (STRO)** list, select a value for the start arrangement for outgoing calls.
- Select **Advanced Trunk Configurations**. The **Advanced Trunk Configurations** list expands (not shown).
- Configure **Network Class of Service group (NCOS)**. Please select the value between 0 - 99. The default value is 0.
- Click **Save**.

NORTEL CS 1000 ELEMENT MANAGER Help | Logout

Customer 0, Route 30, Trunk 1 Property Configuration

- Basic Configuration

Input Description	Input Value
Trunk data block (TYPE)	IPTI
Terminal Number (TN)	100 0 01 00
Designator field for trunk (DES)	SIPLINE
Extended Trunk (XTRK)	VTRK
Route number, Member number (RTMB)	30 1
Level 3 Signaling (SIGL)	
Card Density (CDEN)	8D
Start arrangement Incoming (STRI)	Immediate (IMM)
Start arrangement Outgoing (STRO)	Immediate (IMM)
Trunk Group Access Restriction (TGAR)	0
Channel ID for this trunk (CHID)	1
Increase or decrease the member numbers (INC)	Increase channel and member number (YES)
Class of Service (CLS)	Edit

+ Advanced Trunk Configurations

Save Delete Cancel

Copyright © 2002-2009 Nortel Networks. All rights reserved.

Figure 17 –SIP Line Trunk Configuration

4.11. SIP Line Phones Configuration

Following is a sample configuration for a Third Party SIP Line endpoint. Depending on supported features and service access level of the user, this configuration can be adjusted accordingly. The sample is using Command Line Interface of CS1000. This can be done by login to Call Server of CS1000 and using overlay 11 as shown below. The bold text values are the changes required where others are at default values.

>LD 11

REQ: prt
TYPE: tnb
TN 96 0 1 27
DATE
PAGE
DES

DES TELE
TN 096 0 01 27 VIRTUAL
TYPE **UEXT**
CDEN 8D
CTYP XDLC
CUST 0
UXTY **SIPL**
MCCL **YES**
SIPN 0 ← Set this to 1 and set SIP3 to 0 if this TN is reserved for Avaya SIP Phones
SIP3 **1** ← Set this to 1 and set SIPN to 0 if this TN is reserved for third party SIP Phones
FMCL 0
TLSV 0
SIPU **55573**
NDID **556**
SUPR NO
SUBR DFLT MWI RGA CWI MSB
UXID
NUID
NHTN
CFG_ZONE **001**
CUR_ZONE 001
ERL
ECL 0
FDN **55576** ← If CLS FNA is equipped, call will be forwarded no answer to this number
TGAR 0
LDN NO
NCOS 0
SGRP 0
RNPG **2** ← This field must be set first if call pickup is equipped (CLS PUA)
SCI 0
SSU
XLST
SCPW **1234**
SFLT NO
CAC_MFC 0
CLS_UNR **FBA** WTA LPR **PUA** MTD **FNA** HTA TDD HFA CRPD
MWA LMPN RMMD SMWD AAD IMD XHD IRD NID OLD VCE DRG1

POD DSX VMD SLKD CCSD **SWD** LND **CNDA**
 CFTD SFD MRD DDV **CNIA** CDCA MSID DAPA BFED RCB
 ICDD CDMD LLCN MCTD CLBD AUTU
 GPUA DPUA **DNDA** CFXA ARHD CLTD ASCD
 CPFA CPTA ABDD CFHD FICD NAID BUZZ AGRD MOAD
 UDI RCC HBTD AHA IPND **DDGA** **NAMA** MIND PRSD NRWD NRCD NROD
 DRDD EXR0
 USMD USRD ULAD CCB
 RTDD RBDD RBHD PGND FLXD FTTC DNDY DNO3
 MCBN
 FDS
 NOVD VOLA VOUD CDMR ICRD MCDD T87D MSNV FRA PKCH
 CPND_LANG ENG
 RCO 0
 HUNT **55576** ← If CLS HTA/FBA is equipped, call will be forwarded busy to this number
 LHK 0
 PLEV 02
 DANI NO
 AST
 IAPG 0
 AACS NO
 ITNA NO
 DGRP
 MLWU_LANG 0
 MLNG ENG
 DNDR 0
 KEY 00 **SCR 55573** 0 MARP
 CPND
 CPND_LANG ROMAN
 NAME **TELEMATRIX 55573**
 XPLN 13
 DISPLAY_FMT FIRST, LAST
 01 HOT U **2655573** MARP 0
 02 SCU **0004** ← Speed Call User
 03
 04 **MSB** ← This key can be different than key 04 to enable Make Set Busy (MBS) feature
 05
 .
 .
 16
 17 TRN
 18 AO6
 19 CFW 16 55574
 20 RGA
 21 PRK
 22 RNP
 23
 24 PRS

4.12. PSTN Outside Trunk Configuration

Following is a sample configuration which was used during compliance testing. For more information about PRI Trunk Configuration, see [3] in section 9.

4.12.1. Procedure summary

This procedure was applied for the CS 1000 system under test as per Figure 1. The provisioning is done using the Command Line Interface by logging in to the Call Server of the CS1000.

No.	Overlay	Action
1	LD 17	Adding a PRI card
2	LD 17	Adding a PRI D-Channel
3	LD 15	Defining a PRI customer
4	LD 16	Defining a PRI service route
5	LD 14	Defining service channels and PRI trunks
6	LD 73	Defining system timers and clock controller
7	LD 48	Enable TMDI or PRI MSDL card
8	LD 60	Enable Clock Controller
9	LD 60	Enable Digital trunk loop
10	LD 96	Enable D-channel

4.12.2. Adding a PRI card

The programming example below shows how to add a PRI card using LD 17. For all other fields not listed in the example press RETURN to use default values.

Prompt	Response	Description
REQ	CHG	Change data.
TYPE	CFN	Configuration data block.

CEQU	YES	Changes to common equipment.
DLOP	10	Digital Trunk Interface Loop
MG_CARD	4 0 1	MG card assigned to superloop
MODE	PRI	Mode of operation
TMDI	YES	Card is TMDI card
TRSH	0	Threshold

4.12.3. Adding a PRI D-channel

The programming example below shows how to add a PRI D-channel using LD 17. For all other fields not listed in the example press RETURN to use default values.

Prompt	Response	Description
REQ	CHG	Change existing data
TYPE	CFN	Configuration data block.
ADAN	NEW DCH 10	Add a primary D-channel (any unused SDI port.) xx = 1-9 for Option 11C main cabinet, 11-19 for IP expansion cabinet 1, 21-29 for IP expansion cabinet 2, 31-39 for IP expansion cabinet 3, and 41-49 for IP expansion cabinet 4. Xx = 11-14, 21-24, 31-34, 41-44 of the first, second, third and fourth Media Gateway, respectively.
CTYP	TMDI	Card type where: MSDL = The NTBK51BA Downloadable D-Channel Daughterboard. TMDI = TMDI (NTRB21) card.
DES	T1_QSIG	Designator field.
USR	PRI	D-channel is for ISDN PRI only. Note: 2.0 Mb only supports PRI or SHA user
IFC	ISGF	Interface type.

DCHL	10	<p>PRI card number carries the D-channel. Must match entry made for the "CDNO" associated with the "DCHI" prompt above.</p> <p>Where: xx = 1-9 for Option 11C main cabinet, 11-19 for IP expansion cabinet 1, 21-29 for IP expansion cabinet 2, 31-39 for IP expansion cabinet 3, and 41-49 for IP expansion cabinet 4.</p> <p>xx = 11-14, 21-24, 31-34, 41-44 of the first, second, third and fourth Media Gateway, respectively.</p>
SIDE	NET	<p>NET = network, the controlling switch (applied for CS 1000 PSTN simulator)</p> <p>USR = slave to the controller (applied for CS 1000 system under test)</p>
RLS	6	Software release of far-end. This is the current software release of the far-end. If the far-end has an incompatible release of software, it prevents the sending of application messages, for example, 'Network Ring Again.
RCAP	CCBI CCNI PRI DV3I CTI QMWI	Remote Capabilities.
PR_TRIGS	DIV 2 3	Path Replacement Triggers
PR_TRIGS	CNG 2 3	
PR_TRIGS	CON 2 3	
PR_TRIGS	CTR2 2 3	

4.12.4. Defining a PRI customer

The programming example below shows how to define a PRI customer using LD 15. For all other fields not listed in the example press RETURN to use default values.

Prompt	Response	Description
REQ	CHG	Change existing data.
TYPE	CDB	Customer data block.
CUST	0	Customer number.
ISDN	YES	Customer is equipped with ISDN.

4.12.5. Defining a PRI service route

The programming example below shows how to add a PRI service route using LD 16. For all other fields not listed in the example press RETURN to use default values.

Prompt	Response	Description
REQ	NEW	Create new data
TYPE	RDB	Route data block
CUST	0	Customer number
ROUT	10	Route number
DES	T1_QSIG	Designator field for trunk
TKTP	TIE	Trunk type
DTRK	YES	Digital trunk route
ISDN	YES	ISDN option
MODE	PRI	Route used for PRI only
PNI	1	Customer private network identifier. Is the same as the CDB PNI at far-end.
IFC	ISGF	Interface type.
ICOG	IAO	Incoming and outgoing
ACOD	8010	Trunk access code

4.12.6. Defining service channels and PRI trunks

The programming example below shows how to create service channels and PRI trunks using LD 14. For all other fields not listed in the example press RETURN to use default values.

Prompt	Response	Description
REQ	NEW 23	Create 23 new trunks
TYPE	Tie	Trunk type
TN	10 1	Loop (card) and channel number for digital trunks
PCML	MU	System PCM law.

DES	T1_QSIG	Designator field for trunk
CUST	0	Customer number
RTMB	10 1	Service route number and trunk member number
CLS	UNR DTN	Trunk Class Of Service

5. Configure TeleMatrix 3302IP

This section describes how to access the TeleMatrix 3302IP SIP endpoint web interface and configure the TeleMatrix 3302IP for testing.

5.1. SIP Registration

This section shows how to login to the main SIP telephone registration.

In the web browser address field, enter the TeleMatrix 3302IP IP address. The TeleMatrix 3302IP login page will appear as shown in Figure 18. Enter the username and password.


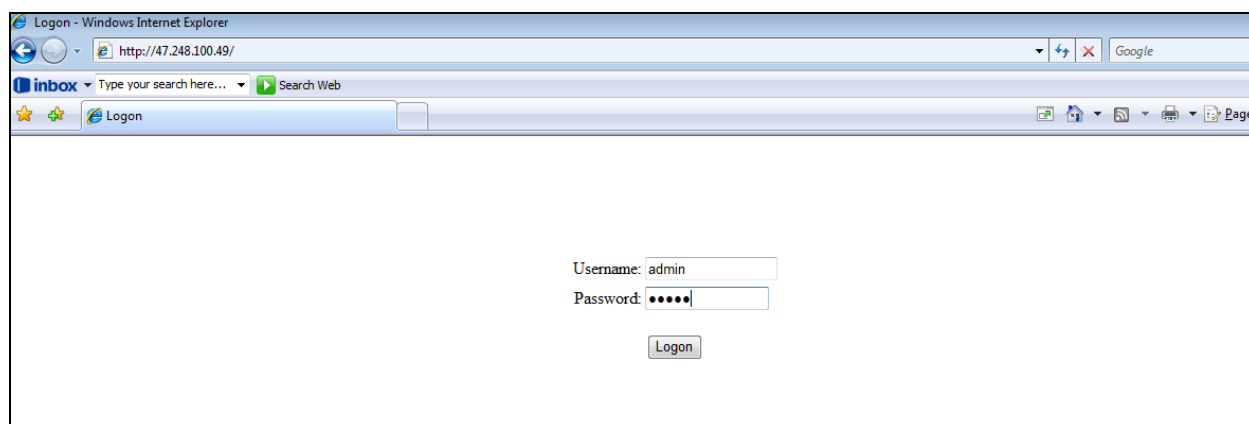


Figure 18 – Login Screen

Click the Login button, the main configuration screen appears as in Figure 19 below.

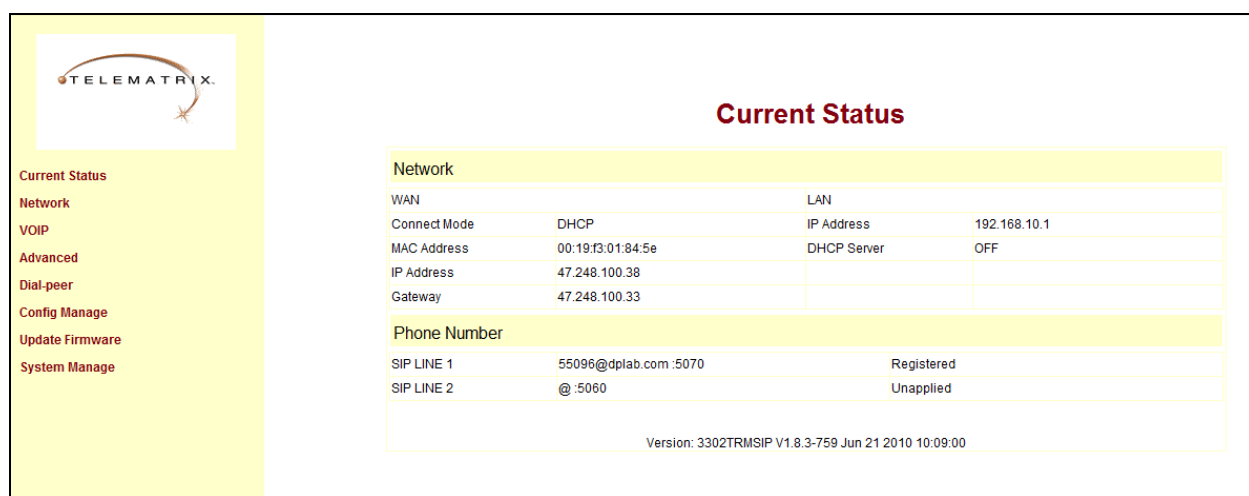

Network			
WAN		LAN	
Connect Mode	DHCP	IP Address	192.168.10.1
MAC Address	00:19:f3:01:84:5e	DHCP Server	OFF
IP Address	47.248.100.38		
Gateway	47.248.100.33		

Phone Number		
SIP LINE 1	55096@dplab.com :5070	Registered
SIP LINE 2	@ :5060	Unapplied

Version: 3302TRMSIP V1.8.3-759 Jun 21 2010 10:09:00

Figure 19: Main Configuration Screen

5.2. Configure the SIP Port

This section shows how to configure the SIP telephone to register with the CS1000 SIP Line.

In the main configuration screen (see Figure 19), click to the VOIP menu on the left menu bar. Provide the SIP information as shown in Figure 20 below. Click on the APPLY button.

SIP Configuration			
SIP Line Select			
SIP 1		Load	
Basic Setting			
Register Status	Registered	Display Name	55096
Server Address	dplab.com	Proxy Server Address	47.248.100.237
Server Port	5070	Proxy Server Port	
Account Name	55096	Proxy Username	
Password	Proxy Password	
Phone Number	55096	Domain Realm	dplab.com
Enable Register	<input checked="" type="checkbox"/>	Message Waiting Indication	Enable(No Subscribe) ▼
APPLY			
Advanced Set			

Figure 20: SIP Configuration Screen

5.3. Local Call Forward Settings

This section shows how to set “Local Call Forward” on the SIP telephone.

On the Figure 20 above, click on “Advanced Set” button to go Advanced SIP setting. Set “Local Call Forward” as shown in Figure 21 below.

The “Call Forward No Answer” ringing timeout settings established here should be less than the timeout setting on the CS 1000 Call Server in order to make the “Local Call Forward No Answer” take affect.

The “Call Forward Always” settings on the CS 1000 Call Server must be OFF in order to make the “Local Call Forward Always” take effect.

TELEMATRIX.

Current Status
Network
VOIP
Advanced
Dial-peer
Config Manage
Update Firmware
System Manage

SIP Line Select

SIP 1

Basic Setting

Register Status	Registered	Display Name	55096
Server Address	dplab.com	Proxy Server Address	47.248.100.237
Server Port	5070	Proxy Server Port	
Account Name	55096	Proxy Username	
Password	****	Proxy Password	
Phone Number	55096	Domain Realm	dplab.com
Enable Register	<input checked="" type="checkbox"/>	Message Waiting Indication	Enable(No Subscribe)

Advanced SIP Setting

Register Expire Time	60 seconds	Forward Type	Always
NAT Keep Alive Interval	60 seconds	Forward Phone Number	55550
User Agent	TMX 3302TRMSIP V1.8.3	Server Type	common
Signal Key		DTMF Mode	DTMF_RFC2833
Media Key		RFC Protocol Edition	RFC3261
Local Port	5060	Transport Protocol	UDP
Ring Type	Type 1	Subscribe Expire Time	300 seconds
Enable URI Convert	<input checked="" type="checkbox"/>	Click To Talk	<input type="checkbox"/>
Enable Keep Authentication	<input type="checkbox"/>	Signal Encode	<input type="checkbox"/>
NAT Keep Alive	<input type="checkbox"/>	Rtp Encode	<input type="checkbox"/>
Enable Via rport	<input checked="" type="checkbox"/>	Enable Session Timer	<input type="checkbox"/>
Enable PRACK	<input checked="" type="checkbox"/>	Answer With Single Codec	<input type="checkbox"/>
Long Contact	<input type="checkbox"/>	Auto TCP	<input type="checkbox"/>
Dial Without Register	<input type="checkbox"/>		

Figure 21: Local Call Forward Settings

5.4. DTMF and Codec settings

This section describes how to configure DTMF and Codec settings in the TeleMatrix 3302IP SIP telephone.

5.4.1. DTMF Settings

This section shows how to set DTMF on the SIP telephone.

In the main configuration screen (see Figure 20), click on the “Advanced Set” button, and then click on DTMF mode from the list box as Figure 22.

The screenshot displays the Telematrix configuration interface. On the left is a sidebar with navigation links: Current Status, Network, VOIP, Advanced, Dial-peer, Config Manage, Update Firmware, and System Manage. The main area is titled 'SIP Line Select' and shows 'SIP 1' selected. Below this is the 'Basic Setting' section, which includes fields for Register Status (Registered), Display Name (55096), Server Address (dplab.com), Proxy Server Address (47.248.100.237), Server Port (5070), Proxy Server Port, Account Name (55096), Proxy Username, Password (masked), Proxy Password, Phone Number (55096), Domain Realm (dplab.com), Enable Register (checked), and Message Waiting Indication (Enable/No Subscribe). An 'APPLY' button is present. Below the Basic Setting is the 'Advanced SIP Setting' section. It contains various parameters: Register Expire Time (60 seconds), Forward Type (Always), NAT Keep Alive Interval (60 seconds), Forward Phone Number (55550), User Agent (TMX 3302TRMSIP V1.8.3-), Server Type (common), Signal Key, DTMF Mode (DTMF_RFC2833, highlighted with a red box), Media Key, RFC Protocol Edition (RFC3261), Local Port (5060), Transport Protocol (UDP), Ring Type (Type 1), Subscribe Expire Time (300 seconds), Enable URI Convert (checked), Click To Talk, Enable Keep Authentication, Signal Encode, NAT Keep Alive, Rtp Encode, Enable Via rport (checked), Enable Session Timer, Enable PRACK (checked), Answer With Single Codec, Long Contact, Auto TCP, and Dial Without Register. An 'APPLY' button is at the bottom of this section.

Figure 22 DTMF setting

5.4.2. Codec Settings

This section shows how to set Codec on the SIP telephone. Testing has been done on both codecs; G711 and G729. Bellow example only shows how to set them for testing G729, but it can be done the same way for G711.

In the main configuration screen (see Figure 20), click on the “Advanced” on the left panel, and then click on DSP from the list, select the codec setting as shown in Figure 23.

DSP Set			
First Codec	g729	Second Codec	None
Third Codec	None	Fourth Codec	None
Default Ring Type	Type 1	Handdown Time	200 ms
Input Volume	3 (1-9)	Output Volume	7 (1-9)
Handfree Volume	4 (1-9)	Ring Volume	5 (1-9)
G729 Payload Length	30ms	Signal Standard	United States
VAD	<input type="checkbox"/>		
<input type="button" value="APPLY"/>			

Figure 23: DSP Settings

6. General Test Approach and Test Results

The focus of this interoperability compliance testing was primarily to verify the call establishment between the TeleMatrix 3302IP and the CS1000 telephones. Other call features, such as busy, hold, DTMF, MWI and codec negotiation, were exercised.

6.1. General test approach

The general test approach was to have one of the CS1000 telephone clients/users to place a call to and from the TeleMatrix 3302IP telephone and to exercise other telephony features. The main objectives were to verify the TeleMatrix 3302IP successfully performed the following:

- Registration TeleMatrix 3302IP telephones to the CS1000.
- Call establishment from TeleMatrix 3302IP telephones with Avaya CS1000 SIP and non SIP telephones/clients.
- Call establishment from TeleMatrix 3302IP telephones with emulated PSTN telephones.
- Basic call operation: DTMF transmission, voicemail with MWI notification, busy, hold, call waiting, second call.
- Advance CS 1000 Call Server features: speed dial, group call pickup, ring again busy/no answer, call park/retrieve, call forward (busy/all call/no answer), conference and multiple appearances DN.
- Codec negotiations.

6.2. Test Results

The objectives outlined in section 6.1 were verified. The following observations were made during the compliance testing:

- Enable Network Call Redirection (NCRD) in CS1000 Call Server SIP Line Route will cause an issue with Call Waiting. This issue has been raised against CS 1000 SIP Line system.
- The transfer scenario is not supported on the TeleMatrix 3302IP telephone. This feature was not tested during compliance testing, as transfer is not a hospitality guestroom function.
- The TeleMatrix 3302IP telephone does not support call forward as described below:
Pre-condition: UA_02 which is configured CFNA to UA_01 on CS1000. Place a call from UA_02 to UA_02, i.e. dial its own telephone number. You will hear the dial tone. This is by design intent on the TeleMatrix telephone.
- In order to register SIP Line 2 on the TeleMatrix 3302IP telephone, the user needs to modify the Config File as follows:
 - Go to 'Config Manage' on the left hand menu.
 - On 'Backup Configuration', choose "Right Click here to Save as Config File (.txt)"
 - Edit 'Config File' as following:
 - + Replace version 2.0002 by version 2.0025.
 - + Delete 'tt@1' on SIP1 Sip Name field.
 - + Delete 'tt@2' on SIP2 Sip Name field.
 - Save Config File and upload it back into the telephone in 'Update Configuration'
 - SIP Line 2 can then be answered when called, but only SIP 1 will perform outbound calls.
- Bridge Line Appearance (BLA) has not been tested and therefore not supported.
- The TeleMatrix 3302IP sets does not support client busy forward when two 3302IP sets are in conversation mode. However if CS1K is programmed for busy forward then the 3302IP sets will follow the CS1K configuration. The 3302IP sets will support client busy forward only when the set is off hook and not in conversation mode.

Avaya has not performed audio performance testing or reviewed the SIP phones compliance to required industry standards.

7. Verification Steps

This section includes some steps that can be followed to verify the configuration.

- Verify that the SIP telephone registers successfully with the CS 1000 SIP Line Gateway server and Call Server by using CS 1000 Linux command line and CS 1000 Call Server overlay LD 32.
 - Login to the sipline server using Avaya account.
 - Issue command "slgSetShowByUID [userID]" where userID is SIP Line user's ID being checked.

```
[nortel@sipl ~]$ slgSetShowByUID 55524
=== VTRK ===
```

```

UserID          TN          Clients  Calls  SetHandle
-----
      55524      096-00-02-24          1      0  0xb7c25e10
StatusFlags = Registered Controlled KeyMapDwld SSD
FeatureMask =
CallProcStatus = 0

Current Client = 0, Total Clients = 1

== Client 0 ==
IP:Port:Trans = 47.248.100.56:5060:udp
Type          = SIP3
UserAgent     = PolycomV VX-VVX_1500-UA/3.2.2.0481
x-nt-guid     = 9ad7a4871842718a35aeadf070608745
RegDescrip    =
RegStatus     = 1
PbxReason     = OK
SipCode       = 200
Expire        = 300
Contact       = sip:55524@47.248.100.56:5060
Nonce         = cad64489bbd9bca62aa9a1f833052da4
NonceCount    = 3
hTimer        = 0x9c659d0
TimeRemain    = 183
Stale         = 0
Outbound      = 0
ClientGUID    = 0

Key  Func  Lamp  Label
0    3      0      55524
1    126    0      265524
2    3      0      55097
3    9      0
4    29     0
17   16     0
18   18     0
19   27     0
20   19     0
21   52     0
22   25     0
24   11     0
25   30     0
26   31     0

```

- Login to the call server using admin account.
- Load overlay 32 and then issue command “stat [TN]” where TN is the SIP Line user’s TN being checked

```

>ld 32
NPR000
.stat 96 0 2 24
IDLE REGISTERED 00

```

- Place a call from and to TeleMatrix 3302IP telephone and verify that the call is established with 2 way speech path.

- During the call, use pcap tool (ethereal/wireshark) at the SIPLine Gateway and clients to make sure that all SIP request/response messages are correct.

8. Conclusion

All of the executed test cases have passed and met the objectives outlined in **Section 6.1**, with some exceptions outlined in **Section 6.2**. The outstanding issues are being investigated by TeleMatrix and Avaya design teams. Some of these issues are considered as exceptions. The TeleMatrix 3302IP version 3302TRMSIP V1.8.3-781 is considered in compliance with Avaya CS1000 SIP Line System Release 6.0.

9. Additional References

Product documentation for Avaya products may be found at:

<http://support.nortel.com/go/main.jsp>

[1] *Communication Server 1000 SIP Line Fundamental, Release 6.0, Revision 01.08, February 2010, Document Number NN43001-508*

[2] *Communication Server 1000E Maintenance, Release 6.0, Revision 03.16, January 2010, Document Number NN43041-700*

[3] *Communication Server 1000 ISDN Primary Rate Interface Installation and Commissioning, Revision 01.03, August 2007, Document Number NN43001-301*

[4] *Troubleshooting Guide for Distributors, Release 6.0, Revision 02.02, December 2009, Document Number NN43001-730*

[5] *Communication Server 1000E Installation and Commissioning, Release 6.0, Revision 03.06, February 2010, Document Number NN43041-310*

[6] *Communication Server 1000E Software Upgrades, Revision 03.12, February 2010, Document Number NN43041-458*

[7] *Communication Server 1000E Linux Platform Base and Applications Installation and Commissioning, Revision 03.10, February 09, 2009, Document Number NN43001-315*

[8] *Communication Server 1000 Unified Communications Management Common Services Fundamentals, Revision: 03.04, September 28, 2009, Document Number NN43001-116*

Product information for TeleMatrix 3302IP products can be found at

www.TeleMatrix.net

10. Appendix

This section is to help user provisioning the clock synchronization of a network of CS1000 systems used under test. This will create the PRI trunk synchronization between 2 CS1000 under test in Figure 1; Main and Emulated PSTN systems. In this example, the emulated PSTN will have clock controller card. Therefore, these provisioning steps below will only apply to the emulated PSTN CS1000 system only. The steps below can be accomplished by login to the Call Server and using command line interface on overlay 73.

Defining system timers and clock controller parameters

The programming example below shows how to define system timers and clock controller parameters using LD 73. For all other fields not listed in the example press RETURN to use default values.

Prompt	Response	Description
REQ	CHG	Change data.
TYPE	DDB	Digital Data Block
MGCLK	4 0 1	Card slot number for Media Gateway 4 0
PREF	1	Card number of PRI/DTI/SILC or DTI2/PRI2/SILC containing the primary clock reference.
SREF	1	Card number of PRI/DTI/SILC or DTI2/PRI2/SILC containing the primary clock reference.

Enabling T1 QSIG Service

Enable TMDI card

The example below shows how to enable TMDI card using LD 48.

```
>ld 48
LNK000
.enl tmdi 4 0 1
```

OK

Enable Clock Controller

The example below shows how to enable clock controller using LD 60.

```
>ld 60
DTI000
.enl cc 4 0
```

.OK

Enable PRI loop

The example below shows how to enable PRI loop using LD 60.

```
>ld 60
DTI000
.enll 10
```

OK

.

Enable D-Channel

The D-Channel may not automatically come up. The example below shows how to enable PRI D-channel using LD 96.

```
>ld 96
DCH000
.enl dch 10
```

.

DCH: 10 EST CONFIRM TIME: 19:38:44 30/09/2009

DCH 10 UIPE_OMSG CC_RESTART_REQ REF 00000000 CH 0 TOD 19:38:44 CK
E0DAF978
TYPE: ALL CHANNEL

DCH 10 UIPE_IMSG CC_RESTART_CONF REF 00008000 TOD 19:38:44 CK E0DAF9C2
TYPE: ALL CHANNEL

©2010 Avaya Inc. All Rights Reserved.

Avaya and the Avaya Logo are trademarks of Avaya Inc. All trademarks identified by ® and ™ are registered trademarks or trademarks, respectively, of Avaya Inc. All other trademarks are the property of their respective owners. The information provided in these Application Notes is subject to change without notice. The configurations, technical data, and recommendations provided in these Application Notes are believed to be accurate and dependable, but are presented without express or implied warranty. Users are responsible for their application of any products specified in these Application Notes.

Please e-mail any questions or comments pertaining to these Application Notes along with the full title name and filename, located in the lower right corner, directly to the Avaya DevConnect Program at devconnect@avaya.com.