



Avaya Solution & Interoperability Test Lab

Application Notes for Belgacom SIP Trunk Service and Avaya IP Office 7.0 – Issue 1.0

Abstract

These Application Notes describe the procedures for configuring Session Initiation Protocol (SIP) trunking between the Belgacom SIP Trunk Service and Avaya IP Office.

The Belgacom SIP Trunk Service provides PSTN access via a SIP trunk connected to the Belgacom Voice Over Internet Protocol (VoIP) network as an alternative to legacy Analogue or digital trunks. This approach generally results in lower cost for the enterprise. Belgacom is a member of the Avaya DevConnect Service Provider program.

Information in these Application Notes has been obtained through DevConnect compliance testing and additional technical discussions. Testing was conducted via the DevConnect Program at the Avaya Solution and Interoperability Test Lab.

1. Introduction

These Application Notes describe the procedures for configuring Session Initiation Protocol (SIP) trunking between the Belgacom SIP Trunk Service and Avaya IP Office. Belgacom SIP Trunking service provides PSTN access via a SIP trunk connected to the Belgacom network as an alternative to legacy Analogue or digital trunks. This approach generally results in lower cost for the enterprise.

2. General Test Approach and Test Results

The general test approach was to configure a simulated enterprise site using Avaya IP Office to connect to the Belgacom SIP Trunking service. This configuration (shown in **Figure 1**) was used to exercise the features and functionality listed in **Section 2.1**.

2.1. Interoperability Compliance Testing

A simulated enterprise site with Avaya IP Office was connected to the Belgacom SIP Trunking service. To verify SIP trunking interoperability the following features and functionality were exercised during the interoperability compliance test.

- Incoming PSTN calls to various phone types.
- Phone types included H.323, digital, and Analogue telephones at the enterprise. All inbound PSTN calls were routed to the enterprise across the SIP trunk from the service provider.
- Outgoing PSTN calls from various phone types.
- Phone types included H.323, digital, and Analogue telephones at the enterprise. All outbound PSTN calls were routed from the enterprise across the SIP trunk to the service provider.
- Inbound and outbound PSTN calls to/from Phone Manager Lite clients.
- Various call types including: local, long distance, international, toll free(outbound)and directory assistance
- Codecs G.729A and G.711A
- Caller ID presentation and Caller ID restriction
- DTMF transmission using RFC 2833
- Voicemail navigation for inbound and outbound calls
- User features such as hold and resume, transfer, and conference
- Off-net call forwarding and twinning

2.2. Test Results

Interoperability testing of the sample configuration was completed with successful results for the Belgacom SIP Trunk Service with the following observations:

- No inbound toll free numbers were tested, however routing of inbound DID numbers, and the relevant number translation, was successfully tested.
- T.38 Fax is not supported so Fax was tested using G.711 pass-through mode

2.3. Support

For technical support on Belgacom products please contact the Belgacom authorized representative at: ippbx.certification@belgacom.be

3. Reference Configuration

Figure 1 illustrates the test configuration. The test configuration shows an enterprise site connected to the Belgacom SIP Trunking service. Located at the enterprise site is an Avaya IP Office 500 v2. Endpoints include an Avaya 1600 Series IP Telephone (with H.323 firmware), an Avaya 2420 Digital Telephone, an Avaya Analogue Telephone and fax machine. The site also has a Windows 2003 Server running Avaya IP Office Manager to configure the Avaya IP Office. For security purposes, any public IP addresses or PSTN routable phone numbers used in the compliance test are not shown in these Application Notes. Instead, public IP addresses have been replaced with private addresses and all phone numbers have been replaced with arbitrary numbers that bear no relevance to the test configuration.

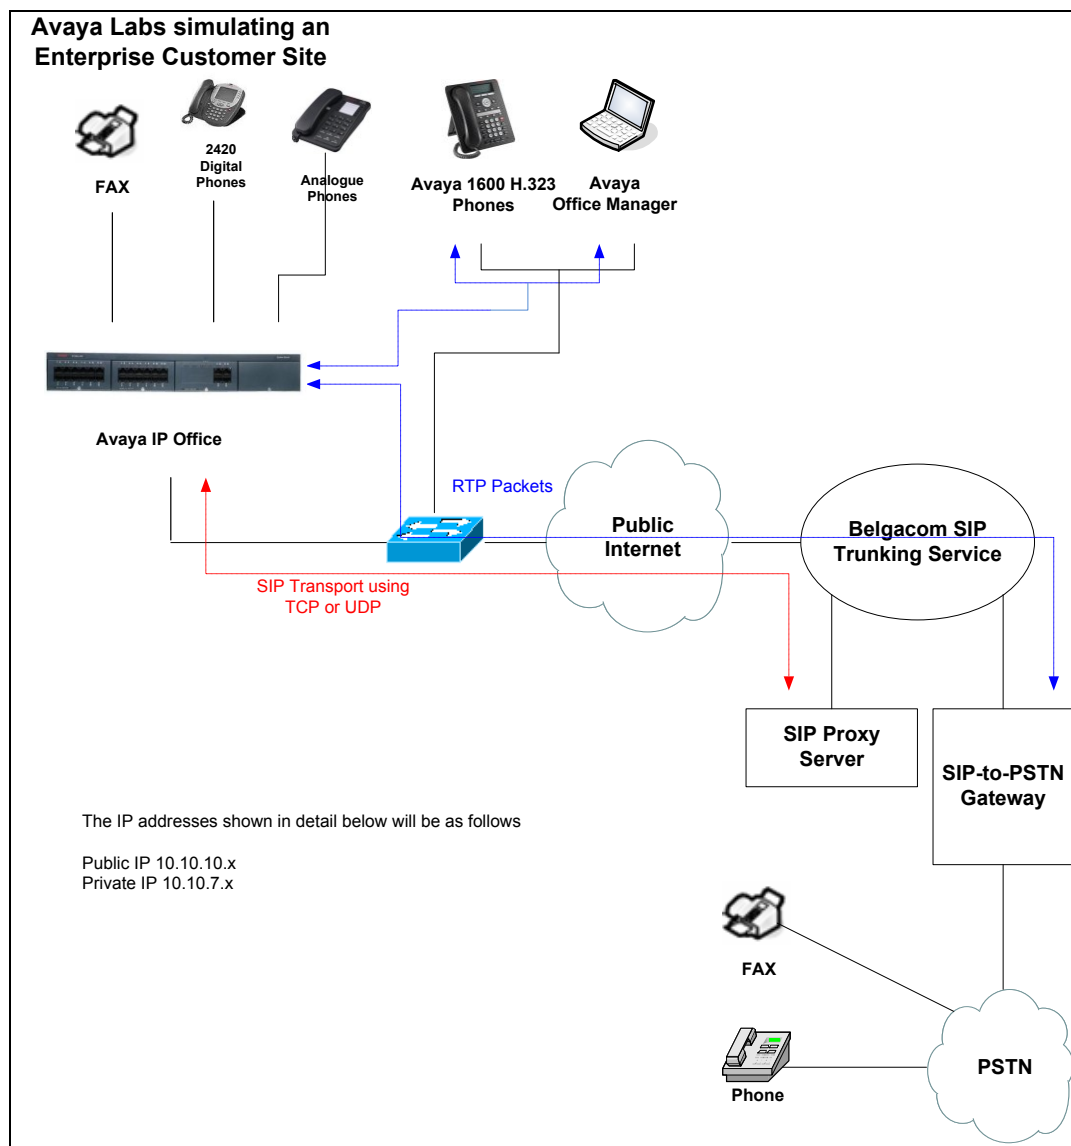


Figure 1: Belgacom SIP Trunking Solution to Avaya IP Office Topology

IP Office was configured to connect to a static IP address at the service provider allowing the SIP line on IP Office to Register with Belgacom. For the purposes of the compliance test, users dialed a short code of 9 + N digits to send digits across the SIP trunk to Belgacom. The short code of 9 is stripped off by Avaya IP Office but the remaining N digits were sent with the SIP domain provided by Belgacom added.

In an actual customer configuration, the enterprise site may also include additional network components between the service provider and IP Office such as a session border controller or data firewall. A complete discussion of the configuration of these devices is beyond the scope of these Application Notes, however, it should be noted that SIP and RTP traffic between the service provider and IP Office must be allowed to pass through these devices. Belgacom sends SIP signaling from one IP address, however, RTP traffic may originate from a different IP address and ports which may vary from customer to customer. Customers will need to work with Belgacom to determine the proper IP addresses and ports require access the Belgacom network.

4. Equipment and Software Validated

The following equipment and software were used for the sample configuration provided:

Equipment	Software
Avaya IP Office 500 V2	7.0(3)
Avaya 1620 Phone (H.323)	1.220
Avaya 2420 Digital Phone	NA
Avaya 98390 Analogue Phone	NA
Belgacom SIP Trunking	IMS Solution: Alcatel-Lucent IMS7.6 ISC: Release 6.2.1 Application Server: Broadworks Release 16sp1

5. Configure Avaya IP Office

This section describes the IP Office configuration necessary to support connectivity to the Belgacom SIP Trunking service. IP Office is configured through the IP Office Manager PC application. From a PC running the IP Office Manager application, select **Start→Programs→IP Office→Manager** to launch the application. Navigate to **File→Open Configuration**, select the proper Avaya IP Office system from the pop-up window, and log in with the appropriate credentials (Not Shown). A management window will appear similar to the one in the next section. All the IP Office configurable components are shown in the left pane known as the Navigation Pane. The pane on the right is the Details Pane. These panes will be referenced throughout the IP Office configuration. All licensing and feature configuration that is not directly related to the interface with the service provider (such as twinning) is assumed to already be in place.

5.1. Verify System Capacity

Navigate to **License → SIP Trunk Channels** in the Navigation Pane. In the **Licences** tab verify that the **License Status** is **Valid** and that the number of Instances is sufficient to support the number of SIP trunk channels provisioned by Belgacom.


The screenshot displays the IP Office Manager application interface. On the left, the 'IP Offices' navigation pane lists various components, including CCR, CCC, and CTI. The main area on the right is titled 'SIP Trunk Channels' and contains a 'Licences' tab. This tab shows the following configuration details:

Field	Value
Licence Key	unXMBE6x9dJKGKJ73uEpof7JrpF4smme
Licence Type	SIP Trunk Channels
Licence Status	Valid
Instances	255
Expiry Date	Never


A red rectangular box highlights the 'Licence Type', 'Licence Status', and 'Instances' fields, indicating the key verification points for system capacity.

5.2. LAN2 Settings

In the sample configuration, the LAN2 port was used to connect the IP Office to the external intranet. To access the LAN2 settings, first navigate to **System → GSSCP_IPO7** in the Navigation Pane where GSSCP_IPO7 is the name of the IP Office system. Navigate to the **LAN2 → LAN Settings** tab in the details plane. The **IP Address** and **IP Mask** fields are set from values shown in **Figure 1**. All other parameters should be set according to customer requirements.

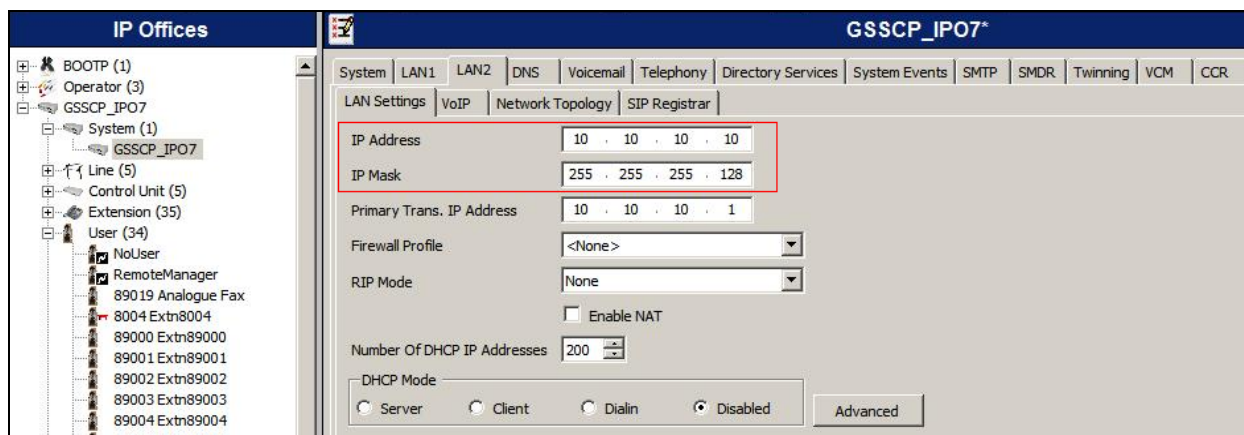

On the **VoIP** tab in the Details Pane, check the **SIP Trunks Enable** box to enable the configuration of SIP trunks. The **RTP Port Number Range** can be customized to a specific range of receive ports for the RTP media. Based on this setting, IP Office would request RTP media be sent to a UDP port in the configurable range for calls using LAN2. IP Office can also be configured to mark the Differentiated Services Code Point (DSCP) in the IP Header with specific values to support Quality of Services policies for both signaling and media. The **DSCP** field is the value used for media and the **SIG DSCP** is the value used for signaling. The specific values used for the compliance test are shown in the example below. All other parameters should be set according to customer requirements.

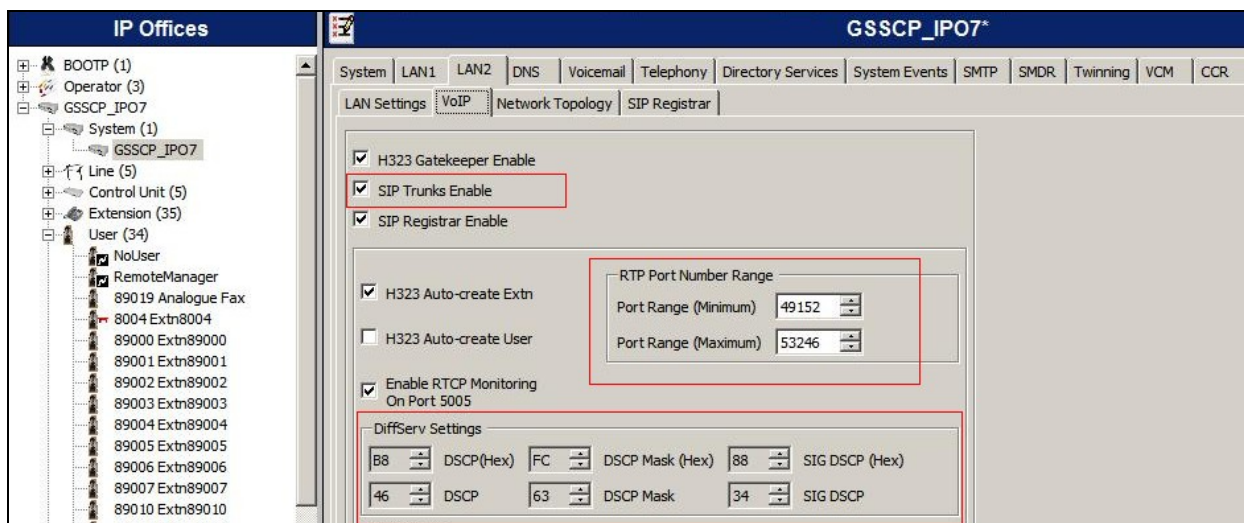

5.3. System Telephony Settings

Navigate to the **Telephony**→**Telephony** Tab on the Details Pane. Set the **Automatic Codec Preference** for the default codec to be used for intra-enterprise traffic. Choose the **Companding Law** typical for the enterprise location. For Europe, **ALAW** is used. Uncheck the **Inhibit Off-Switch Forward/Transfer** box to allow call forwarding and call transfer to the PSTN via the service provider across the SIP trunk.

The screenshot displays the Avaya IP Office configuration interface for the 'GSSCP_IPO7' system. The 'Telephony' tab is selected. The left-hand pane shows the system hierarchy under 'IP Offices'. The main configuration area includes sections for 'Analogue Extensions' and 'Companding Law'. The 'Automatic Codec Preference' is set to 'G.711 ALAW 64K'. The 'Companding Law' section shows 'ALAW' and 'ALAW Line' selected. The 'Inhibit Off-Switch Forward/Transfer' checkbox is unchecked.

5.4. System Twinning Settings

Navigate to the **Twining** tab, check the box labeled **Send original calling party information for Mobile Twinning**. With this setting, Avaya IP Office will send the original calling party number to the twinned phone in the SIP From header (not the associated desk phone number) for calls that originate from the PSTN and are extended to the twinned mobile.. For inbound PSTN calls to a twinned enabled phone, IP Office will continue to send the associated host phone number in the SIP From header (used for the caller display). This setting only affects twinning and does not impact the messaging of other redirected calls such as forwarded calls. If this box is checked, it will also override any setting of the **Send Caller ID** parameter on the SIP line (Section 4.4).

The screenshot displays the Avaya IP Office configuration interface for the 'GSSCP_IPO7' system, specifically the 'Twining' tab. The 'Send original calling party information for Mobile Twinning' checkbox is checked. The 'Calling party information for Mobile Twinning' field is visible below the checkbox.

5.5. Administer SIP Line

A SIP line is needed to establish the SIP connection between IP Office and the Belgacom SIP Trunking service. To create a SIP line, begin by navigating to **Line** in the Navigation Pane. Right-click and select **New→SIP Line** (not shown). On the **SIP Line** tab in the Details Pane, configure the parameters below to connect to the SIP Trunking service.

- Set the **ITSP Domain Name** to the domain name provided by Belgacom.
- Set **Send Caller ID** to **None**. This parameter determines how the calling party number is sent in the SIP messaging for twinning if the box labeled **Send original calling party information for Mobile Twinning** is unchecked in **Section 5.4**. This parameter was set to **None** and the box in **Section 5.4** was checked.
- Ensure the **In Service** box is checked.
- Default values may be used for all other parameters.

The screenshot shows the IP Office configuration interface. On the left is the 'IP Offices' navigation pane with a tree structure including BOOTP (1), Operator (3), TPhelan_Branch1, System (1), TPhelan_Branch1, Line (5) (with sub-items 5, 6, 13, 14, 18), Control Unit (5), Extension (35), User (34), HuntGroup (4), Short Code (68), Service (0), RAS (1), Incoming Call Route (12), WanPort (0), Directory (0), Time Profile (0), and Firewall Profile (1). The main pane is titled 'SIP Line - Line 18' and contains several tabs: SIP Line, Transport, SIP URI, VoIP, T38 Fax, and SIP Credentials. The 'SIP Line' tab is active. It contains the following fields and controls:

- Line Number: 18
- ITSP Domain Name: sipconnect.hipcom.co.uk
- In Service: ☒
- Use Tel URI: ☐
- Check OOS: ☒
- Call Routing Method: To Header
- Originator number for forwarded and twinning calls: (empty field)
- Prefix: (empty field)
- National Prefix: 0
- Country Code: 44
- International Prefix: 00
- Send Caller ID: None
- Association Method: By Source IP address
- REFER Support: ☒
- Incoming: Auto
- Outgoing: Auto

Select the **Transport** tab and set the following:

- Set **ITSP Proxy Address** to the IP address of the Belgacom SIP proxy.
- Set **Layer 4 Protocol** to **UDP**.
- Set **Send Port** and **Listen Port** to **5060**.
- Set the **Use Network Topology Info** to the appropriate interface, in this case **LAN 2**.

The screenshot shows the 'SIP Line - Line 18*' configuration window with the 'Transport' tab selected. A red box highlights the 'ITSP Proxy Address' field (10.10.10.20) and the 'Network Configuration' section. The 'Network Configuration' section includes 'Layer 4 Protocol' set to 'UDP', 'Send Port' set to '5060', 'Use Network Topology Info' set to 'LAN 2', and 'Listen Port' set to '5060'. Below this, 'Explicit DNS Server(s)' are set to '0 . 0 . 0 . 0' and '0 . 0 . 0 . 0'. The 'Calls Route via Registrar' checkbox is checked. The 'Separate Registrar' field is empty.

After the SIP line parameters are defined, each SIP URI that IP Office will accept on this line must be created. To create a SIP URI entry, first select the **SIP URI** tab. Click the **Add** button and the **New Channel** area will appear at the bottom of the pane.

The screenshot shows the 'SIP Line - Line 18*' configuration window with the 'SIP URI' tab selected. The 'SIP URI' tab is highlighted. The 'Add...' button is highlighted with a red box. Below the 'Add...' button are 'Remove' and 'Edit...' buttons. The main area shows a table with columns: Channel, Groups, Via, Local URI, Contact, Display Name, PAI, Credential, and Max Calls.

For the compliance test, a single SIP URI entry was created that matched any number assigned to an IP Office user. The entry was created with the parameters shown below.

- Set **Local URI**, **Contact**, **Display Name** and **PAI** to **Use Internal Data**. This setting allows calls on this line for any SIP URI that matches the number set in the **SIP** tab of any **User** as shown in **Section 5.7**.
- For **Registration**, select **0: None** from the pull-down menu since this configuration does not use SIP registration.
- Associate this line with an incoming line group by entering a line group number in the **Incoming Group** field. This line group number will be used in defining incoming call routes for this line. Similarly, associate the line to an outgoing line group using the **Outgoing Group** field. The outgoing line group number is used in defining short codes for routing outbound traffic to this line. For the compliance test, a new incoming and outgoing line group **18** was defined that was associated to a single line (line 18).
- Set **Max Calls per Channel** to the number of simultaneous SIP calls that are allowed using this SIP URI pattern.

Edit Channel

Via: 10.10.10.20

Local URI: Use Internal Data

Contact: Use Internal Data

Display Name: Use Internal Data

PAI: Use Internal Data

Registration: 0: <None>

Incoming Group: 18

Outgoing Group: 18

Max Calls per Channel: 10

OK

Cancel

Select the **VoIP** tab to set the Voice over Internet Protocol parameters of the SIP line. Set the parameters as shown below:

- Configure the **Compression Mode** with the **Advanced** button to specify the preferred order of the offered codecs. Select the codecs and their order based on the needs of the customer. Click the box next to the codec with the highest preference first, followed by the second preference, and so on. For the compliance test, **G.711 ALAW 64K** was selected first followed by **G.729(a) 8K CS-ACELP**.
- Set the **DTMF Support** field to **RFC2833**. This directs Avaya IP Office to send DTMF tones using RTP events messages as defined in RFC2833.
- Uncheck the **VoIP Silence Suppression** box.
- Select the **G.711** option for **Fax Transport Support**.
- Check the **Re-invite Supported** box to allow for codec re-negotiation in cases where the target of the incoming call or transfer does not support the codec originally negotiated on the trunk.
- Default values may be used for all other parameters.

The screenshot displays the configuration for 'SIP Line - Line 18'. On the left, a tree view shows the hierarchy: IP Offices > BOOTP (1) > Operator (3) > GSSCP_IPO7 > System (1) > GSSCP_IPO7 > Line (5) > 18. The main panel has tabs for SIP Line, Transport, SIP URI, VoIP, T38 Fax, and SIP Credentials. The 'VoIP' tab is active. Under 'Compression Mode', the 'Advanced' button is clicked, showing a list of codecs: G.711 ALAW 64K (checked), G.729(a) 8K CS-ACELP (checked), G.711 ULAW 64K (unchecked), and G.723.1 6K3 MP-MLQ (unchecked). The 'DTMF Support' dropdown is set to 'RFC2833'. The 'Fax Transport Support' dropdown is set to 'G.711'. The 'Call Initiation Timeout (s)' is set to 4. On the right, the 'VoIP Silence Suppression' checkbox is unchecked, and the 'Re-invite Supported' checkbox is checked. The 'Use Offerer's Preferred Codec' and 'Codec Lockdown' checkboxes are also unchecked.

Note: It is advisable at this stage to save the configuration as described in **Section 5.10** to make the Line Group ID available in **Section 5.5**.

5.6. Short Codes

Define a short code to route outbound traffic to the SIP line. To create a short code, right-click **Short Code** in the Navigation Pane and select **New**. On the **Short Code** tab in the Details Pane, configure the parameters as shown below.

- In the **Code** field, enter the dial string which will trigger this short code, followed by a semi-colon. In this case, **9N;**. This short code will be invoked when the user dials 9 followed by any number
- Set **Feature** to **Dial**. This is the action that the short code will perform
- Set **Telephone Number** to **N"@imsu.belgacom.be"**. This field is used to construct the Request URI and To headers in the outgoing SIP INVITE message. The value **N** represents the number dialed by the user
- Set the **Line Group Id** to the outgoing line group number defined on the **SIP URI** tab on the **SIP Line** in **Section 5.5**. This short code will use this line group when placing the outbound call

Click the **OK** button (not shown).

The screenshot shows a software interface for configuring short codes. On the left, a list of IP Offices is visible, each with a red 'X' icon and a code (e.g., *30, *31, *32*N#, *33*N#, *34N;, *35*N#, *36, *37*N#, *38*N#, *39, *40, *41). The main area on the right is titled 'Short Code' and contains the following fields:


- Code**: 9N;;
- Feature**: Dial (selected from a dropdown)
- Telephone Number**: N"@imsu.belgacom.be"
- Line Group Id**: 18 (selected from a dropdown)
- Locale**: (empty dropdown)
- Force Account Code**: ☐

5.7. User

Configure the SIP parameters for each User that will be placing and receiving calls via the SIP line defined in **Section 5.5**. To configure these settings, first navigate to **User** in the Navigation Pane. Select the **SIP** tab in the Details Pane (not shown). The values entered for the **SIP Name** and **Contact** fields are used as the user part of the SIP URI in the From header for outgoing SIP trunk calls, and allows matching of the SIP URI for incoming calls without having to enter this number as an explicit SIP URI for the SIP line (**Section 5.5**). As such, these fields should be set to one of the DID numbers assigned to the enterprise from Belgacom.

In the example below, the DID number **+3211111111** is used. The **SIP Display Name (Alias)** parameter can optionally be configured with a descriptive name. Click the **OK** button (not shown).

Note: The **Contact** field must be in E.164 format for the caller ID on the called phone to display properly.

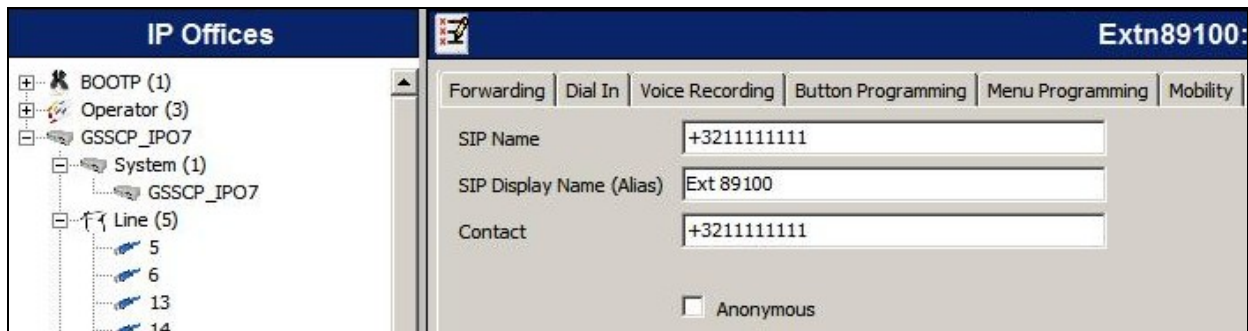

The screenshot displays the 'IP Offices' configuration window. On the left, a tree view under 'IP Offices' shows a hierarchy: 'BOOTP (1)' > 'Operator (3)' > 'GSSCP_IPO7' > 'System (1)' > 'GSSCP_IPO7' > 'Line (5)' > '5', '6', '13', '14'. The right pane is titled 'Ext 89100:' and contains several tabs: 'Forwarding', 'Dial In', 'Voice Recording', 'Button Programming', 'Menu Programming', and 'Mobility'. The 'Dial In' tab is active, showing three text input fields: 'SIP Name' with the value '+3211111111', 'SIP Display Name (Alias)' with the value 'Ext 89100', and 'Contact' with the value '+3211111111'. Below these fields is an unchecked checkbox labeled 'Anonymous'.

5.8. Incoming Call Routing

An incoming call route maps an inbound DID number on a specific line to an internal extension. To create an incoming call route, right-click **Incoming Call Routes** in the Navigation Pane and select **New**. On the **Standard** tab of the Details Pane, enter the parameters as shown below:

- Set the **Bearer Capability** to **Any Voice**
- Set the **Line Group Id** to the incoming line group of the SIP line defined in **Section 5.5**.
- Set the **Incoming Number** to the incoming DID that this route should match on.
Matching is right to left
- Default values can be used for all other fields

The screenshot shows the 'IP Offices' configuration window. On the left is a navigation tree with 'Line (5)' expanded, showing lines 5, 6, 13, 14, and 18. Line 18 is selected. On the right is the 'Details Pane' with the 'Standard' tab active. The fields are configured as follows:

Field	Value
Bearer Capability	Any Voice
Line Group Id	18
Incoming Number	+3211111111
Incoming Sub Address	
Incoming CLI	
Locale	
Priority	2 - Medium
Tag	
Hold Music Source	System Source

On the **Destinations** tab, select the destination extension from the pull-down menu of the **Destination** field. Click the **OK** button (not shown). In this example, incoming calls to +3211111111 on line 18 are routed to extension 89100.

The screenshot shows the 'Destinations' tab of the configuration window. It contains a table with two columns: 'TimeProfile' and 'Destination'. The 'Default Value' row is selected, and the 'Destination' field is a pull-down menu showing '89100 Extn89100'.


TimeProfile	Destination
Default Value	89100 Extn89100

5.9. SIP Options


IP Office sends SIP OPTIONS messages periodically to determine if the SIP connection is active. The rate at which the messages are sent is determined by the combination of the **Binding Refresh Time** (in seconds) set on the **Network Topology** tab in **Section 5.2** and the **SIP_OPTIONS_PERIOD** parameter (in minutes) that can be set on the **Source Number** tab of the **noUser** user. The OPTIONS period is determined in the following manner:

- If no **SIP_OPTIONS_PERIOD** parameter is defined and the **Binding Refresh Time** is 0, then the default value of 44 seconds is used
- To establish a period less than 44 seconds, do not define a **SIP_OPTIONS_PERIOD** parameter and set the **Binding Refresh Time** to a value less than 44 secs. The OPTIONS message period will be equal to the **Binding Refresh Time**
- To establish a period greater than 44 seconds, a **SIP_OPTIONS_PERIOD** parameter must be defined. The **Binding Refresh Time** must be set to a value greater than 42 secs. The OPTIONS message period will be the smaller of the **Binding Refresh Time** and the **SIP_OPTIONS_PERIOD**


To configure the **SIP_OPTIONS_PERIOD** parameter, navigate to **User → NoUser** in the Navigation Pane. Select the **Source Numbers** tab in the Details Pane. Click the **Add** button.

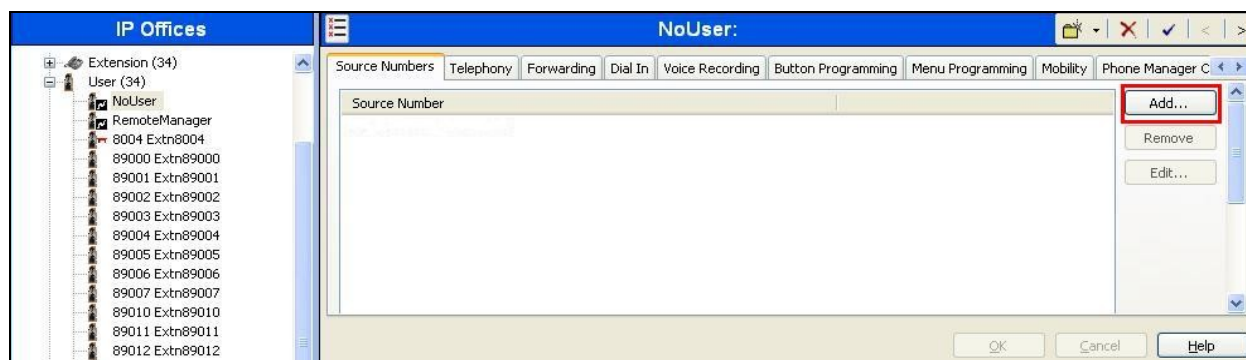

At the bottom of the subsequent Details Pane, the **Source Number** field will appear. Enter **SIP_OPTIONS_PERIOD=X**, where **X** is the desired value in minutes. Click **OK**.



The **SIP_OPTIONS_PERIOD** parameter will appear in the list of Source Numbers as shown below. For the compliance test, an OPTIONS period of 2 minutes was desired. The **Binding Refresh Time** was set to **300** seconds (5 minutes) in **Section 5.2** and the **SIP_OPTIONS_PERIOD** was set to **2** minutes. Avaya IP Office chooses the OPTIONS period as the smaller of these two values (e.g. 2 minutes). Click the **OK** button (not shown).

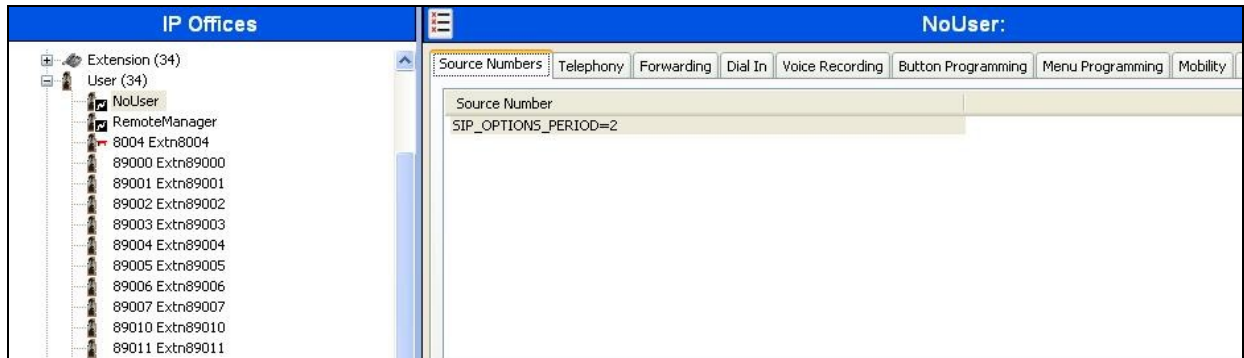

5.10. Save Configuration

Navigate to **File → Save Configuration** in the menu bar at the top of the screen to save the configuration performed in the preceding sections.

6. Belgacom SIP Trunking Service Configuration

Belgacom is responsible for the configuration of the SIP Trunking service. The customer will need to provide the public IP address or FQDN used to reach the IP Office at the enterprise.

Belgacom will provide the customer the necessary information to configure the SIP connection to the SIP Trunking service including:

- IP address of SIP Trunking SIP proxy
- Network SIP Domain
- Supported codecs
- DID numbers
- All IP addresses and port numbers used for signaling or media that will need access to the enterprise network through any security devices

7. Verification Steps

This section includes steps that can be used to verify that the configuration has been done correctly.

7.1. SIP Trunk status

The status of the SIP trunk can be verified by opening the System Status application. This is found under **Start → All Programs → IP Office → System Status**. From the left hand menu expand **Trunks** and choose the SIP line (18 in this instance). The status window will show the status as being idle and time in state if the Trunk is operational.

The screenshot displays the 'SIP Trunk Summary' window. On the left is a navigation menu with options: Alarms (1), Extensions (18), Trunks (5), Line: 13, Line: 18 (selected), Active Calls, Resources, Voicemail, and IP Networking. The main area shows the following configuration:

- Peer Domain Name: ims.belgacom.be
- Resolved Address: 10.10.10.20
- Line Number: 18
- Number of Administered Channels: 10
- Number of Channels in Use: 0
- Administered Compression: Auto
- Silence Suppression: Off
- SIP Trunk Channel Licences: Unlimited
- SIP Trunk Channel Licences in Use: 0
- SIP Device Features: (indicated by a green circle and 0%)

Below the configuration is a table with 15 columns: Channel Number, URI Group, Call Ref, Current State, Time in State, Remote RTP Address, Codec, Connection Type, Caller ID or Dialed Digits, Other Party on Call, Direction of Call, Round Trip Delay, Receive Jitter, Receive Packet Loss Fraction, Transmit Jitter, and Transmit Packet Loss Fraction. The table contains 10 rows, all showing 'Idle' in the 'Current State' column and '00:51:24' in the 'Time in State' column.

Channel Number	URI Group	Call Ref	Current State	Time in State	Remote RTP Address	Codec	Connection Type	Caller ID or Dialed Digits	Other Party on Call	Direction of Call	Round Trip Delay	Receive Jitter	Receive Packet Loss Fraction	Transmit Jitter	Transmit Packet Loss Fraction
1			Idle	00:51:24											
2			Idle	00:51:24											
3			Idle	00:51:24											
4			Idle	00:51:24											
5			Idle	00:51:24											
6			Idle	00:51:24											
7			Idle	00:51:24											
8			Idle	00:51:24											
9			Idle	00:51:24											
10			Idle	00:51:24											

8. Conclusion

These Application Notes describe the configuration necessary to connect IP Office 7.0 to Belgacom SIP Trunk Service. Belgacom SIP Trunk Service is a SIP-based Voice over IP solution providing businesses a flexible, cost-saving alternative to traditional hardwired telephony trunks.

9. Additional References

This section references the documentation relevant to these Application Notes. Additional Avaya product documentation is available at <http://support.avaya.com>.

[1] *IP Office 7 Documentation CD*, 4th May 2011.

[2] *IP Office Installation*, Document number15-601042, 22nd May 2011.

[3] *IP Office Manager*, Document number15-601011, 22nd May 2011.

[4] *System Status Application*, Document number15-601758, 12th February 2010.

Product documentation for the Belgacom SIP Trunking service is available from the local authorized Belgacom representative.

©2011 Avaya Inc. All Rights Reserved.

Avaya and the Avaya Logo are trademarks of Avaya Inc. All trademarks identified by ® and ™ are registered trademarks or trademarks, respectively, of Avaya Inc. All other trademarks are the property of their respective owners. The information provided in these Application Notes is subject to change without notice. The configurations, technical data, and recommendations provided in these Application Notes are believed to be accurate and dependable, but are presented without express or implied warranty. Users are responsible for their application of any products specified in these Application Notes.

Please e-mail any questions or comments pertaining to these Application Notes along with the full title name and filename, located in the lower right corner, directly to the Avaya DevConnect Program at devconnect@avaya.com.