



Avaya Solution & Interoperability Test Lab

Application Notes for Plantronics Spokes Software and Plantronics Voyager Legend UC Wireless Headset with Avaya one-X® Communicator - Issue 1.0

Abstract

These Application Notes describe the configuration steps required to integrate the Plantronics Spokes Software and Plantronics Voyager Legend UC Wireless Headset with Avaya one-X® Communicator. Plantronics Spokes Software enables the integrated call control features for Voyager Legend UC, including call answer/end, auto-answer, and synchronized mute with Avaya one-X® Communicator. Voyager Legend UC uses Bluetooth USB adapter to connect to the PC running one-X Communicator.

Information in these Application Notes has been obtained through DevConnect compliance testing and additional technical discussions. Testing was conducted via the DevConnect Program at the Avaya Solution and Interoperability Test Lab.

1. Introduction

These Application Notes describe the configuration steps required to integrate the Plantronics Spokes Software and Plantronics Voyager Legend UC Wireless Headset with Avaya one-X® Communicator. Plantronics Spokes Software enables the integrated call control features for Voyager Legend UC, including call answer/end, auto-answer, and synchronized mute with Avaya one-X® Communicator. Voyager Legend UC uses Bluetooth USB adapter to connect to the PC running one-X Communicator.

Refer to the appropriate Plantronics documentation listed in **Section 10** for additional product information.

2. General Test Approach

Avaya's formal testing and Declaration of Conformity is provided only on the headsets/handsets that carry the Avaya brand or logo. Avaya may conduct testing of non-Avaya headset/handset to determine interoperability with Avaya phones. However, Avaya does not conduct the testing of non-Avaya headsets/handsets for: Acoustic Pressure, Safety, Hearing Aid Compliance, EMC regulations, or any other tests to ensure conformity with safety, audio quality, long-term reliability or any regulation requirements. As a result, Avaya makes no representations whether a particular non-Avaya headset will work with Avaya's telephones or with a different generation of the same Avaya telephone.

Since there is no industry standard for handset interfaces, different manufacturers utilize different handset/headset interfaces with their telephones. Therefore, any claim made by a headset vendor that its product is compatible with Avaya telephones does not equate to a guarantee that the headset will provide adequate safety protection or audio quality.

The interoperability compliance test included feature and serviceability testing. The feature testing focused on placing calls to and from one-X Communicator using the Plantronics Spokes Software and Plantronics Voyager Legend UC Wireless Headset and verifying 2-way audio. The type of calls made included calls to voicemail, to local stations, and to the PSTN.

The serviceability testing focused on verifying the usability of the Voyager Legend UC after restarting the one-X Communicator, disconnecting and reconnecting the headset, and rebooting the PC.

2.1. Interoperability Compliance Testing

All test cases were performed manually. The following features were verified:

- Placing calls to the voicemail system. Voice messages were recorded and played back to verify that the playback volume and recording level were good.
- Placing calls to local stations to verify two-way audio.
- Placing calls to the PSTN to verify two-way audio.
- Answering and ending calls using the call control button on the headset.
- Using the volume control buttons on the headset to adjust the playback volume.
- Using the mute button on the headset and on one-X Communicator to mute and un-mute the audio, including verifying that the mute status was accurately reflected on the headset and one-X Communicator.
- Smart Sensor technology that allows an incoming call to be answered simply by putting the headset on without pressing the call control button.

For the serviceability testing, the headsets were disconnected and reconnected to verify proper operation. The one-X Communicator application was also restarted for the same purpose. The desktop PC was also rebooted to verify that one-X Communicator and headset were operational when the PC came back into service.

2.2. Test Results

All test cases passed.

2.3. Support

For technical support and information on Plantronics Spokes Software and Plantronics Voyager Legend UC Wireless Headset, contact Plantronics at:

- Phone: 800-544-4660 (toll free)
+1 831-426-5858 (International)
- Website: http://www.plantronics.com/north_america/en_US/support/

3. Reference Configuration

Figure 1 illustrates the test configuration used to verify the Plantronics solution. The configuration consists of an Avaya S8300 Server running Avaya Aura® Communication Manager with an Avaya G450 Media Gateway providing connectivity to the PSTN via an ISDN-PRI trunk (not shown). Avaya Communication Manager Messaging was used as the voicemail system. The one-X Communicator and Plantronics Spokes Software were installed on a desktop PC. Plantronics Voyager Legend UC was connected to the desktop PC using a Plantronics Bluetooth USB adapter.

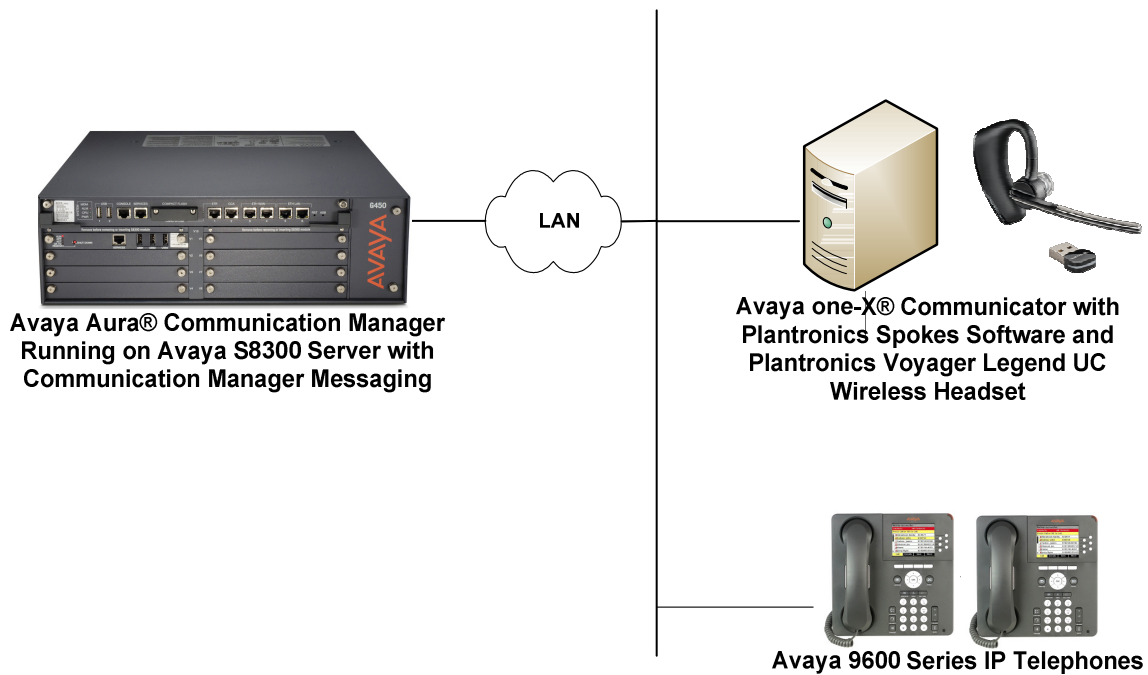


Figure 1: Avaya one-X Communicator with Plantronics Spokes Software and Plantronics Voyager Legend UC Wireless Headset

4. Equipment and Software Validated

The following equipment and software were used for the sample configuration provided:

Equipment	Software
Avaya S8300 Server with a G450 Media Gateway and Communication Manager Messaging	6.2 SP 5 (R016x.02.0.823.0 with Patch 20396)
Avaya one-X® Communicator on Microsoft Windows XP	6.1 SP 7 (6.1.7.04-SP7-39506))
Avaya 9600 Series IP Telephone	3.1 SP 5 (H.323)
Plantronics Spokes Software	2.8.24304.0
Plantronics Voyager Legend UC	USB Firmware 861, USB Adapter 61.08, Headset 44.00


5. Configure Avaya Aura® Communication Manager


This section covers the station configuration for one-X Communicator. The configuration is performed via the System Access Terminal (SAT) on Communication Manager.

Use the **add station** command to create a station for Avaya one-X Communicator. Set the **Type** field to the station type to be emulated. In this example, **9630** was used. Set the **Port** field to **IP** and configure a **Security Code** as that password to be used by one-X Communicator to log in. Set the **IP Softphone** field to **y**.


```
add station 40003                                     Page 1 of 5
                                                    STATION
Extension: 40003                                     Lock Messages? n          BCC: 0
  Type: 9630                                           Security Code: 40003      TN: 1
  Port: IP                                             Coverage Path 1:         COR: 1
  Name: Plantronics                                   Coverage Path 2:         COS: 1
                                                    Hunt-to Station:
STATION OPTIONS
  Location:                                           Time of Day Lock Table:
  Loss Group: 19                                     Personalized Ringing Pattern: 1
                                                    Message Lamp Ext: 40003
  Speakerphone: 2-way                               Mute Button Enabled? y
  Display Language: english                         Button Modules: 0
  Survivable GK Node Name:                           Media Complex Ext:
  Survivable COR: internal                           IP SoftPhone? Y
  Survivable Trunk Dest? y                           IP Video Softphone? n
                                                    Short/Prefixed Registration Allowed: default
                                                    Customizable Labels? y
```

6. Configure Avaya one-X® Communicator

After logging into one-X Communicator, click on  and then select **Settings → General Settings** as shown below.

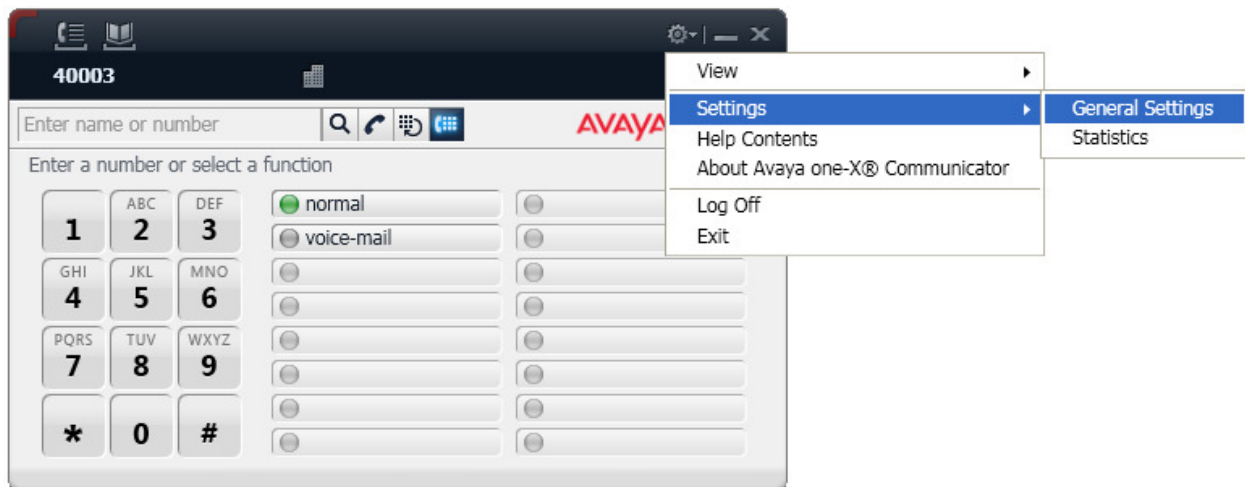

The Plantronics Voyager Legend UC headset is automatically detected by one-X Communicator. In the **General Settings** window, navigate to **Devices and Services** → **Audio** and then select the **Basic** tab as shown below. Set the **Microphone** and **Speaker** fields to *Plantronics BT300* as shown below. Click the **Test** button to verify that sound is heard through the audio device. Click **OK**. Restart one-X Communicator.

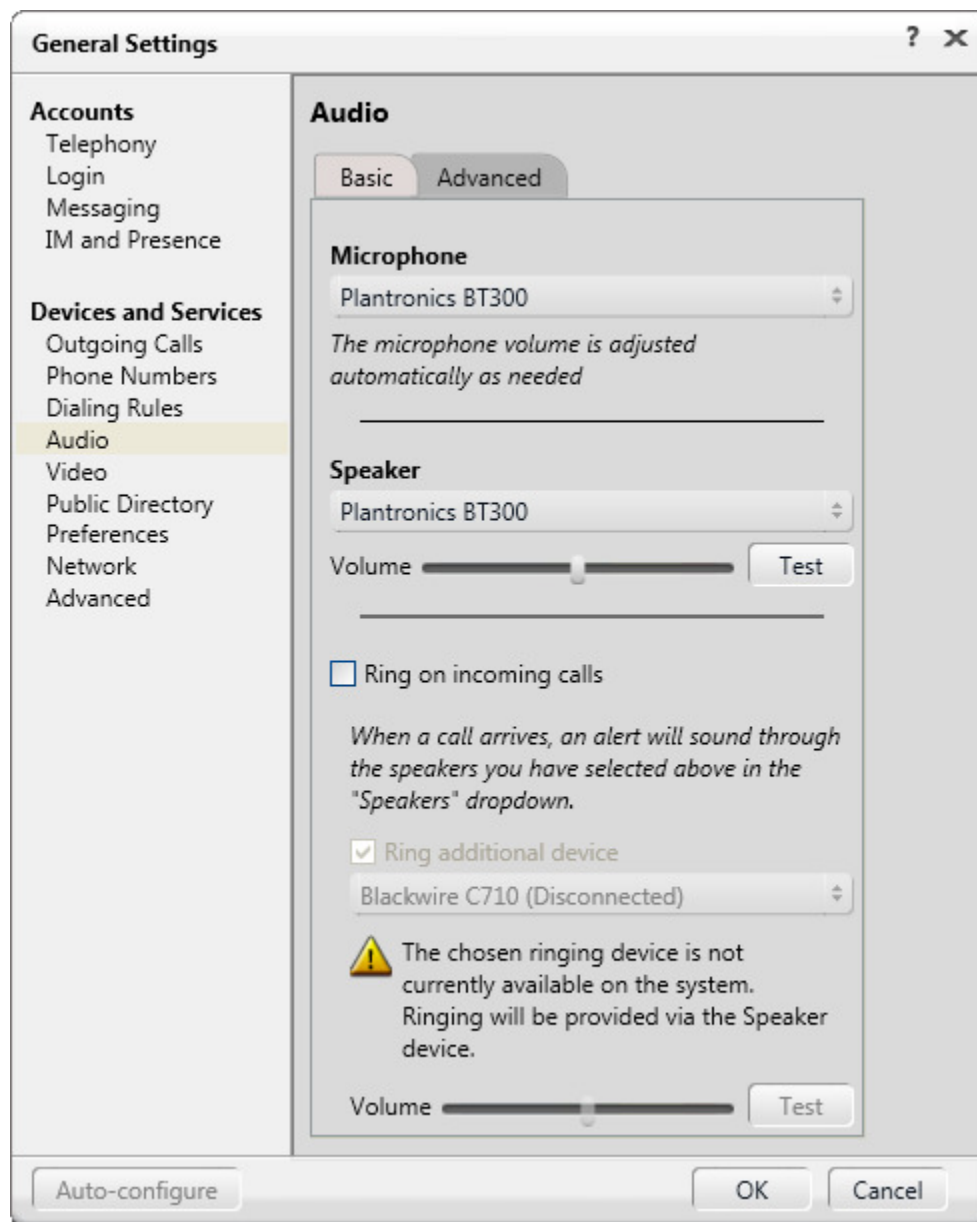

7. Install Plantronics Spokes Software and Plantronics Voyager Legend UC

The Plantronics Spokes software enables the Plantronics Voyager Legend UC to answer (and auto-answer), end, and mute calls using the call control button on the headset. Install the software on the PC running the one-X Communicator. Refer to [3] for additional information.

After the Spokes software is installed, connect the Plantronics Voyager Legend UC Bluetooth USB adapter to the desktop PC running one-X Communicator and turn on the headset. When the headset is paired via Bluetooth, the headset should announce, “PC Connected.” If the headset needs to be paired again, follow the instructions in [4].

8. Verification Steps

This section provides the tests that can be performed to verify proper installation and configuration of the Plantronics Spokes Software and Plantronics Voyager Legend UC with one-X Communicator.

1. Start the one-X Communicator application.
2. Place an incoming call to one-X Communicator from any local phone.
3. Answer the call using the call control button on the headset.
4. Verify two-way talk path between the headset and phone.
5. Disconnect the call from the headset using the call control button.
6. Verify that the call is properly disconnected.

9. Conclusion

These Application Notes describe the configuration steps required to integrate the Plantronics Spokes Software and Plantronics Voyager Legend UC with Avaya one-X® Communicator. All test cases were completed successfully.

10. Additional References

This section references the Avaya and Plantronics documentation that are relevant to these Application Notes.

The following Avaya product documentation can be found at <http://support.avaya.com>.

- [1] *Administering Avaya Aura® Communication Manager*, Release 6.2, Issue 7, December 2012, Document Number 03-300509.
- [2] *Administering Avaya one-X® Communicator User Reference*, October 2011.

The following Plantronics product documentation can be found at <http://www.plantronics.com>.

- [3] *Plantronics Spokes Software for Windows*, Build 2.8.24304.0.
- [4] *Plantronics Voyager Legend UC Bluetooth Headset and BT300M Bluetooth USB Adapter Quick Start Guide*.

©2013 Avaya Inc. All Rights Reserved.

Avaya and the Avaya Logo are trademarks of Avaya Inc. All trademarks identified by ® and ™ are registered trademarks or trademarks, respectively, of Avaya Inc. All other trademarks are the property of their respective owners. The information provided in these Application Notes is subject to change without notice. The configurations, technical data, and recommendations provided in these Application Notes are believed to be accurate and dependable, but are presented without express or implied warranty. Users are responsible for their application of any products specified in these Application Notes.

Please e-mail any questions or comments pertaining to these Application Notes along with the full title name and filename, located in the lower right corner, directly to the Avaya DevConnect Program at devconnect@avaya.com.