



Application Notes for Plantronics Hub Software and Plantronics Voyager 5200 UC Bluetooth Headset with Avaya Communicator for Windows - Issue 1.0

Abstract

These Application Notes describe the configuration steps required to integrate the Plantronics Hub Software and Plantronics Voyager 5200 UC Bluetooth Headset with Avaya Communicator for Windows. Plantronics Hub Software enables the integrated call control features for Voyager 5200 UC, including call answer/end and synchronized mute with Avaya Communicator for Windows. The Plantronics Hub Software was installed on the desktop PC running Avaya Communicator for Windows and connected via Bluetooth to a Plantronics BT600 Bluetooth USB Adapter connected to the desktop PC running Avaya Communicator for Windows.

Readers should pay attention to **Section 2**, in particular the scope of testing as outlined in **Section 2.1** as well as the observations noted in **Section 2.2** to ensure that their own use cases are adequately covered by this scope and results.

Information in these Application Notes has been obtained through DevConnect compliance testing and additional technical discussions. Testing was conducted via the DevConnect Program at the Avaya Solution and Interoperability Test Lab.

1. Introduction

These Application Notes describe the configuration steps required to integrate the Plantronics Hub Software and Plantronics Voyager 5200 UC Bluetooth Headset with Avaya Communicator for Windows. Plantronics Hub Software enables the integrated call control features for Voyager 5200 UC, including call answer/end and synchronized mute with Avaya Communicator for Windows. The Plantronics Hub Software was installed on the desktop PC running Avaya Communicator for Windows and connected via Bluetooth to a Plantronics BT600 Bluetooth USB Adapter connected to the desktop PC running Avaya Communicator for Windows.

Refer to the appropriate Plantronics documentation listed in **Section 10** for additional product information.

2. General Test Approach and Test Results

Avaya's formal testing and Declaration of Conformity is provided only on the headsets/handsets that carry the Avaya brand or logo. Avaya may conduct testing of non-Avaya headset/handset to determine interoperability with Avaya phones. However, Avaya does not conduct the testing of non-Avaya headsets/handsets for: Acoustic Pressure, Safety, Hearing Aid Compliance, EMC regulations, or any other tests to ensure conformity with safety, audio quality, long-term reliability or any regulation requirements. As a result, Avaya makes no representations whether a particular non-Avaya headset will work with Avaya's telephones or with a different generation of the same Avaya telephone.

Since there is no industry standard for handset interfaces, different manufacturers utilize different handset/headset interfaces with their telephones. Therefore, any claim made by a headset vendor that its product is compatible with Avaya telephones does not equate to a guarantee that the headset will provide adequate safety protection or audio quality.

The interoperability compliance test included feature and serviceability testing. The feature testing focused on placing calls to and from Avaya Communicator for Windows using the Plantronics Hub Software and Plantronics Voyager 5200 UC and verifying 2-way audio. The type of calls made included calls to voicemail, to local stations, and to the PSTN.

The serviceability testing focused on verifying the usability of Voyager 5200 UC after restarting the Avaya Communicator for Windows, disconnecting and reconnecting the headset, and rebooting the PC.

2.1. Interoperability Compliance Testing

All test cases were performed manually. The following features were verified:

- Placing calls to the voicemail system. Voice messages were recorded and played back to verify that the playback volume and recording level were good.
- Placing calls to local stations to verify two-way audio.
- Placing calls to the PSTN to verify two-way audio.

- Answering and ending calls using the call control button on the headset.
- Using the volume control buttons on the headset to adjust the playback volume.
- Using the mute button on the headset and on Avaya Communicator for Windows to mute and un-mute the audio, including verifying that the mute status was accurately reflected on the headset and Avaya Communicator for Windows.
- Avaya Communicator for Windows was tested using a SIP interface.

For the serviceability testing, the headset was disconnected and reconnected to verify proper operation. Avaya Communicator for Windows application was also restarted for the same purpose. The desktop PC was also rebooted to verify that Avaya Communicator for Windows and headset were operational when the PC came back into service.

2.2. Test Results

All test cases passed. Incoming and outgoing calls were place to/from Avaya Communicator for Windows with the Plantronics headset and two-way audio was verified. Call, mute, and volume control directly from the headset were verified.

2.3. Support

For technical support and information on Plantronics Hub Software and Plantronics Voyager 5200 UC Bluetooth Headset, contact Plantronics at:

- Phone: 1-855-765-7878 (toll free)
- Website: <http://www.plantronics.com/us/support/>

3. Reference Configuration

Figure 1 illustrates the test configuration used to verify the Plantronics solution. The configuration consists of Avaya Aura® Communication Manager running in a virtual environment with an Avaya G450 Media Gateway providing connectivity to the PSTN via an ISDN-PRI trunk (not shown). Avaya Aura® Messaging was used as the voicemail system. Avaya Communicator for Windows and Plantronics Hub Software were installed on a desktop PC running Windows 10. Voyager 5200 UC connected via Bluetooth to a Plantronics BT600 Bluetooth USB Adapter connected to the desktop PC running Avaya Communicator for Windows. Avaya Aura® System Manager and Avaya Aura® Session Manager (not shown) were also used in the test configuration to test Avaya Communicator for Windows with a SIP interface.

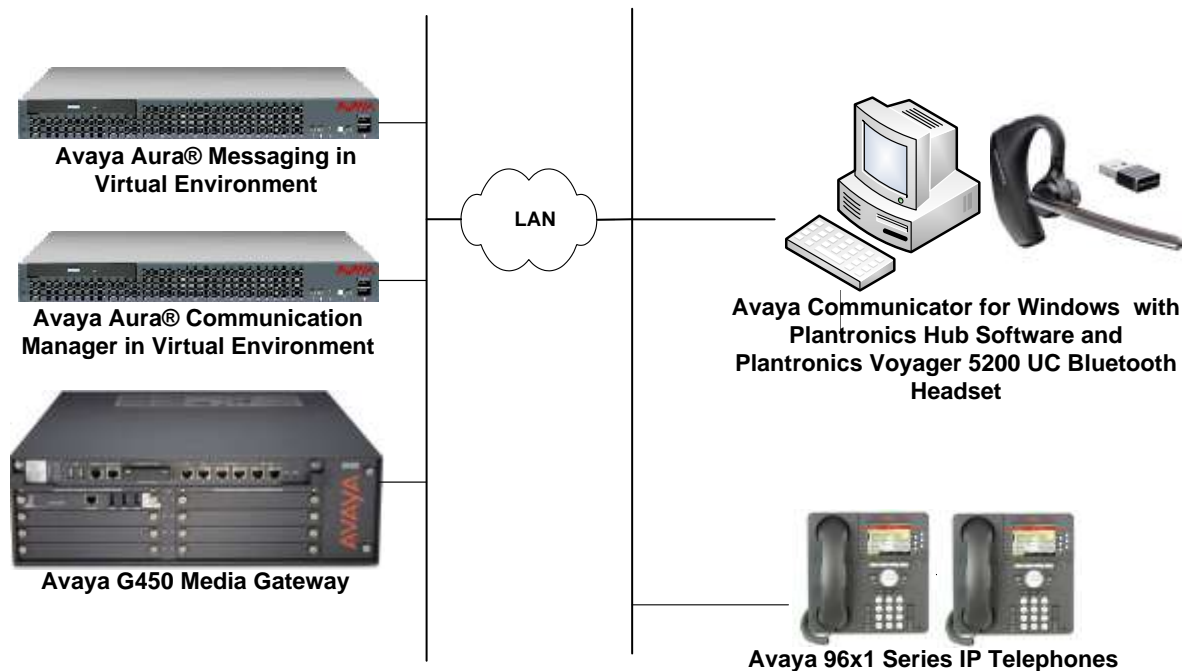


Figure 1: Avaya Communicator for Windows with Plantronics Hub Software and Plantronics Voyager 5200 UC Bluetooth Headset

4. Equipment and Software Validated

The following equipment and software were used for the sample configuration provided:

Equipment/Software	Release/Version
Avaya Aura® Communication Manager in a Virtual Environment with an Avaya G450 Media Gateway	7.0 SP 1 (R017x.00.0.441.0 with Patch 22477)
Avaya Aura® System Manager	7.0.1 (Build No. 7.0.0.016266 Software Update Revision No: 7.0.1.0.064859 Feature Pack 1)
Avaya Aura® Session Manager	7.0.1 (7.0.1.0.701007)
Avaya Aura® Messaging	6.3.2 SP 2 Patch 3
Avaya Communicator for Windows on Microsoft Windows 10	2.1 SP3 (2.1.3.80)
Avaya 9600 Series IP Telephone	2.6.16.1 (SIP)
Avaya 96x1 Series IP Telephone	7.0.1.1.5 (SIP)
Plantronics Hub Software	3.8.51410.36664
Plantronics Voyager 5200 UC Bluetooth Headset with Plantronics BT600 Bluetooth USB Adapter	v.117 v.1210 (BT600)

5. Configure Avaya Aura® Communication Manager



This section covers the station configuration for Avaya Communicator for Windows. The configuration is performed via the System Access Terminal (SAT) on Communication Manager.

To configure Avaya Communicator for Windows using a SIP interface, a SIP station was configured automatically through Avaya Aura® System Manager. The **Station Type** was set to *9630SIP* and a descriptive **Name** was also provided. The **IP Softphone** field was set to *y*. Use the default values for the other fields on **Page 1**.


display station 78400		Page 1 of 5
	STATION	
Extension: 78400	Lock Messages? n	BCC: 0
Type: 9630SIP	Security Code:	TN: 1
Port: S00009	Coverage Path 1:	COR: 1
Name: Plantronics	Coverage Path 2:	COS: 1
	Hunt-to Station:	Tests? y
STATION OPTIONS		
	Time of Day Lock Table:	
Loss Group: 19		
	Message Lamp Ext: 78400	
	Mute Button Enabled? y	
Display Language: english	Button Modules: 0	
Survivable COR: internal	Media Complex Ext:	
Survivable Trunk Dest? y	IP SoftPhone? y	
	IP Video Softphone? n	
	Short/Prefixed Registration Allowed: default	

6. Configure Avaya Communicator for Windows


Connect the Plantronics headset to the PC via a USB port. Next, ensure that the **Sound** properties under Windows 10 Control Panel are set properly. Verify that the Plantronics headset has been detected by Windows 10 and that it has been set as the default device in the **Playback** and **Recording** tabs as shown below.

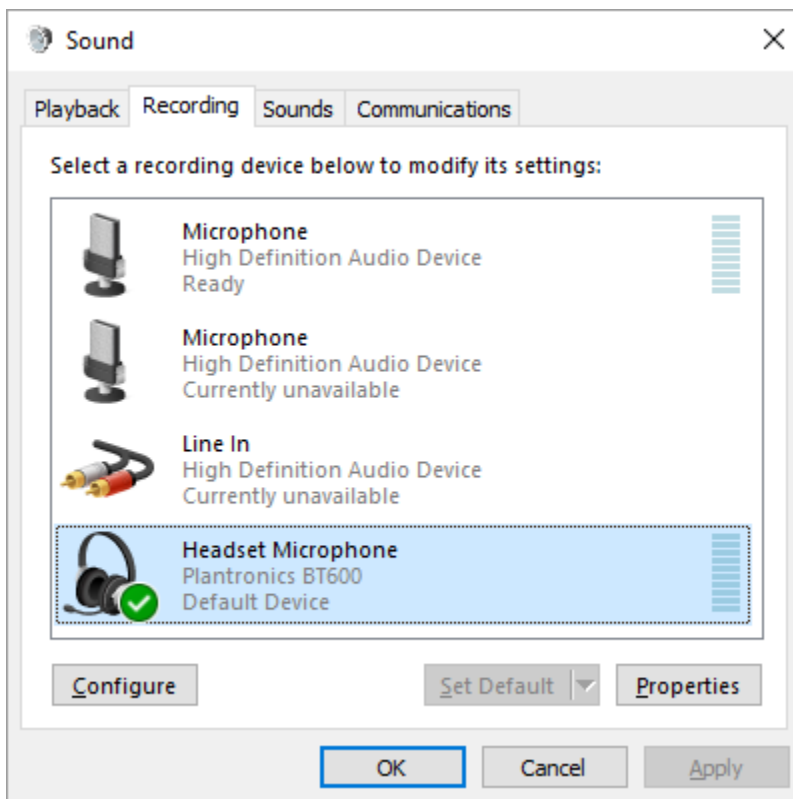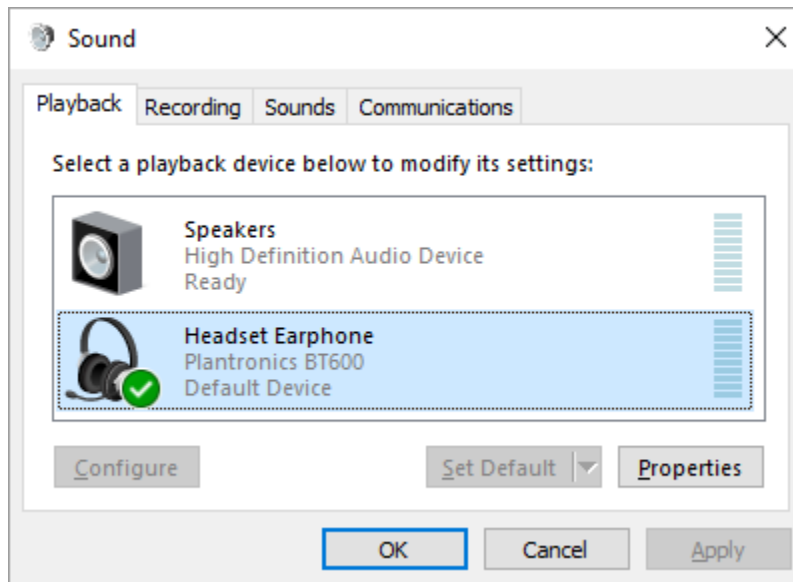

After logging into Avaya Communicator for Windows, click on  and then select **Other Settings** as shown below.

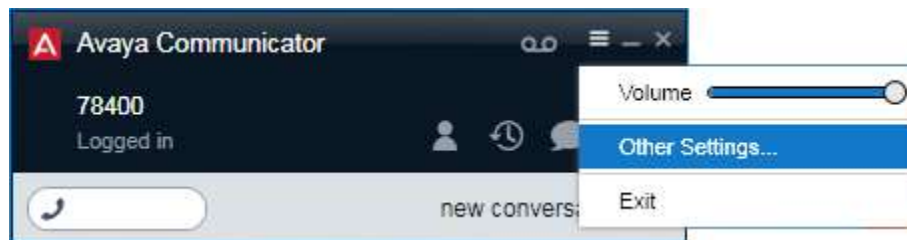

The BT600 Bluetooth USB Adapter is automatically detected by Avaya Communicator for Windows. In the **Settings** tab, navigate to **Audio** and set the **Microphone** and **Speaker** fields to *Headset Microphone (Plantronics BT600)* and *Headset Earphone (Plantronics BT600)*, respectively, as shown below. Click **OK**.

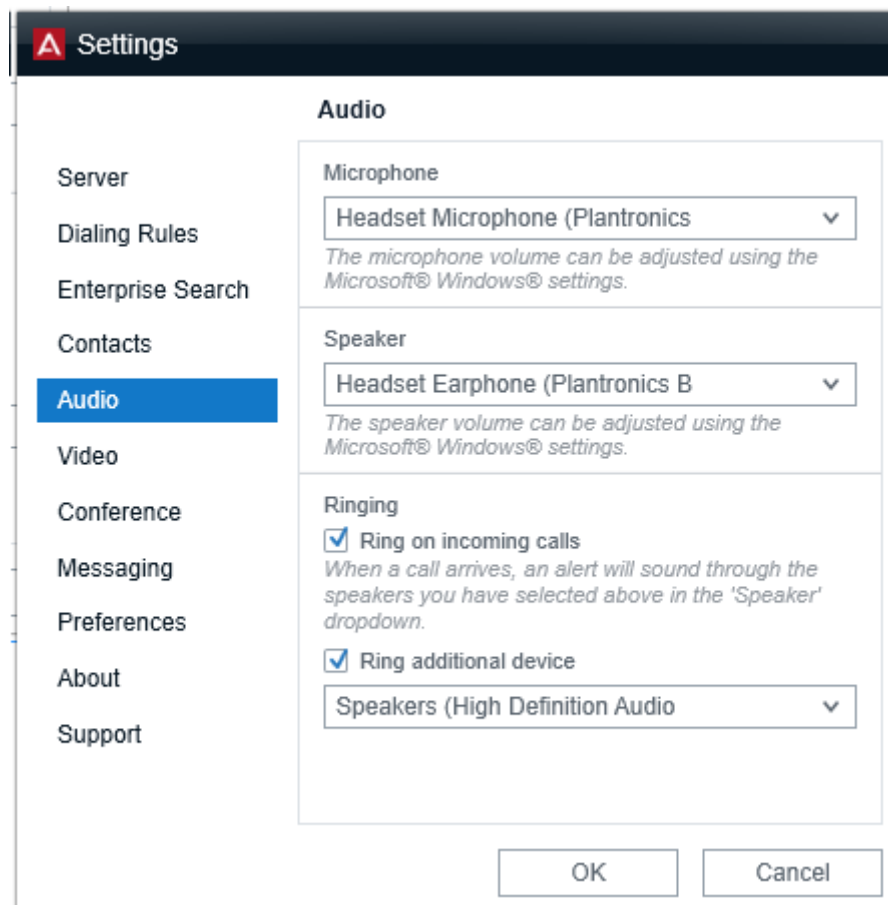


7. Install Plantronics Hub Software and Plantronics Voyager 5200 UC Bluetooth Headset

The Plantronics Hub software enables the Plantronics Voyager 5200 UC Headset to answer, end, and mute calls using the call control button on the headsets. Install the software on the PC running the Avaya Communicator for Windows. Refer to [3] for additional information.

After the Hub software is installed, turn on the Voyager 5200 UC headset and then connect the Plantronics BT600 Bluetooth USB adapter to the desktop PC running Avaya Communicator for Windows. When the headset is paired via Bluetooth, a chime and “PC Connected” announcement is played through headset. If the headset needs to be paired again, follow the instructions in [5].

Prior to using the headset, the Plantronics Hub software should be running and should have detected the headset as shown below. All default settings for the Hub software were used for compliance testing.

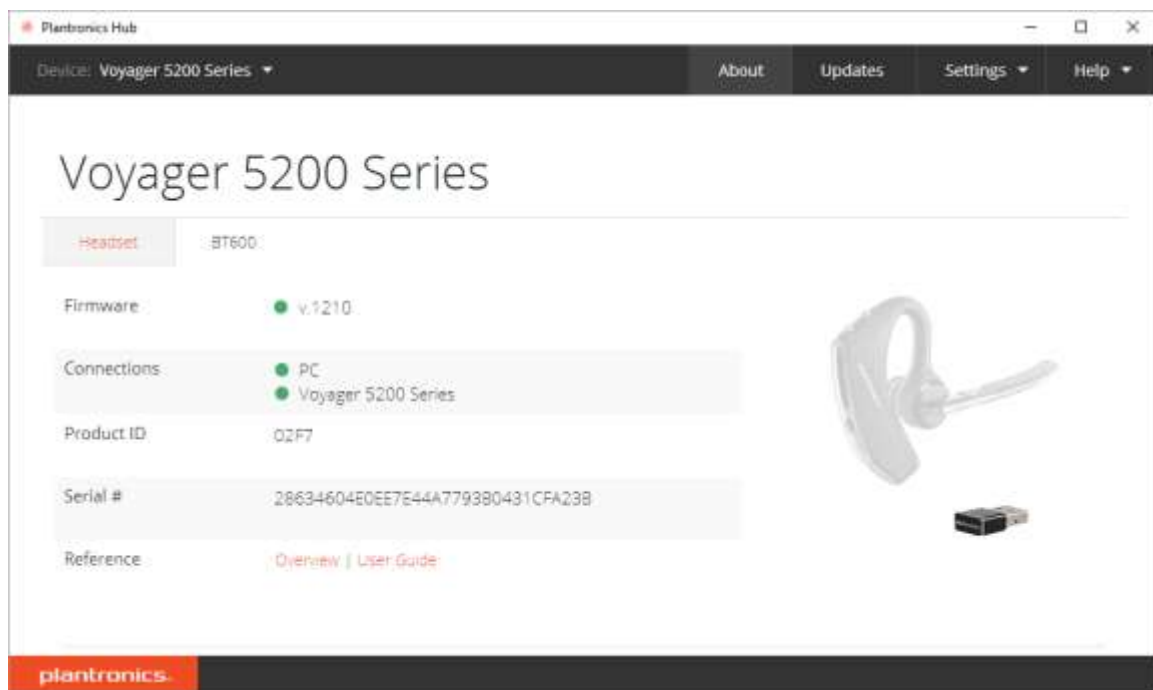

Plantronics Hub


Device: Voyager 5200 Series

About Updates Settings Help

Voyager 5200 Series

Headset: BT600

Firmware: v.117

Talk Time Remaining:  8hr 20min


Connections: PC BT600

Product ID: 0130

Serial #: S/NA3TMKJ

Build Code: B/C617A/2

Reference: [Overview](#) | [User Guide](#)



plantronics

8. Verification Steps

This section provides the tests that can be performed to verify proper installation and configuration of the Plantronics Hub Software and Plantronics Voyager 5200 UC Bluetooth Headset with Avaya Communicator for Windows.

1. Start the Avaya Communicator for Windows application.
2. Place an incoming call to Avaya Communicator for Windows from any local phone.
3. Answer the call using the call control button on the headset.
4. Verify two-way talk path between the Voyager 5200 UC headset and phone.
5. Disconnect the call from the headset using the call control button.
6. Verify that the call is properly disconnected.

9. Conclusion

These Application Notes describe the configuration steps required to integrate the Plantronics Hub Software and Plantronics Voyager 5200 UC Bluetooth Headset with Avaya Communicator for Windows. All test cases were completed successfully.

10. Additional References

This section references the Avaya and Plantronics documentation that are relevant to these Application Notes.

The following Avaya product documentation can be found at <http://support.avaya.com>.

- [1] *Administering Avaya Aura® Communication Manager*, Release 7.0.1, Issue 2, May 2016, Document Number 03-300509.
- [2] *Implementing Avaya one-X® Communicator*, Release 6.2 Feature Pack 10, November 2015.

The following Plantronics product documentation can be found at <http://www.plantronics.com>.

- [3] *Plantronics Hub for Windows/MAC User Guide*, v3.8.1.
- [4] *Plantronics Hub for Windows/MAC User Interface Reference*, v 3.8.
- [5] *Plantronics Voyager 5200 UC Wireless Headset System User Guide*.

©2016 Avaya Inc. All Rights Reserved.

Avaya and the Avaya Logo are trademarks of Avaya Inc. All trademarks identified by ® and ™ are registered trademarks or trademarks, respectively, of Avaya Inc. All other trademarks are the property of their respective owners. The information provided in these Application Notes is subject to change without notice. The configurations, technical data, and recommendations provided in these Application Notes are believed to be accurate and dependable, but are presented without express or implied warranty. Users are responsible for their application of any products specified in these Application Notes.

Please e-mail any questions or comments pertaining to these Application Notes along with the full title name and filename, located in the lower right corner, directly to the Avaya DevConnect Program at devconnect@avaya.com.