



## **Avaya Solution & Interoperability Test Lab**

---

# **Application Notes for IPC Alliance MX 15.03 with Avaya Aura® Communication Manager 6.3 using QSIG Trunks – Issue 1.0**

### **Abstract**

These Application Notes describe the configuration steps required for IPC Alliance MX 15.03 to interoperate with Avaya Aura® Communication Manager 6.3 using QSIG trunks.

IPC Alliance MX is a trading communication solution. In the compliance testing, IPC Alliance MX used E1 QSIG trunks to Avaya Aura® Communication Manager, for turreted users on IPC to reach users on Avaya Aura® Communication Manager and on the PSTN.

Information in these Application Notes has been obtained through DevConnect compliance testing and additional technical discussions. Testing was conducted via the DevConnect Program at the Avaya Solution and Interoperability Test Lab.

# 1. Introduction

These Application Notes describe the configuration steps required for IPC Alliance MX 15.03 to interoperate with Avaya Aura® Communication Manager 6.3 using QSIG trunks.

IPC Alliance MX is a trading communication solution. In the compliance testing, IPC Alliance MX used E1 QSIG trunks to Avaya Aura® Communication Manager, for turret users on IPC to reach users on Avaya Aura® Communication Manager and on the PSTN.

## 2. General Test Approach and Test Results

The feature test cases were performed manually. Calls were manually established among IPC turret users with Avaya SIP, H.323, Avaya Digital, and/or PSTN users. Call controls were performed from the various users to verify the various call scenarios.

The serviceability test cases were performed manually by disconnecting and reconnecting the E1 connection to IPC Alliance MX.

DevConnect Compliance Testing is conducted jointly by Avaya and DevConnect members. The jointly-defined test plan focuses on exercising APIs and/or standards-based interfaces pertinent to the interoperability of the tested products and their functionalities. DevConnect Compliance Testing is not intended to substitute full product performance or feature testing performed by DevConnect members, nor is it to be construed as an endorsement by Avaya of the suitability or completeness of a DevConnect member's solution.

### 2.1. Interoperability Compliance Testing

The interoperability compliance test included feature and serviceability testing.

The feature testing included basic call, basic display, G.711/G.729, hold/reconnect, DTMF, call forwarding unconditional/ring-no-answer/busy, blind/attended transfer, and conference.

The serviceability testing focused on verifying the ability of IPC Alliance MX to recover from adverse conditions, such as disconnecting/reconnecting the E1 connection to IPC Alliance MX.

### 2.2. Test Results

All test cases were executed and passed.

### 2.3. Support

Technical support on IPC Alliance MX can be obtained through the following:


- **Phone:** (800) NEEDIPC, (203) 339-7800
- **Email:** [systems.support@ipc.com](mailto:systems.support@ipc.com)

### 3. Reference Configuration

As shown in **Figure 1**, IPC Alliance MX at the Remote Site consists of Alliance MX, System Center, and Turrets.

There is a physical connection between the DS1 circuit pack on Communication Manager and the QSIG card on IPC System Center. E1 QSIG trunks are used from IPC Alliance MX to Communication Manager, to reach users on Communication Manager and on the PSTN.

A five digit Uniform Dial Plan (UDP) was used to facilitate dialing between the Central and Remote sites. Unique extension ranges were associated with Communication Manager user(s) at the Central site (720xx), and IPC turret users at the Remote site (333xx).

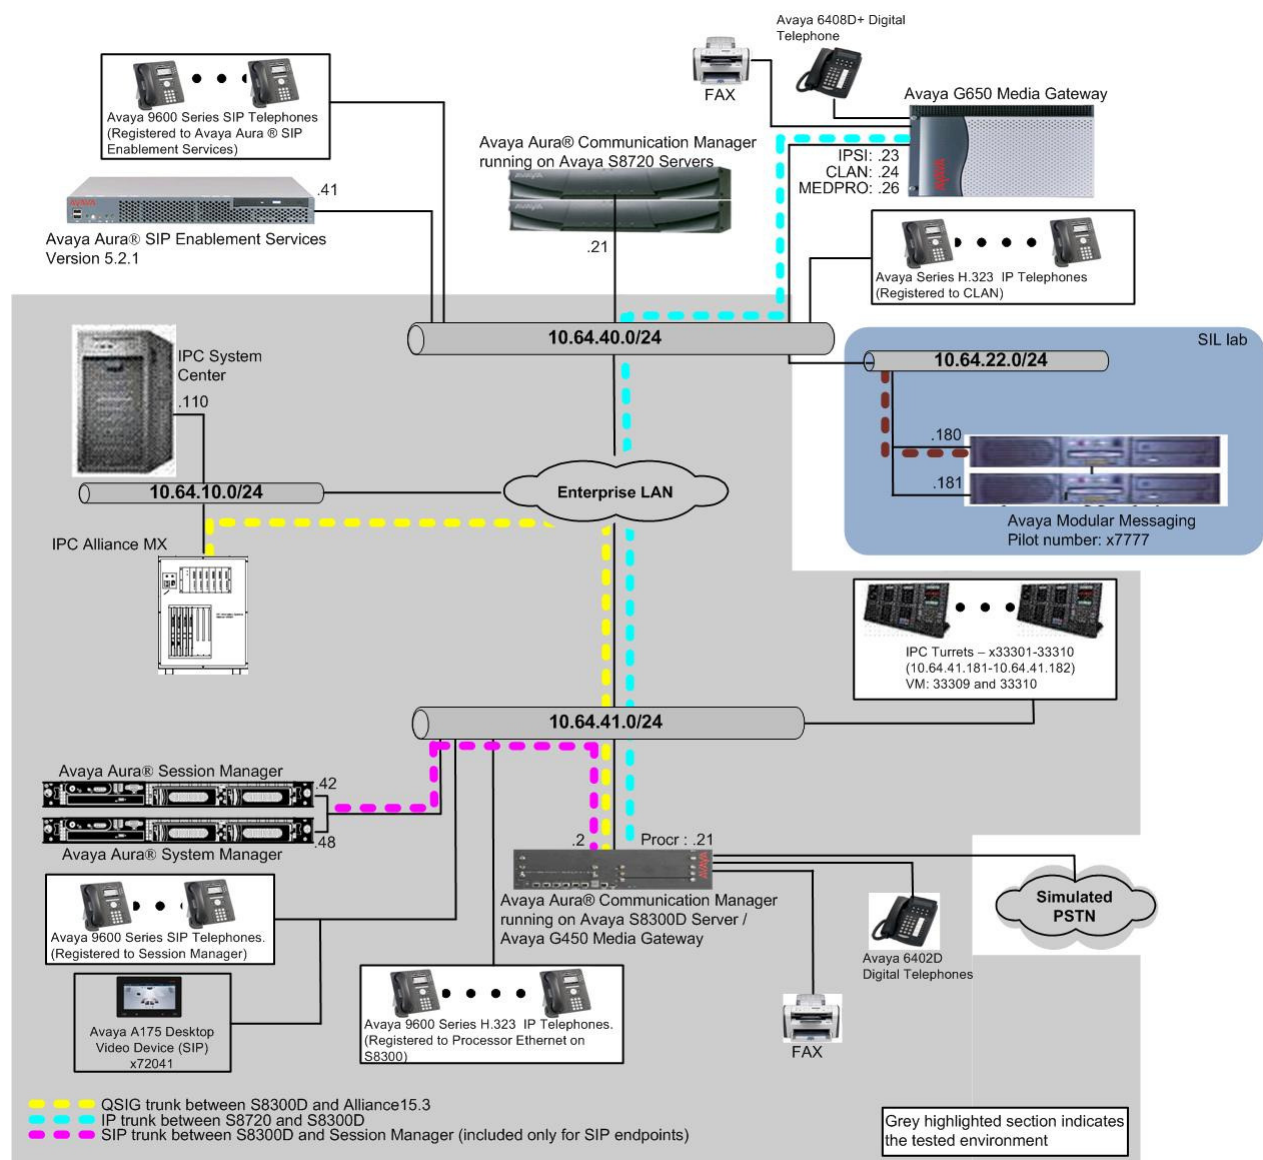

**Figure 1: Test Configuration of IPC Alliance**

## 4. Equipment and Software Validated

The following equipment and software were used for the sample configuration provided:

| Equipment  | Software                     |
|--|------------------------------|
| Avaya Aura® Communication Manager on Avaya S8300D Server                                     | 6.3 (03.0.124.0-20553)       |
| Avaya G450 Media Gateway <ul style="list-style-type: none"><li>MM710AP for E1 QSIG</li></ul> | 33.13.0<br>HW05 FW021        |
| Avaya Aura® Session Manager  | 6.3 (6.3.2.0.632023)         |
| Avaya Aura® System Manager   | 6.3 (6.3.2.4-1529)           |
| Avaya 9620 IP Telephone (H.323)  | 3.1                          |
| Avaya 9630 IP Telephone (SIP)  | 2.6.4                        |
| Avaya 6408D Digital Telephone  | NA                           |
| Avaya A175 Desktop Video Device (SIP)  | 1.1.1                        |
| IPC <ul style="list-style-type: none"><li>System Center</li><li>QSIG Line Card</li></ul>     | 15.03.00.18c<br>15.03.00.17a |

## 5. Configure Avaya Aura® Communication Manager

This section provides the procedures for configuring Avaya Aura® Communication Manager. The procedures include the following areas:

- Verify Communication Manager license
- Administer system parameters special applications
- Administer system parameters features
- Administer system parameters coverage forwarding
- Administer DS1 circuit pack
- Administer ISDN trunk group
- Administer ISDN signaling group
- Administer trunk group members
- Administer route pattern
- Administer public unknown numbering
- Administer uniform dial plan
- Administer AAR analysis
- Administer ISDN trunk group
- Administer tandem calling party number

### 5.1. Verify Communication Manager License

Log into the System Access Terminal (SAT) to verify that the Communication Manager license has proper permissions for features illustrated in these Application Notes. Use the “display system-parameters customer-options” command. Navigate to **Page 4**, and verify that **ISDN-PRI** is enabled, as shown below.

```
display system-parameters customer-options                               Page 4 of 11
                                OPTIONAL FEATURES

Emergency Access to Attendant? y                                     IP Stations? y
  Enable 'dadmin' Login? y
  Enhanced Conferencing? y                                           ISDN Feature Plus? y
    Enhanced EC500? y         ISDN/SIP Network Call Redirection? y
Enterprise Survivable Server? n                                     ISDN-BRI Trunks? y
  Enterprise Wide Licensing? n                                     ISDN-PRI? y
    ESS Administration? y         Local Survivable Processor? n
      Extended Cvg/Fwd Admin? y   Malicious Call Trace? y
External Device Alarm Admin? y         Media Encryption Over IP? n
Five Port Networks Max Per MCC? n     Mode Code for Centralized Voice Mail? n
  Flexible Billing? n
Forced Entry of Account Codes? y       Multifrequency Signaling? y
  Global Call Classification? y       Multimedia Call Handling (Basic)? y
    Hospitality (Basic)? y           Multimedia Call Handling (Enhanced)? y
Hospitality (G3V3 Enhancements)? y   Multimedia IP SIP Trunking? y
  IP Trunks? y

IP Attendant Consoles? y
(NOTE: You must logoff & login to effect the permission changes.)
```

Navigate to **Page 8**, and verify the highlighted QSIG features are enabled, as shown below.

```
display system-parameters customer-options                               Page 8 of 11
                                QSIG OPTIONAL FEATURES

                                Basic Call Setup? y
                                Basic Supplementary Services? y
                                Centralized Attendant? y
                                Interworking with DCS? y
                                Supplementary Services with Rerouting? y
                                Transfer into QSIG Voice Mail? y
                                Value-Added (VALU)? y
```

## 5.2. Administer System Parameters Special Applications

Use the “change system-parameters special-applications” command, and navigate to **Page 3** to enable **(SA8440) – Unmodified QSIG Reroute Number**.

Under the QSIG call forwarding feature, when a call comes into Communication Manager over the ISDN trunk administered for supplementary service option B and terminates to a station with call forwarding activated to an off-net number, Communication Manager sends an ISDN facility message back to the originating switch with the complete forward-to number that can include dial plan prefixes and route pattern digit manipulation, etc.

The **Unmodified QSIG ReRoute Number** special application allows the option of bypassing the number manipulation for the forwarded-to party.

```
change system-parameters special-applications                          Page 3 of 10
                                SPECIAL APPLICATIONS

                                (SA8141) - LDN Attendant Queue Priority? n
                                (SA8143) - Omit Designated Extensions From Displays? n
                                (SA8146) - Display Update for Redirected Calls? n
                                (SA8156) - Attendant Priority Queuing by COR? n
                                (SA8157) - Toll Free Vectoring until Answer? n
                                (SA8201) - Start Time and 4-Digit Year CDR Custom Fields? n
                                (SA8202) - Intra-switch CDR by COS? n
                                (SA8211) - Prime Appearance Preference? n
                                (SA8240) - Station User Admin of FBI? n
                                (SA8312) - Meet-Me Paging? n
                                (SA8323) - Idle Call Preference Display? n
                                (SA8339) - PHS X-Station Mobility? n
                                (SA8348) - Map NCID to Universal Call ID? n
                                (SA8428) - Station User Button Ring Control? n
                                (SA8434) - Delay PSTN Connect on Agent Answer? n
                                (SA8439) - Forward Held-Call CPN? n
                                (SA8440) - Unmodified QSIG Reroute Number? y
                                (SA8475) - SOSM? n
```

### 5.3. Administer System Parameters Features

Use the “change system-parameters features” command to allow for trunk-to-trunk transfers. This feature is needed to be able to transfer an incoming call from IPC back out to IPC (incoming trunk to outgoing trunk), and to transfer an outgoing call to IPC to another outgoing trunk to IPC (outgoing trunk to outgoing trunk). For ease of compliance testing, the **Trunk-to-Trunk Transfer** field was set to “all” to enable all trunk-to-trunk transfers on a system wide basis. Note that this feature poses significant security risk, and must be used with caution. For alternatives, the trunk-to-trunk feature can be implemented on the Class Of Restriction or Class Of Service levels. Refer to [1] for more details.

```
change system-parameters features                                     Page 1 of 19
      FEATURE-RELATED SYSTEM PARAMETERS
      Self Station Display Enabled? n
      Trunk-to-Trunk Transfer: all
      Automatic Callback with Called Party Queuing? n
      Automatic Callback - No Answer Timeout Interval (rings): 3
      Call Park Timeout Interval (minutes): 10
      Off-Premises Tone Detect Timeout Interval (seconds): 20
      AAR/ARS Dial Tone Required? y

      Music (or Silence) on Transferred Trunk Calls? no
      DID/Tie/ISDN/SIP Intercept Treatment: attendant
      Internal Auto-Answer of Attd-Extended/Transferred Calls: transferred
      Automatic Circuit Assurance (ACA) Enabled? n

      Abbreviated Dial Programming by Assigned Lists? n
      Auto Abbreviated/Delayed Transition Interval (rings): 2
      Protocol for Caller ID Analog Terminals: Bellcore
      Display Calling Number for Room to Room Caller ID Calls? n
```

Navigate to **Page 16**. Enable **Chained Call Forwarding**, to allow changes to the Maximum Number Of Call Forwarding Hops parameter in **Section 5.4**.

```
change system-parameters features                                     Page 16 of 19
      FEATURE-RELATED SYSTEM PARAMETERS

      SPECIAL TONE
      Special Dial Tone? n
      Special Dial Tone for Digital/IP Stations: none

      REDIRECTION NOTIFICATION
      Display Notification for Do Not Disturb? n
      Display Notification for Send All Calls? n
      Display Notification for Call Forward? n
      Display Notification for Enhanced Call Forward? n
      Display Notification for a locked Station? n
      Display Notification for Limit Number of Concurrent Calls? n
      Display Notification for Posted Messages? n
      Scroll Status messages Timer(sec.):

      Chained Call Forwarding? Y
```

## 5.4. Administer System Parameters Coverage Forwarding

Use the “change system-parameters coverage-forwarding” command. Set **Threshold for Blocking Off-Net Redirection of Incoming Trunk Calls** to the desired value. In the compliance testing, the threshold was disabled so that there will be no blocking on the number of calls being redirected off-net within the Call Forward timer.

```
change system-parameters coverage-forwarding                               Page 1 of 2
                                SYSTEM PARAMETERS CALL COVERAGE / CALL FORWARDING
CALL COVERAGE/FORWARDING PARAMETERS
    Local Cvg Subsequent Redirection/CFWD No Ans Interval (rings): 2
    Off-Net Cvg Subsequent Redirection/CFWD No Ans Interval (rings): 2
    Coverage - Caller Response Interval (seconds): 4
    Threshold for Blocking Off-Net Redirection of Incoming Trunk Calls: n
    Location for Covered and Forwarded Calls: called
    PGN/TN/COR for Covered and Forwarded Calls: caller
    COR/FRL check for Covered and Forwarded Calls? n
    QSIG/SIP Diverted Calls Follow Diverted to Party's Coverage Path? n
COVERAGE
    Criteria for Logged Off/PSA/TTI Stations? n
    Keep Held SBA at Coverage Point? y
    External Coverage Treatment for Transferred Incoming Trunk Calls? n
    Immediate Redirection on Receipt of PROGRESS Inband Information? n
    Maintain SBA At Principal? y
    QSIG VALU Coverage Overrides QSIG Diversion with Rerouting? n
    Station Hunt Before Coverage? n
FORWARDING
    Call Forward Override? n
    Coverage After Forwarding? y
```

Navigate to **Page 2**, and set **Maximum Number Of Call Forwarding Hops** to a value mutually agreeable with IPC.

```
change system-parameters coverage-forwarding                               Page 2 of 2
                                SYSTEM PARAMETERS CALL COVERAGE / CALL FORWARDING
COVERAGE OF CALLS REDIRECTED OFF-NET (CCRON)
    Coverage Of Calls Redirected Off-Net Enabled? n

CHAINED CALL FORWARDING
    Maximum Number Of Call Forwarding Hops: 6
    Station Coverage Path For Coverage After Forwarding: principal
```



## 5.5. Administer DS1 Circuit Pack

Use the “add ds1 x” command, where “x” is the slot number of the DS1 circuit pack with physical connectivity to IPC. Enter the following values for the specified fields, and retain the default values for the remaining fields.

- **Name:** A descriptive name.
- **Bit Rate:** “2.048”
- **Line Coding:** “hdb3”
- **Signaling Mode:** “isdn-pri”
- **Connect:** “pbx”
- **Interface:** “peer-master”[ This means IPC side is set to “peer-slave”]
- **Peer Protocol:** “Q-SIG”
- **Side:** “b”
- **Interface Companding:** “alaw”
- **CRC:** “y”
- **Channel Numbering:** “timeslot”

```
change ds1 1v8                                     Page 1 of 1
DS1 CIRCUIT PACK

Location: 001V8                                     Name: IPC-Alliance
Bit Rate: 2.048                                     Line Coding: hdb3

Signaling Mode: isdn-pri
Connect: pbx                                         Interface: peer-master
TN-C7 Long Timers? n                               Peer Protocol: Q-SIG
Interworking Message: PROGress                     Side: b
Interface Companding: alaw                         CRC? y
Idle Code: 11111111                               Channel Numbering: timeslot
DCP/Analog Bearer Capability: 3.1kHz

T303 Timer(sec): 4
Disable Restarts? n

Slip Detection? y                                 Near-end CSU Type: other

Echo Cancellation? n
```

## 5.6. Administer ISDN Trunk Group

Administer an ISDN trunk group to interface with IPC. Use the “add trunk-group n” command, where “n” is an available trunk group number. Enter the following values for the specified fields, and retain the default values for the remaining fields.

- **Group Type:** “isdn”
- **Group Name:** A descriptive name.
- **TAC:** An available trunk access code.
- **Direction:** “two-way”
- **Carrier Medium:** “PRI/BRI”
- **Service Type:** “tie”

```
add trunk-group 70                                     Page 1 of 21
                                     TRUNK GROUP

Group Number: 70                                     Group Type: isdn                                     CDR Reports: y
Group Name: ElQSIG-All15.3                             COR: 1                                     TN: 1                                     TAC: 1070
Direction: two-way                                     Outgoing Display? n                             Carrier Medium: PRI/BRI
Dial Access? n                                         Busy Threshold: 255                             Night Service:
Queue Length: 0
Service Type: tie                                     Auth Code? n                                     TestCall ITC: rest
Far End Test Line No:
TestCall BCC: 4
```

Navigate to **Page 2**. For **Supplementary Service Protocol**, enter “b” for QSIG. For **Digit Handling (in/out)**, enter “enbloc/enbloc”. For **Format**, enter “unk-unk”. Retain the default values for the remaining fields

```
add trunk-group 70                                     Page 2 of 21
Group Type: isdn

TRUNK PARAMETERS
Codeset to Send Display: 6                             Codeset to Send National IEs: 6
Max Message Size to Send: 260                         Charge Advice: none
Supplementary Service Protocol: b                       Digit Handling (in/out): enbloc/enbloc

Trunk Hunt: cyclical
Digital Loss Group: 13
Incoming Calling Number - Delete:                     Insert:                                     Format: unk-unk
Bit Rate: 1200                                         Synchronization: async                     Duplex: full
Disconnect Supervision - In? y Out? n
Answer Supervision Timeout: 0
Administer Timers? n                                   CONNECT Reliable When Call Leaves ISDN? n
XOIP Treatment: auto                                   Delay Call Setup When Accessed Via IGAR? n
CPN to Send for Redirected Calls: calling
```

Navigate to **Page 3**. Enable **Send Name**, **Send Calling Number**, and **Send Called/Busy/Connected Number**. For **Format**, enter “private”.

| add trunk-group 70                      |  | Page 3 of 21             |
|---|--|--------------------------|
| TRUNK FEATURES                          |  |                          |
| ACA Assignment? n                       | Measured: none                                     | Wideband Support? n      |
|   | Internal Alert? n                                  | Maintenance Tests? y     |
|   | Data Restriction? n                                | NCA-TSC Trunk Member: 30 |
|   | Send Name: y                                       | Send Calling Number: y   |
| Used for DCS? n                         | Hop Dgt? n   | Send EMU Visitor CPN? n  |
| Suppress # Outpulsing? n                | Format: private                                    |                          |
| Outgoing Channel ID Encoding: preferred | UII IE Treatment: service-provider                 |                          |
|   | Replace Restricted Numbers? n                      |                          |
|   | Replace Unavailable Numbers? n                     |                          |
|   | Send Called/Busy/Connected Number: y               |                          |
|   | Hold/Unhold Notifications? y                       |                          |
| Send UII IE? y                          | Modify Tandem Calling Number: no                   |                          |
| Send UCID? n                            |  |                          |
| Send Codeset 6/7 LAI IE? y              |  | Dsl Echo Cancellation? n |
|   |  | Modify Reroute Number? y |
| Apply Local Ringback? n                 |  |                          |
| Show ANSWERED BY on Display? y          |  |                          |
|   | Network (Japan) Needs Connect Before Disconnect? n |                          |

## 5.7. Administer ISDN Signaling Group

Administer an ISDN signaling group for the new trunk group to use for signaling. Use the “add signaling-group n” command, where “n” is an available signaling group number. For **Primary D-Channel**, enter the slot number for the DS1 circuit pack from **Section 5.5** and port “16”. Set desired values for **Max number of NCA TSC** and **Max number of CA TSC**.

For **Trunk Group for NCA TSC** and **Trunk Group for Channel Selection**, enter the ISDN trunk group number from **Section 5.6**. For **TSC Supplementary Service Protocol**, enter “b” for QSIG. Retain the default values for the remaining fields.

| add signaling-group 70                |                      | Page 1 of 1                    |
|---------------------------------------|----------------------|--------------------------------|
| SIGNALING GROUP                       |                      |                                |
| Group Number: 70                      | Group Type: isdn-pri |                                |
| Associated Signaling? y               |                      | Max number of NCA TSC: 30      |
| Primary D-Channel: 001V816            |                      | Max number of CA TSC: 30       |
|                                       |                      | Trunk Group for NCA TSC: 70    |
| Trunk Group for Channel Selection: 70 |                      | X-Mobility/Wireless Type: NONE |
| TSC Supplementary Service Protocol: b |                      | Network Call Transfer? n       |

## 5.8. Administer Trunk Group Members

Use the “change trunk-group n” command, where “n” is the ISDN trunk group number added in **Section 5.6**. Navigate to **Page 3**. For **NCA-TSA Trunk Member**, enter the highest trunk group member number to use for routing of tandem QSIG call independent signaling connections.

change trunk-group 70 Page 3 of 21

TRUNK FEATURES

|   |  |                          |
|---|--|--------------------------|
| ACA Assignment? n                       | Measured: none                                     | Wideband Support? n      |
|   | Internal Alert? n                                  | Maintenance Tests? y     |
|   | Data Restriction? n                                | NCA-TSC Trunk Member: 30 |
|   | Send Name: y                                       | Send Calling Number: y   |
| Used for DCS? n                         | Hop Dgt? n   | Send EMU Visitor CPN? n  |
| Suppress # Outpulsing? n                | Format: private                                    |                          |
| Outgoing Channel ID Encoding: preferred | UII IE Treatment: service-provider                 |                          |
|   | Replace Restricted Numbers? n                      |                          |
|   | Replace Unavailable Numbers? n                     |                          |
|   | Send Called/Busy/Connected Number: y               |                          |
|   | Hold/Unhold Notifications? y                       |                          |
| Send UII IE? y                          | Modify Tandem Calling Number: no                   |                          |
| Send UCID? n                            |  |                          |
| Send Codeset 6/7 LAI IE? y              | Dsl Echo Cancellation? n                           |                          |
|   | Modify Reroute Number? y                           |                          |
| Apply Local Ringback? n                 |  |                          |
| Show ANSWERED BY on Display? y          |  |                          |
|   | Network (Japan) Needs Connect Before Disconnect? n |                          |

Navigate to **Page 5** and **6**. Enter all 30 ports of the DS1 circuit pack into the **Port** fields, and the corresponding **Code** field will be populated automatically. Enter the ISDN signaling group number from **Section 5.7** into the **Sig Grp** fields as shown below.

change trunk-group 70 Page 5 of 21

TRUNK GROUP

Administered Members (min/max): 1/30

GROUP MEMBER ASSIGNMENTS Total Administered Members: 30

| Port        | Code | Sfx | Name | Night | Sig Grp |
|-------------|------|-----|------|-------|---------|
| 1: 001V801  | MM   | 710 |      |       | 70      |
| 2: 001V802  | MM   | 710 |      |       | 70      |
| 3: 001V803  | MM   | 710 |      |       | 70      |
| 4: 001V804  | MM   | 710 |      |       | 70      |
| 5: 001V805  | MM   | 710 |      |       | 70      |
| 6: 001V806  | MM   | 710 |      |       | 70      |
| 7: 001V807  | MM   | 710 |      |       | 70      |
| 8: 001V808  | MM   | 710 |      |       | 70      |
| 9: 001V809  | MM   | 710 |      |       | 70      |
| 10: 001V810 | MM   | 710 |      |       | 70      |
| 11: 001V811 | MM   | 710 |      |       | 70      |
| 12: 001V812 | MM   | 710 |      |       | 70      |
| 13: 001V813 | MM   | 710 |      |       | 70      |
| 14: 001V814 | MM   | 710 |      |       | 70      |
| 15: 001V815 | MM   | 710 |      |       | 70      |

change trunk-group 70 Page 6 of 21

TRUNK GROUP

Administered Members (min/max): 1/30

GROUP MEMBER ASSIGNMENTS Total Administered Members: 30

| Port | Code | Sfx | Name | Night | Sig Grp |
|------|------|-----|------|-------|---------|
|------|------|-----|------|-------|---------|

|     |         |       |    |
|-----|---------|-------|----|
| 16: | 001V817 | MM710 | 70 |
| 17: | 001V818 | MM710 | 70 |
| 18: | 001V819 | MM710 | 70 |
| 19: | 001V820 | MM710 | 70 |
| 20: | 001V821 | MM710 | 70 |
| 21: | 001V822 | MM710 | 70 |
| 22: | 001V823 | MM710 | 70 |
| 23: | 001V824 | MM710 | 70 |
| 24: | 001V825 | MM710 | 70 |
| 25: | 001V826 | MM710 | 70 |
| 26: | 001V827 | MM710 | 70 |
| 27: | 001V828 | MM710 | 70 |
| 28: | 001V829 | MM710 | 70 |
| 29: | 001V830 | MM710 | 70 |
| 30: | 001V831 | MM710 | 70 |

## 5.9. Administer Route Pattern

Use the “change route-pattern n” command, where “n” is the route pattern number to reach IPC, in this case “70”. Enter the following values for the specified fields, and retain the default values for the remaining fields.

- **Pattern Name:** A descriptive name.
- **Grp No:** The ISDN trunk group number from **Section 5.6**.
- **FRL:** A level that allows access to this trunk, with 0 being least restrictive.
- **TSC:** “y”
- **CA-TSC Request:** “as-needed”
- **Numbering Format:** “unk-unk”

|  |     |         |        |          |      |                 |          |           |      |             |     |             |      |
|--|-----|---------|--------|----------|------|-----------------|----------|-----------|------|-------------|-----|-------------|------|
| change route-pattern 70                          |     |         |        |          |      |                 |          |           |      |             |     | Page 1 of 3 |      |
| Pattern Number: 70 Pattern Name: To Alliance15.3 |     |         |        |          |      |                 |          |           |      |             |     |             |      |
| SCCAN? n Secure SIP? n                           |     |         |        |          |      |                 |          |           |      |             |     |             |      |
| Grp  | FRL | NPA     | Pfx    | Hop      | Toll | No.             | Inserted |           |      |             |     | DCS/        | IXC  |
| No   |     |         | Mrk    | Lmt      | List | Del             | Digits   |           |      |             |     | QSIG        |      |
|  |     |         |        |          |      |                 |          |           |      | Dgts        |     | Intw        |      |
| 1:   | 70  | 0       |        |          |      |                 |          |           |      |             | n   | user        |      |
| 2:   |     |         |        |          |      |                 |          |           |      |             | n   | user        |      |
| 3:   |     |         |        |          |      |                 |          |           |      |             | n   | user        |      |
| 4:   |     |         |        |          |      |                 |          |           |      |             | n   | user        |      |
| 5:   |     |         |        |          |      |                 |          |           |      |             | n   | user        |      |
| 6:   |     |         |        |          |      |                 |          |           |      |             | n   | user        |      |
|  |     |         |        |          |      |                 |          |           |      |             |     |             |      |
| BCC VALUE  |     | TSC     | CA-TSC | ITC BCIE |      | Service/Feature |          | PARM      | No.  | Numbering   | LAR |             |      |
| 0 1 2 M 4 W                                      |     | Request |        |          |      |                 |          |           |      | Dgts Format |     |             |      |
|  |     |         |        |          |      |                 |          |           |      |             |     | Subaddress  |      |
| 1:   | y   | y       | y      | y        | y    | n               | y        | as-needed | rest |             |     | unk-unk     | none |
| 2:   | y   | y       | y      | y        | y    | n               | n        |           | rest |             |     |             | none |
| 3:   | y   | y       | y      | y        | y    | n               | n        |           | rest |             |     |             | none |

## 5.10. Administer Public Unknown Numbering

Use the “change public-unknown-numbering 0” command, to define the calling party number to send to IPC. Add an entry for the trunk group defined in **Section 5.6**. In the example shown

below, all calls originating from a 5-digit extension beginning with 720 and routed to trunk group 70 will result in a 5-digit calling number.

|  |      |        |        |       |                       |
|--|------|--------|--------|-------|-----------------------|
| <b>change public-unknown-numbering 0</b> |      |        |        |       | Page 1 of 2           |
| NUMBERING - PUBLIC/UNKNOWN FORMAT        |      |        |        |       |                       |
| Ext                                      | Ext  | Trk    | CPN    | Total |                       |
| Len                                      | Code | Grp(s) | Prefix | CPN   |                       |
|  |      |        |        | Len   |                       |
| 5  | 720  | 10     |        | 5     | Total Administered: 6 |
| 5  | 720  | 26     |        | 5     | Maximum Entries: 240  |
| 5  | 720  | 70     |        | 5     |                       |

## 5.11. Administer Uniform Dial Plan

This section provides a sample AAR routing used for routing calls with dialed digits 33xxx to IPC. Note that other methods of routing may be used. Use the “change uniform-dialplan 0” command, and add an entry to specify the use of AAR for routing digits 33xxx, as shown below.

|                                  |     |     |        |          |                 |
|----------------------------------|-----|-----|--------|----------|-----------------|
| <b>change uniform-dialplan 0</b> |     |     |        |          | Page 1 of 2     |
| UNIFORM DIAL PLAN TABLE          |     |     |        |          |                 |
|                                  |     |     |        |          | Percent Full: 0 |
| Matching                         |     |     | Insert |          | Node            |
| Pattern                          | Len | Del | Digits | Net Conv | Num             |
| 2                                | 5   | 0   |        | aar n    |                 |
| 33                               | 5   | 0   |        | aar n    |                 |

## 5.12. Administer AAR Analysis

Use the “change aar analysis 0” command, and add an entry to specify how to route calls to 33xxx. In the example shown below, calls with digits 33xxx will be routed as an AAR call using route pattern “70” from **Section 5.9**.

|                              |        |  |         |         |      |      |                 |
|------------------------------|--------|--|---------|---------|------|------|-----------------|
| <b>change aar analysis 0</b> |        |  |         |         |      |      | Page 1 of 2     |
| AAR DIGIT ANALYSIS TABLE     |        |  |         |         |      |      |                 |
| Location: all                |        |  |         |         |      |      | Percent Full: 3 |
|                              | Dialed |  | Total   | Route   | Call | Node | ANI             |
|                              | String |  | Min Max | Pattern | Type | Num  | Reqd            |
| 28                           |        |  | 5 5     | 92      | aar  |      | n               |
| 33                           |        |  | 5 5     | 70      | aar  |      | n               |

## 5.13. Administer ISDN Trunk Group

Use the “change trunk-group n” command, where “n” is the existing ISDN trunk group number used to reach the PSTN, in this case “80”. Navigate to **Page 3**.

For **Modify Tandem Calling Number**, enter “tandem-cpn-form” to allow for the calling party number from IPC to be modified. By enabling this feature, the calling party number will be sent to PSTN when call is coming from IPC side via a QSIG trunk.

```

change trunk-group 80                                     Page 3 of 21
TRUNK FEATURES
    ACA Assignment? n                                     Measured: none      Wideband Support? n
                                                         Internal Alert? n    Maintenance Tests? y
                                                         Data Restriction? n  NCA-TSC Trunk Member:
                                                         Send Name: y         Send Calling Number: y
                                                         Send EMU Visitor CPN? y
    Used for DCS? n
    Suppress # Outpulsing? n    Format: natl-pub
    Outgoing Channel ID Encoding: preferred    UII IE Treatment: service-provider

                                                         Replace Restricted Numbers? n
                                                         Replace Unavailable Numbers? n
                                                         Send Connected Number: n
    Network Call Redirection: none                Hold/Unhold Notifications? n
    Send UII IE? y                                Modify Tandem Calling Number: tandem-cpn-form
    Send UCID? n
    Send Codeset 6/7 LAI IE? y                    Dsl Echo Cancellation? n

    Apply Local Ringback? n                        US NI Delayed Calling Name Update? n
    Show ANSWERED BY on Display? y
    Network (Japan) Needs Connect Before Disconnect? n
  
```

## 5.14. Administer Tandem Calling Party Number

Use the “change tandem-calling-party-num” command, to define the calling party number to send to the PSTN for tandem calls from IPC turret users.

In the example shown below, all calls originating from a 5-digit extension beginning with 33 and routed to trunk group 80 will result in a 10-digit calling number. For **Number Format**, use an applicable format, in this case “pub-unk”.

```

change tandem-calling-party-num                           Page 1 of 8
CALLING PARTY NUMBER CONVERSION
FOR TANDEM CALLS

    CPN          Incoming          Outgoing
    Len Prefix   Number   Trk      Number
    5   33       Format    Grp(s)   Format
    5   33       Format    80       3035383547   pub-unk
  
```

## 6. Configure IPC Alliance MX


This section provides the procedures for configuring IPC Alliance MX. The procedures include the following areas:

- Launch Iview
- Administer wire groups

The configuration of Alliance MX is typically performed by IPC installation technicians. The procedural steps are presented in these Application Notes for informational purposes.


### 6.1. Launch Iview

From the Alliance MX console, right-click and select **System Management** → **Spreadsheet Data View** from the pop-up boxes.

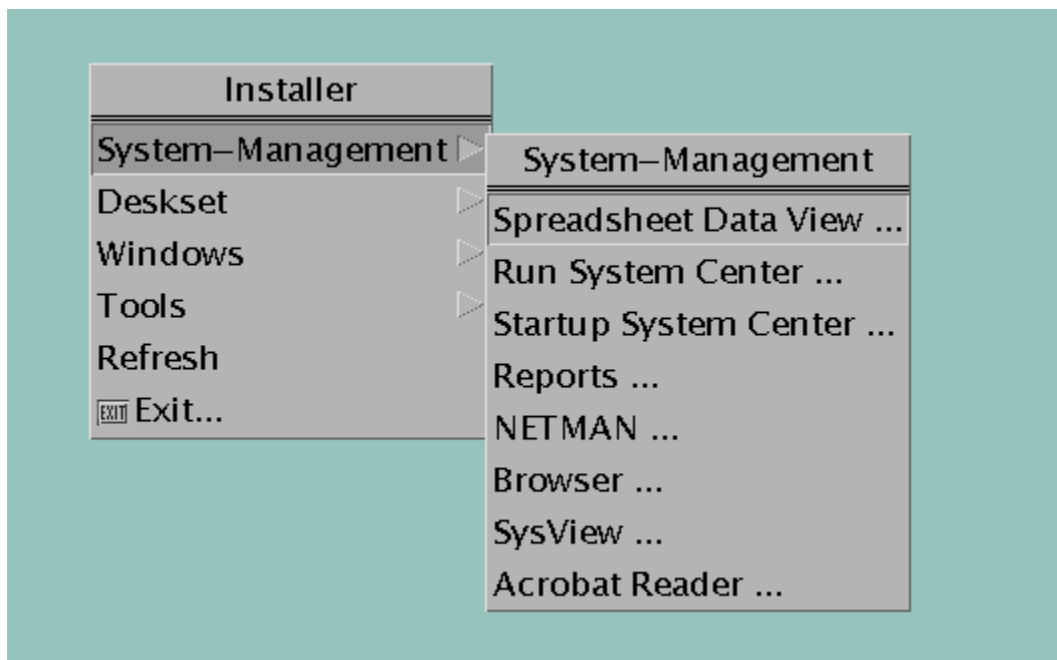




In the pop-up box shown below, click **Iview**.

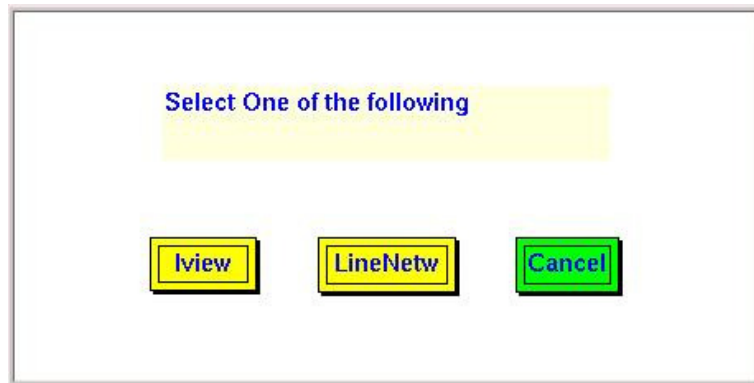


## 6.2. Administer Wire Groups


The **System Center Data View** screen is displayed. Click **Table View**.

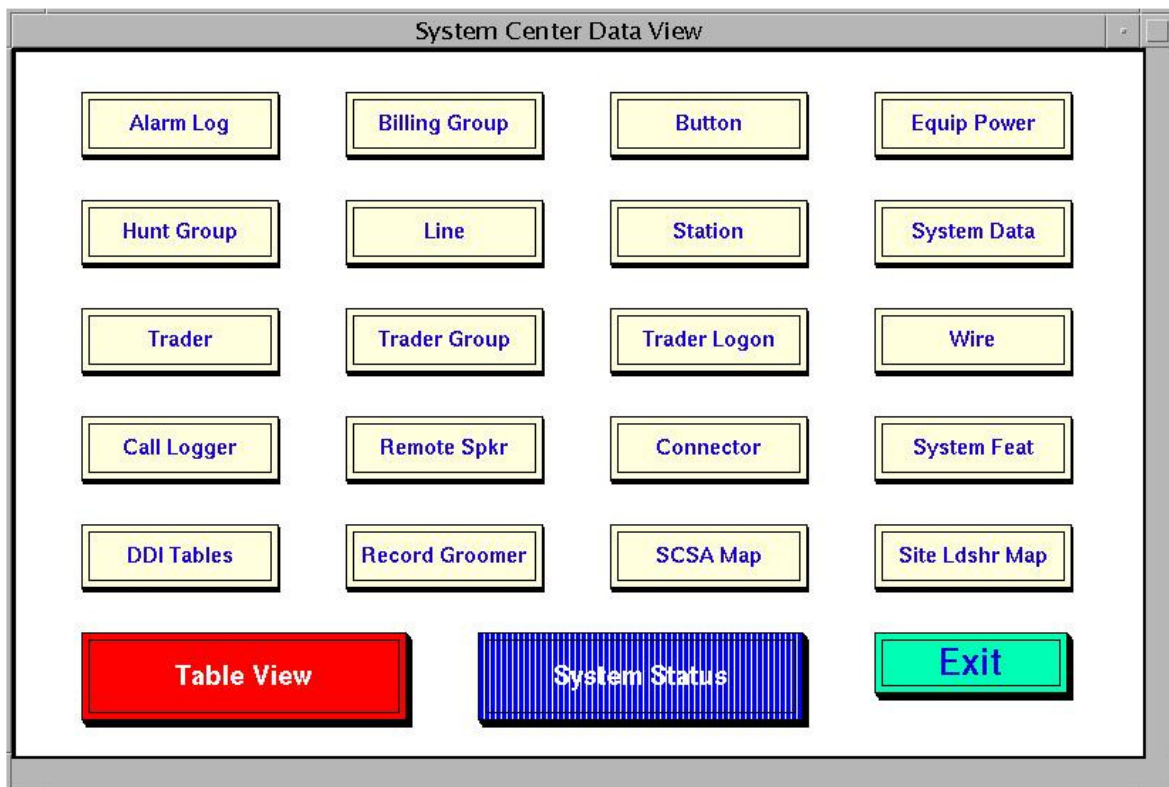


The **Table View** screen is displayed. Click **Engineering Groups & Params**.

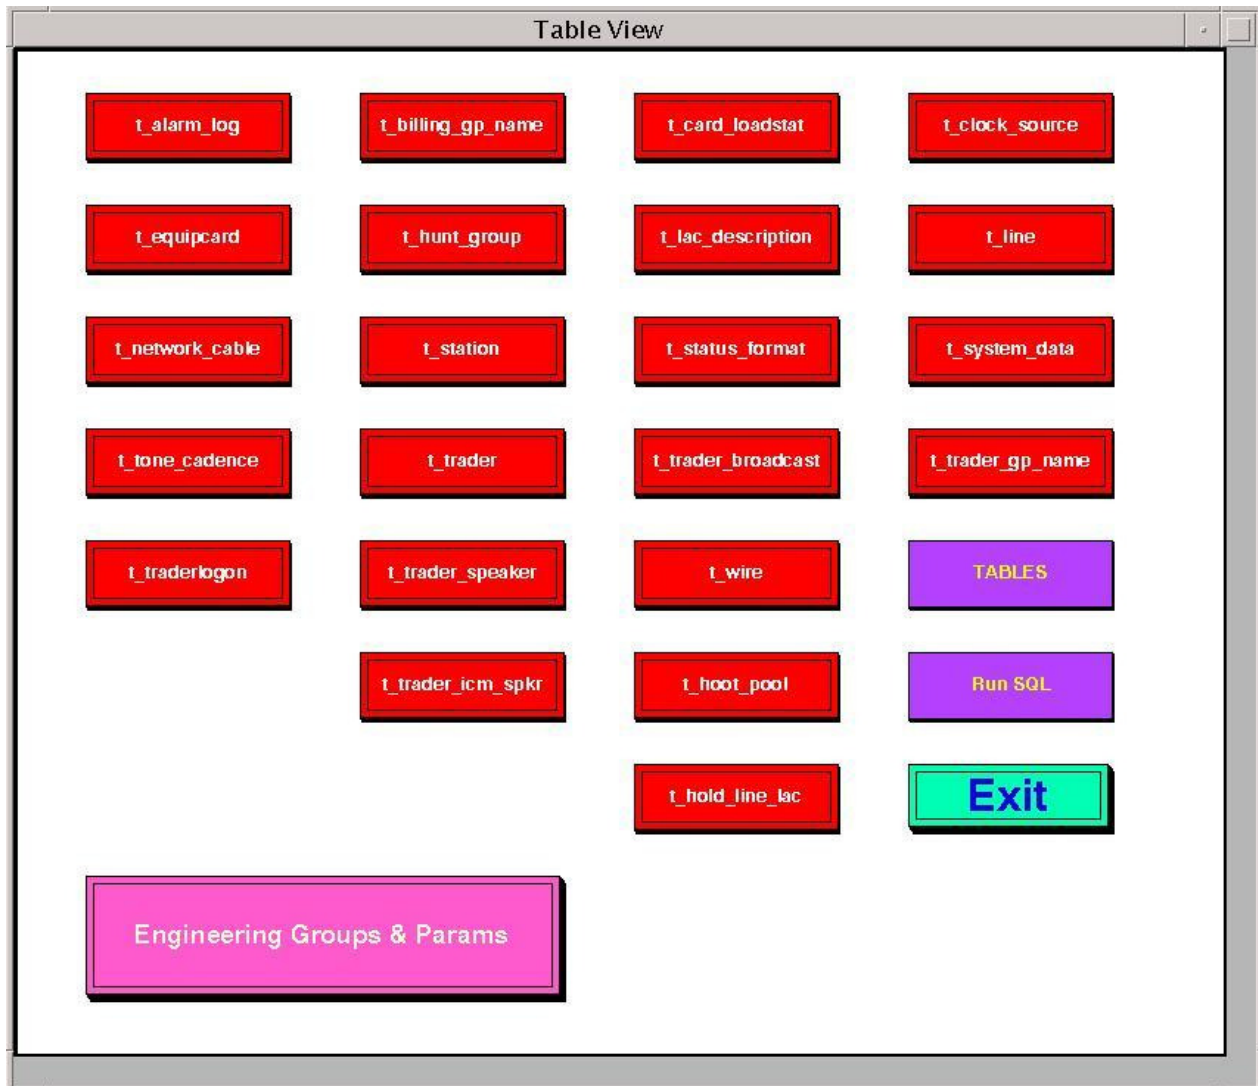

The **Engineering Parameters View** screen is displayed next. Click **Wire**.

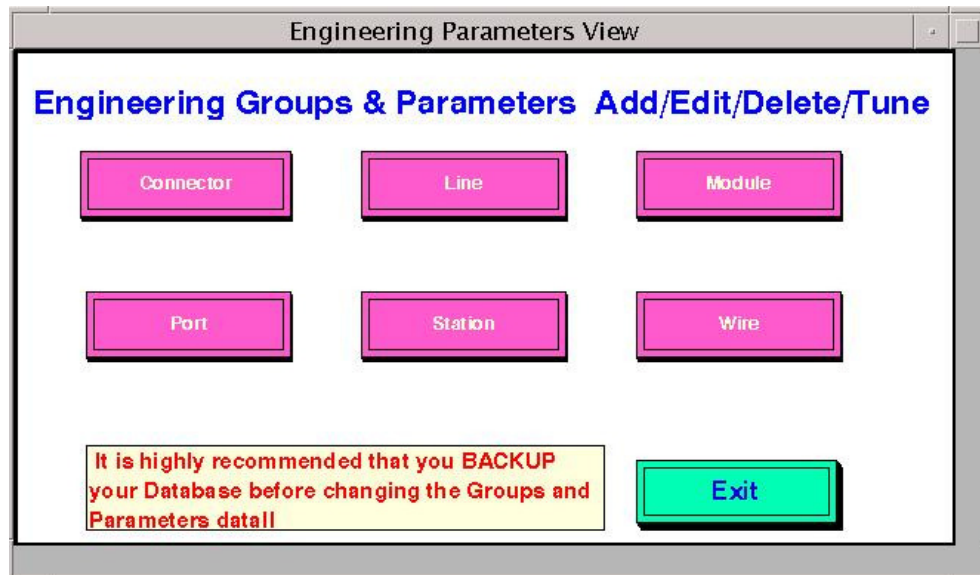

The **Wire Groups & Parameters Menu** screen is displayed. In the **Wire Groups** sub-section, scroll down and select "QSIG". Click **Edit**.

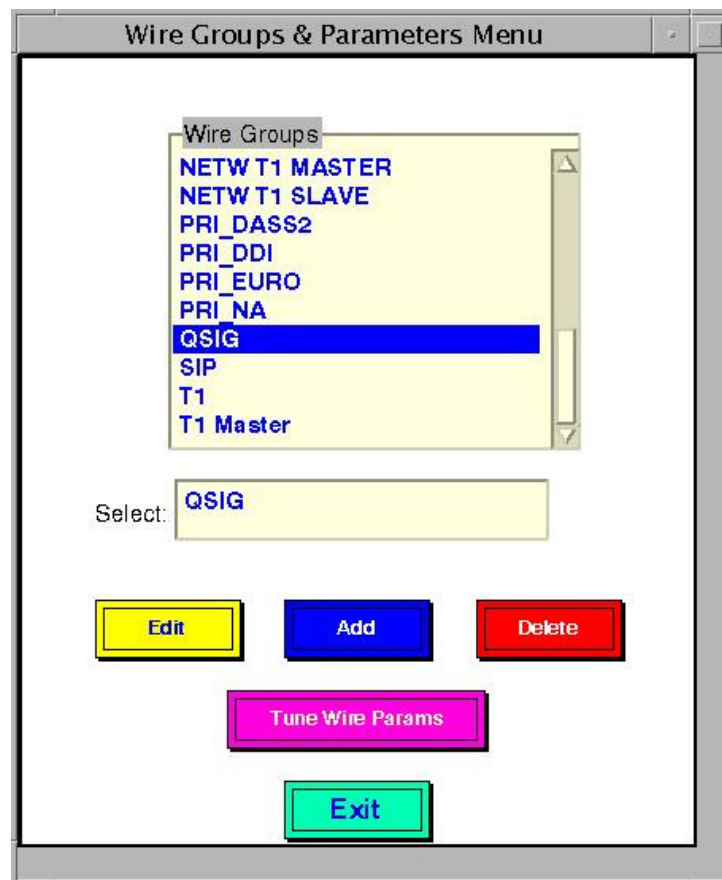

The **p\_Wire Edit Group** screen is displayed next. Scroll down the screen as necessary to locate the entry with **Param Id** of “142”. Double click on the corresponding **Param Value** field, and enter “1” to denote IPC as the slave in the ISDN connection.

Locate the entry with **Param Id** of “143”. Double click on the corresponding **Param Value** field, and enter “1” to enable **CRC4\_ENABLE**.

|    | D           | E         | F         | G              | H                                       | I          | J        | K        | L |
|----|-------------|-----------|-----------|----------------|---|------------|----------|----------|---|
|    | Param Value | Param Min | Param Max | Param Name     | Param Description                       | Param Type | Param Id | Group Id |   |
| 75 | 32767       | 1         | 32767     | DSP_TERM_ATTEN | DSP TERM threshold                      | number     | 141      | 19       |   |
| 76 | 1           | 0         | 1         | TIMING_MODE    | 0=Master, 1=Slave; Used on any T1 or E1 | enum       | 142      | 19       |   |
| 77 | 1           | 0         | 1         | CRC4_ENABLE    | CRC4 Enable; 0=Disable, 1=Enable for E1 | enum       | 143      | 19       |   |
| 78 | 3           | 1         | 26        | BUILD_TYPE     | 0=none; defined in Compatibility Base   | enum       | 147      | 19       |   |
| 79 | 3           | 1         | 85        | CARD_TYPE      | Card Type Required for this wire        | enum       | 163      | 19       |   |

Scroll down the screen as necessary to locate the entry with **Param Id** of “327”. Double click on the corresponding **Param Value** field, and enter “1” to enable Alliance to send tones.

Locate the entry with **Param Id** of “358”. Double click on the corresponding **Param Value** field, and enter “2” for **VIRTUAL\_MASTER**. This value indicates the IPC side is set to “Peer-Slave” on the QSIG trunk.

|     | D           | E         | F         | G                | H                                       | I          | J        | K        | L |
|-----|-------------|-----------|-----------|------------------|---|------------|----------|----------|---|
|     | Param Value | Param Min | Param Max | Param Name       | Param Description                       | Param Type | Param Id | Group Id |   |
| 136 | 200         | 1         | 32767     | FRM_SLIP_CLR_TIM | Duration (sec) to clear alarm           | number     | 258      | 19       |   |
| 137 | 1           | 0         | 1         | SUPV_TONES       | 0=Carrier Sends Tones, 1=MX Sends Tones | number     | 327      | 19       |   |
| 138 | 8           | 1         | 10        | PRI_PROTOCOL     | Picking List Available                  | enum       | 328      | 19       |   |
| 139 | 0           | 0         | 2         | SERV_IND_CODE    | 0=Telephony, 1=Categ. 1, 2=Categ. 2     | number     | 329      | 19       |   |
| 140 | 2000        | 10        | 32767     | HDLC_TX_DET_TIME | HDLC error detect time (msec)           | number     | 350      | 19       |   |
| 141 | 80          | 1         | 32767     | HDLC_TX_DET_THR  | HDLC error detect threshold             | number     | 351      | 19       |   |
| 142 | 2000        | 10        | 32767     | HDLC_TX_CLR_TIME | HDLC error clear time (msec)            | number     | 352      | 19       |   |
| 143 | 72          | 0         | 32767     | HDLC_TX_CLR_THR  | HDLC error clear threshold              | number     | 353      | 19       |   |
| 144 | 2000        | 10        | 32767     | HDLC_RX_DET_TIME | HDLC error detect time (msec)           | number     | 354      | 19       |   |
| 145 | 80          | 1         | 32767     | HDLC_RX_DET_THR  | HDLC error detect threshold             | number     | 355      | 19       |   |
| 146 | 2000        | 10        | 32767     | HDLC_RX_CLR_TIME | HDLC error clear time (msec)            | number     | 356      | 19       |   |
| 147 | 72          | 0         | 32767     | HDLC_RX_CLR_THR  | HDLC error clear threshold              | number     | 357      | 19       |   |
| 148 | 2           | 1         | 2         | VIRTUAL_MASTER   | PBX A/X = 1, PBX B/Y = 2                | number     | 358      | 19       |   |
| 149 | 0           | -5        | 5         | TERM_SHIFT       | gain, loss into ipc network             | enum       | 362      | 19       |   |

Scroll down the screen as necessary to locate entries with **Param Id** of “364-374” and “603-604”. Double click on the corresponding **Param Value** field, and set the values as shown below.

- **INTERDIGIT\_TO:** “0”
- **PBX\_PROVIDER:** “1”
- **CHANNEL\_TIMESLOT:** “2”
- **VM\_SERVER:** “2”
- **CFT1\_TIMEOUT:** “10000”
- **MAX\_DIVERTS:** “6”
- **FS\_ENABLE:** “3”
- **FS\_DELAY:** “200”
- **DDI\_TIMEOUT:** “2000”
- **Type of Number:** “1”
- **Numbering Plan:** “1”
- **BEARER\_CAP\_IE\_CODE:** “1”
- **COMPANDING\_METHOD:** “0”

Note that the MAX\_DIVERTS value should match the Maximum Number Of Call Forwarding Hops from **Section 5.4**.

Also note that the COMPANDING\_METHOD in Alliance should match the Avaya side in **Section 5.5**. During the compliance test, both Alaw and MuLaw were successfully tested.

Follow the system load procedure in [2] to reboot the QSIG trunk card.

| p.Wire Edit Group |             |           |           |                   |  |            |          |          |   |
|-------------------|-------------|-----------|-----------|-------------------|--|------------|----------|----------|---|
| 1                 | D           | E         | F         | G                 | H  | I          | J        | K        | L |
| 1                 | Param Value | Param Min | Param Max | Param Name        | Param Description                        | Param Type | Param Id | Group Id |   |
| 150               | 0           | -5        | 5         | PERIPH_SHIFT      | gain/loss into public network            | enum       | 363      | 19       |   |
| 151               | 0           | 0         | 32        | INTERDIGIT_TO     | interdigit timeout for enbloc signaling  | number     | 364      | 19       |   |
| 152               | 1           | 1         | 7         | PBX_PROVIDER      | 7,DEF,AVYA,NRTL,ERISN,MITL,SMNS,CS21     | enum       | 365      | 19       |   |
| 153               | 2           | 1         | 2         | CHANNEL_TIMESLOT  | CHANNEL = 1, TIMESLOT = 2                | number     | 366      | 19       |   |
| 154               | 2           | 1         | 5         | VM_SERVER         | 1-5,NONE,AUDIX,NORTEL,OCTEL,DEFAULT      | enum       | 367      | 19       |   |
| 155               | 10000       | 200       | 20000     | CFT1_TIMEOUT      | Time(msec) to Wait for Response to Dvrt  | number     | 368      | 19       |   |
| 156               | 6           | 1         | 15        | MAX_DIVERTS       | Max Number of Diverts per Call           | number     | 369      | 19       |   |
| 157               | 3           | 0         | 4         | FS_ENABLE         | 0-4,Off, Imm&Busy, RNA, All, Always FS   | number     | 370      | 19       |   |
| 158               | 200         | 200       | 10000     | FS_DELAY          | Time(msec) to Wait B4 Forward Switching  | number     | 371      | 19       |   |
| 159               | 2000        | 200       | 10000     | DDI_TIMEOUT       | Time(msec) to Wait for Next Digit        | number     | 372      | 19       |   |
| 160               | 1           | 1         | 5         | Type of Number    | 1-5,UNKNOWN,INTL,NAT,LOC,OVERLAP         | number     | 373      | 19       |   |
| 161               | 1           | 1         | 4         | Numbering Plan    | 1-4,UNKNOWN,E,164,E,163,PRIVATE          | number     | 374      | 19       |   |
| 162               | 1           | 1         | 5         | LN RECORDS        | 1-5,NONE,MX,PBX,MWI,DISC,All             | enum       | 375      | 19       |   |
| 163               | 1           | 0         | 1         | BEARER_CAP_IE_CO  | 0-1,u-Law, A-Law Companding Value in Bea | number     | 603      | 19       |   |
| 164               | 0           | 0         | 1         | COMPANDING_METHOD | 0-1/A-Law, u-Law Actual Companding Methc | number     | 604      | 19       |   |
| 165               | 0           | 0         | 1         | Send * and #      | OFF = 0, ON = 1                          | number     | 602      | 19       |   |

## 7. Verification Steps

This section provides the tests that can be performed to verify proper configuration of Communication Manager and IPC Alliance MX.

From the Communication Manager SAT interface, verify the status of the ISDN trunk group by using the “status trunk n” command, where “n” is the ISDN trunk group number administered in **Section 5.6**. Verify that all trunks are in the “in-service/idle” state as shown below.

|                    |         |                 |                           |      |   |
|--------------------|---------|-----------------|---------------------------|------|---|
| status trunk 70    |         |                 |                           | Page | 1 |
| TRUNK GROUP STATUS |         |                 |                           |      |   |
| Member             | Port    | Service State   | Mtce Connected Ports Busy |      |   |
| 0070/001           | 001V801 | in-service/idle | no                        |      |   |
| 0070/002           | 001V802 | in-service/idle | no                        |      |   |
| 0070/003           | 001V803 | in-service/idle | no                        |      |   |
| 0070/004           | 001V804 | in-service/idle | no                        |      |   |
| 0070/005           | 001V805 | in-service/idle | no                        |      |   |
| 0070/006           | 001V806 | in-service/idle | no                        |      |   |
| 0070/007           | 001V807 | in-service/idle | no                        |      |   |
| 0070/008           | 001V808 | in-service/idle | no                        |      |   |
| 0070/009           | 001V809 | in-service/idle | no                        |      |   |
| 0070/010           | 001V810 | in-service/idle | no                        |      |   |
| 0070/011           | 001V811 | in-service/idle | no                        |      |   |
| 0070/012           | 001V812 | in-service/idle | no                        |      |   |
| 0070/013           | 001V813 | in-service/idle | no                        |      |   |
| 0070/014           | 001V814 | in-service/idle | no                        |      |   |

Verify the status of the ISDN signaling groups by using the “status signaling-group n” command, where “n” is the ISDN signaling group number administered in **Section 5.7**. Verify that the signaling group is “in-service” as indicated in the **Group State** and **Level 3 State** fields shown below.

|   |                           |
|---|---------------------------|
| status signaling-group 70                     |                           |
| STATUS SIGNALING GROUP                        |                           |
| Group ID: 70                                  | Active NCA-TSC Count: 0   |
| Group Type: isdn-pri                          | Active CA-TSC Count: 0    |
| Signaling Type: facility associated signaling |                           |
| Group State: in-service                       |                           |
| Primary D-Channel                             |                           |
| Port: 001V816                                 | Level 3 State: in-service |
| Secondary D-Channel                           |                           |
| Port:   | Level 3 State: no-link    |

## 8. Conclusion

These Application Notes describe the configuration steps required for IPC Alliance MX 15.03 to successfully interoperate with Avaya Aura® Communication Manager 6.2 using QSIG trunks. All feature and serviceability test cases were completed.

## 9. Additional References

This section references the product documentation relevant to these Application Notes.

1. *Administering Avaya Aura® Communication Manager*, Document 03-300509, Issue 8, Release 6.3, May 2013 available at <http://support.avaya.com>.
2. *IPC PATCH 15.03.00.18 Intall Guide*, Revision Number 19, February 2013, available upon request to IPC Support.

---

**©2013 Avaya Inc. All Rights Reserved.**

Avaya and the Avaya Logo are trademarks of Avaya Inc. All trademarks identified by ® and ™ are registered trademarks or trademarks, respectively, of Avaya Inc. All other trademarks are the property of their respective owners. The information provided in these Application Notes is subject to change without notice. The configurations, technical data, and recommendations provided in these Application Notes are believed to be accurate and dependable, but are presented without express or implied warranty. Users are responsible for their application of any products specified in these Application Notes.

Please e-mail any questions or comments pertaining to these Application Notes along with the full title name and filename, located in the lower right corner, directly to the Avaya DevConnect Program at [devconnect@avaya.com](mailto:devconnect@avaya.com).