



Avaya Solution & Interoperability Test Lab

Application Notes for Configuring Avaya Aura® Communication Manager R6.3 as an Evolution Server, Avaya Aura® Session Manager R6.3 and Avaya Session Border Controller for Enterprise to support Vodafone UK SIP Trunk Service - Issue 1.0

Abstract

These Application Notes describe the steps used to configure Session Initiation Protocol (SIP) trunking between Vodafone UK SIP Trunk Service and an Avaya SIP enabled enterprise solution. The Avaya solution consists of Avaya Session Border Controller for Enterprise, Avaya Aura® Session Manager and Avaya Aura® Communication Manager as an Evolution Server. Vodafone UK is a member of the DevConnect Service Provider program.

Information in these Application Notes has been obtained through DevConnect compliance testing and additional technical discussions. Testing was conducted via the DevConnect Program at the Avaya Solution and Interoperability Test Lab.

1. Introduction

These Application Notes describe the steps used to configure Session Initiation Protocol (SIP) trunking between Vodafone UK's SIP Trunk Service and an Avaya SIP-enabled enterprise solution. The Avaya solution consists of Avaya Session Border Controller for Enterprise (Avaya SBCE), Avaya Aura® Session Manager and Avaya Aura® Communication Manager. Customers using this Avaya SIP-enabled enterprise solution with Vodafone UK SIP Trunk Service are able to place and receive PSTN calls via a dedicated Internet connection and the SIP protocol. This converged network solution is an alternative to traditional PSTN trunks. This approach generally results in lower cost for the enterprise customer.

2. General Test Approach and Test Results

The general test approach was to configure a simulated enterprise site using an Avaya SIP telephony solution consisting of Communication Manager, Session Manager and Avaya SBCE. The enterprise site was configured to use the SIP Trunking Service provided by Vodafone UK.

DevConnect Compliance Testing is conducted jointly by Avaya and DevConnect members. The jointly-defined test plan focuses on exercising APIs and/or standards-based interfaces pertinent to the interoperability of the tested products and their functionalities. DevConnect Compliance Testing is not intended to substitute full product performance or feature testing performed by DevConnect members, nor is it to be construed as an endorsement by Avaya of the suitability or completeness of a DevConnect member's solution.

2.1. Interoperability Compliance Testing

The interoperability test included the following:

- Incoming calls to the enterprise site from PSTN phones using the SIP Trunk provided by Vodafone UK, calls made to SIP, H.323, Digital and Analogue telephones at the enterprise.
- All inbound PSTN calls were routed to the enterprise across the SIP trunk to Vodafone.
- Outgoing calls from the enterprise site completed via Vodafone UK's SIP Trunk to PSTN destinations, calls made from SIP, H.323, Digital and Analogue telephones.
- All outbound PSTN calls were routed from the enterprise across the SIP trunk to Vodafone.
- Inbound and outbound PSTN calls to/from Avaya One-X Communicator and Avaya Flare® Experience for Windows softphones.
- Calls using the G.729 and G.711A codecs.
- Caller ID Presentation and Caller ID Restriction
- DTMF transmission using RFC 2833
- Voice Mail/Vector navigation for inbound and outbound calls
- User features such as hold and resume, transfer and conference
- Call coverage and call forwarding for endpoints at the enterprise site
- Off-net call forwarding and twinning
- Transmission and response of SIP OPTIONS messages sent by Vodafone UK's SIP Trunk requiring Avaya response and sent by Avaya requiring Vodafone UK response.

2.2. Test Results

Interoperability testing of the sample configuration was completed with successful results for Vodafone UK's SIP Trunk Service with the following observations:

- T.38 Fax transmission is not supported by Vodafone therefore inbound and outbound fax was tested successfully using G.711 pass-through.
- When an inbound call was not answered, the Vodafone network played announcement "Sorry there is no reply" after three minutes followed by "480 Temporary Unavailable Response".
- When there were no matching codecs in the SDP offer of an outbound call, "503 Service Unavailable" response was returned from the Vodafone network. The more commonly used response is "488 Not Acceptable Here".
- Inbound Toll-Free calls were not tested as no Toll-Free access was available for test.
- Emergency Services access was not tested as an Emergency Services test call was not booked with the Operator.

2.3. Support

For technical support on the Avaya products described in these Application Notes visit <http://support.avaya.com>.

For technical support on Vodafone products described in these Application Notes, please visit the website at <http://www.vodafone.co.uk/business/business-solutions/unified-communications/index.htm> or contact an authorized Vodafone representative.

3. Reference Configuration

The following equipment in **Figure 1** illustrates the test configuration. The test configuration shows an Enterprise site connected to Vodafone UK's SIP Trunk. Located at the Enterprise site is an Avaya Session Border Controller for Enterprise, Session Manager and Communication Manager. Endpoints are Avaya 96x0 series and Avaya 96x1 series IP telephones (with SIP and H.323 firmware), Avaya 46xx series IP telephones (with H.323 firmware), Avaya 16xx series IP telephones (with H.323 firmware), Avaya A175 Desktop Video Device running Avaya Flare® Experience (audio only), Avaya analogue telephones and an analogue fax machine. Also included in the test configuration was an Avaya one-X® Communicator soft phone and Avaya Flare® Experience for Windows running on a laptop PC.

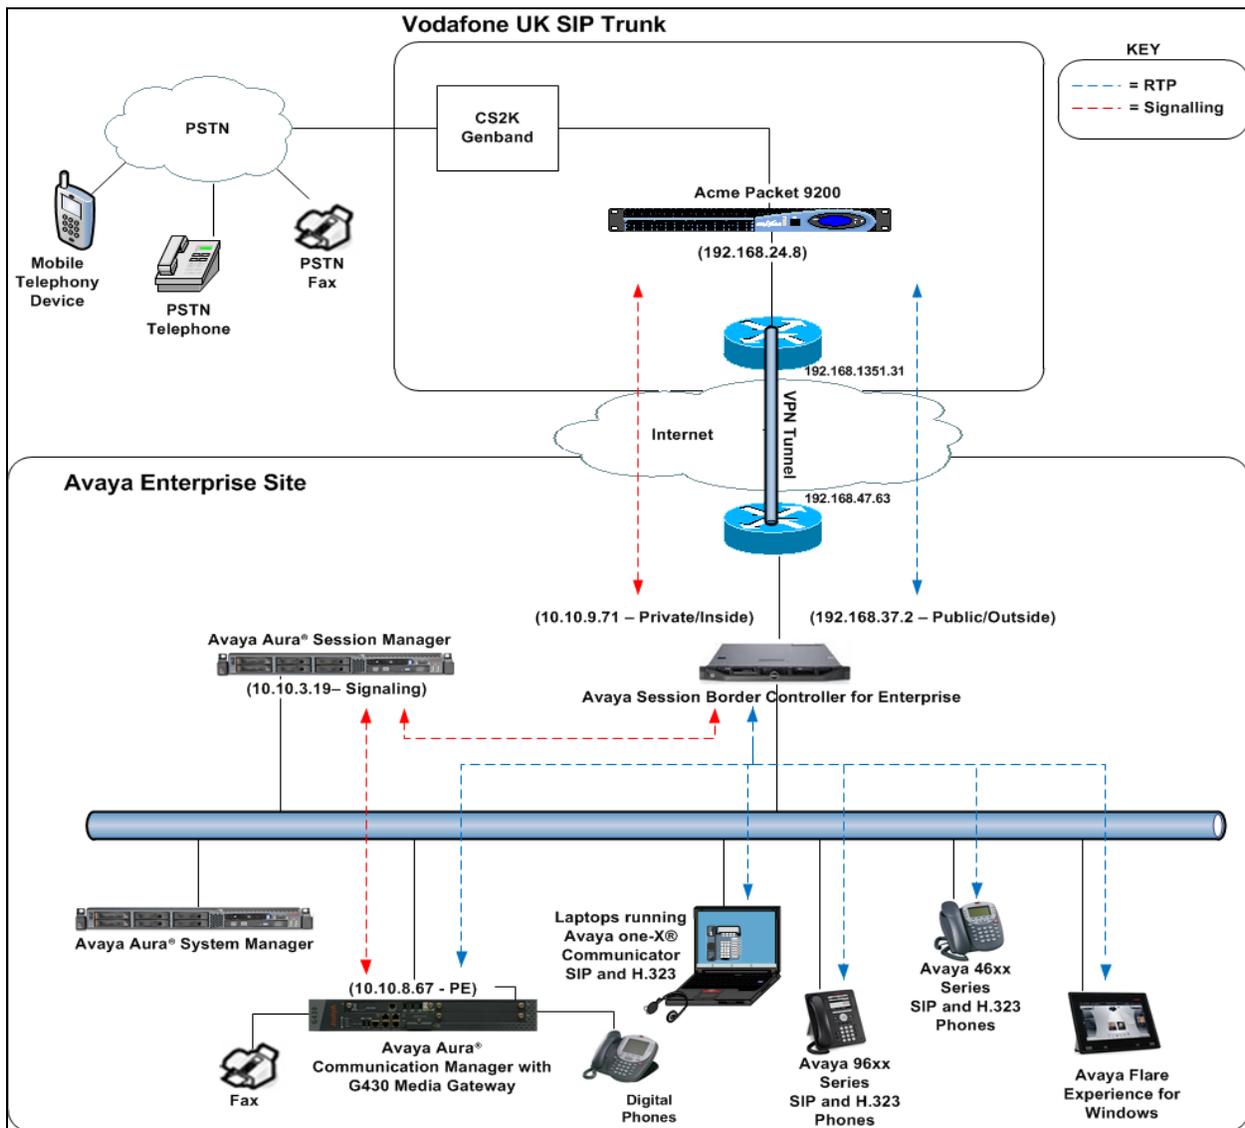


Figure 1: Test Setup Vodafone UK SIP Trunk to Avaya Enterprise

4. Equipment and Software Validated

The following equipment and software were used for the sample configuration provided:

Equipment/Software	Release/Version
Avaya	
Dell PowerEdge R620 running Avaya Aura® Session Manager on VM Version 8	R6.3.9 - 6.3.9.0.639011
Dell PowerEdge R620 running Avaya Aura® System Manager on VM Version 8	R6.3.9 - Build No. - 6.3.0.8.5682-6.3.8.4417 Software Update Revision No: 6.3.9.1.2538
Avaya S8800 Server running Avaya Aura® Communication Manager	R016x.03.0.124.0 -21291
Avaya Session Border Controller for Enterprise	6.2.1.Q16
Avaya 9670 IP DeskPhone (H.323)	6.3
Avaya 96x0 IP DeskPhone (H.323)	6.3
Avaya 9611 IP DeskPhone (SIP)	6.2.2
Avaya 9608 IP DeskPhone (SIP)	6.2.2
Avaya 9621 IP DeskPhone (SIP)	6.2.2
Avaya 9608 IP DeskPhone (SIP)	R6.2 SP1
Avaya one-X® Communicator (H.323) on Lenovo T510 Laptop PC	6.1.8.06-SP8-40314
Avaya Flare® Experience for Windows	1.1.3.14
Avaya Digital Handset	N/A
Analogue Handset	N/A
Analogue Fax	N/A
Vodafone UK	
Genband C20 (CS2KCompact) Softswitch	CVM14 (MCP 14.0.16.3)
ACME Packet Net-Net 9200 SBC	SD7.1.0 MR-6 Patch 3 (build 671)

5. Configure Avaya Aura® Communication Manager

This section describes the steps for configuring Communication Manager for SIP Trunking. SIP trunks are established between Communication Manager and Session Manager. These SIP trunks will carry SIP signalling associated with the Vodafone SIP Trunk. For incoming calls, the Session Manager receives SIP messages from the Avaya SBC for Enterprise (Avaya SBCE) and directs the incoming SIP messages to Communication Manager. Once the message arrives at Communication Manager, further incoming call treatment, such as incoming digit translations and class of service restrictions may be performed. All outgoing calls to the PSTN are processed within Communication Manager and may be first subject to outbound features such as automatic route selection, digit manipulation and class of service restrictions. Once Communication Manager selects a SIP trunk, the SIP signalling is routed to the Session Manager. The Session Manager directs the outbound SIP messages to the Avaya SBCE at the enterprise site that then sends the SIP messages to the Vodafone network. Communication Manager configuration was

performed using the System Access Terminal (SAT). Some screens in this section have been abridged and highlighted for brevity and clarity in presentation. The general installation of the Servers and Avaya G430 Media Gateway is presumed to have been previously completed and is not discussed here.

5.1. Confirm System Features

The license file installed on the system controls the maximum values for these attributes. If a required feature is not enabled or there is insufficient capacity, contact an authorized Avaya sales representative to add additional capacity. Use the **display system-parameters customer-options** command and on **Page 2**, verify that the **Maximum Administered SIP Trunks** supported by the system is sufficient for the combination of trunks to the Vodafone UK SIP Trunk network, and any other SIP trunks used.

display system-parameters customer-options		Page 2 of 11
OPTIONAL FEATURES		
IP PORT CAPACITIES		USED
Maximum Administered H.323 Trunks:	12000	0
Maximum Concurrently Registered IP Stations:	18000	3
Maximum Administered Remote Office Trunks:	12000	0
Maximum Concurrently Registered Remote Office Stations:	18000	0
Maximum Concurrently Registered IP eCons:	414	0
Max Concur Registered Unauthenticated H.323 Stations:	100	0
Maximum Video Capable Stations:	41000	0
Maximum Video Capable IP Softphones:	18000	0
Maximum Administered SIP Trunks:	24000	10
Maximum Administered Ad-hoc Video Conferencing Ports:	24000	0
Maximum Number of DS1 Boards with Echo Cancellation:	522	0
Maximum TN2501 VAL Boards:	128	0
Maximum Media Gateway VAL Sources:	250	1
Maximum TN2602 Boards with 80 VoIP Channels:	128	0
Maximum TN2602 Boards with 320 VoIP Channels:	128	0
Maximum Number of Expanded Meet-me Conference Ports:	300	0

On **Page 4**, verify that **IP Trunks** field is set to **y**.

```

display system-parameters customer-options                               Page 4 of 11
                                OPTIONAL FEATURES

Emergency Access to Attendant? y                                     IP Stations? y
  Enable 'dadmin' Login? y
  Enhanced Conferencing? y                                         ISDN Feature Plus? n
    Enhanced EC500? y                                             ISDN/SIP Network Call Redirection? y
Enterprise Survivable Server? n                                     ISDN-BRI Trunks? y
  Enterprise Wide Licensing? n                                     ISDN-PRI? y
    ESS Administration? y                                         Local Survivable Processor? n
  Extended Cvg/Fwd Admin? y                                       Malicious Call Trace? y
  External Device Alarm Admin? y                                   Media Encryption Over IP? y
  Five Port Networks Max Per MCC? n                               Mode Code for Centralized Voice Mail? n
    Flexible Billing? n
  Forced Entry of Account Codes? y                                 Multifrequency Signaling? y
  Global Call Classification? y                                   Multimedia Call Handling (Basic)? y
  Hospitality (Basic)? y                                         Multimedia Call Handling (Enhanced)? y
  Hospitality (G3V3 Enhancements)? y                             Multimedia IP SIP Trunking? y
    IP Trunks? y

IP Attendant Consoles? y

```

5.2. Administer IP Node Names

The node names defined here will be used in other configuration screens to define a SIP signalling group between Communication Manager and Session Manager. In the **IP Node Names** form, assign the node **Name** and **IP Address** for Session Manager. In this case, **SM100** and **10.10.3.19** are the **Name** and **IP Address** for the Session Manager SIP interface. Also note the **procr** name as this is the processor interface that Communication Manager will use as the SIP signalling interface to Session Manager.

```

display node-names ip
                                IP NODE NAMES

Name          IP Address
SM100       10.10.3.19
default      0.0.0.0
procr        10.10.8.67
procr6      ::

```

5.3. Administer IP Network Region

Use the **change ip-network-region x** command where x is the desired network-region to set the following values:

- The **Authoritative Domain** field is configured to match the domain name configured on Session Manager. In this configuration, the domain name is **avaya.com**.
- By default, **IP-IP Direct Audio** (both **Intra-** and **Inter-Region**) is enabled (**yes**) to allow audio traffic to be sent directly between endpoints without using gateway VoIP resources. When a PSTN call is shuffled, the media stream is established directly between the enterprise end-point and the internal media interface of the Avaya SBCE.
- The **Codec Set** is set to the number of the IP codec set to be used for calls within the IP network region. In this case, codec set **1** is used.
- The rest of the fields can be left at default values.

```
change ip-network-region 1                                     Page 1 of 20
                                                           IP NETWORK REGION
Region: 1
Location: 1          Authoritative Domain: avaya.com
Name: default       Stub Network Region: n
MEDIA PARAMETERS    Intra-region IP-IP Direct Audio: yes
                   Codec Set: 1       Inter-region IP-IP Direct Audio: yes
                   UDP Port Min: 2048 IP Audio Hairpinning? n
                   UDP Port Max: 3329
DIFFSERV/TOS PARAMETERS
Call Control PHB Value: 46
Audio PHB Value: 46
Video PHB Value: 26
802.1P/Q PARAMETERS
Call Control 802.1p Priority: 6
Audio 802.1p Priority: 6
Video 802.1p Priority: 5
H.323 IP ENDPOINTS  AUDIO RESOURCE RESERVATION PARAMETERS
                   RSVP Enabled? n
H.323 Link Bounce Recovery? y
Idle Traffic Interval (sec): 20
Keep-Alive Interval (sec): 5
Keep-Alive Count: 5
```

5.4. Administer IP Codec Set

Open the **IP Codec Set** form for the codec set specified in the IP Network Region form in **Section 5.3**. Enter the list of audio codec's eligible to be used in order of preference. For the interoperability test the codec supported by Vodafone was configured, namely **G.729** and **G.711A**.

```
change ip-codec-set 1 Page 1 of 2
```

IP Codec Set

Codec Set: 1

Audio Codec	Silence Suppression	Frames Per Pkt	Packet Size (ms)
1: G.729	n	2	20
2: G.711A	n	2	20

Vodafone SIP Trunk supports pass-through for transmission of fax. Navigate to **Page 2** and define fax properties as follows:

- Set the **FAX - Mode** to **pass-through**

```
change ip-codec-set 1 Page 2 of 2
```

IP Codec Set

Allow Direct-IP Multimedia? n

	Mode	Redundancy
FAX	pass-through	0
Modem	off	0
TDD/TTY	US	3
Clear-channel	n	0

5.5. Administer SIP Signalling Groups

This signalling group (and trunk group) will be used for inbound and outbound PSTN calls to the Vodafone SIP Trunk network. During test, this was configured to use TCP and port 5060 to facilitate tracing and fault analysis. It is recommended however, to use TLS (Transport Layer Security) and the default TLS port of 5061 for security. Configure the **Signaling Group** using the **add signaling-group x** command as follows:

- Set **Group Type** to **sip**.
- Set **Transport Method** to **tcp**.
- Set **Peer Detection Enabled** to **y** allowing Communication Manager to automatically detect if the peer server is a Session Manager.
- Set **Near-end Node Name** to the processor interface (node name **procr** as defined in the **IP Node Names** form shown in **Section 5.2**).
- Set **Far-end Node Name** to Session Manager (node name **SM100** as defined in the **IP Node Names** form shown in **Section 5.2**).
- Set **Near-end Listen Port** and **Far-end Listen Port** to **5060** (Commonly used TCP port value).
- Set **Far-end Network Region** to the IP Network Region configured in **Section 5.3**. (logically establishes the far-end for calls using this signalling group as network region 1)
- Leave **Far-end Domain** blank (allows Communication Manager to accept calls from any SIP domain on the associated trunk).
- Set **Direct IP-IP Audio Connections** to **y**.
- Set **Initial IP-IP Direct Media** to **n**.
- Leave **DTMF over IP** at default value of **rtp-payload** (Enables **RFC2833** for DTMF transmission from Communication Manager).

The default values for the other fields may be used.

```
add signaling-group 1                               Page 1 of 2
                                                    SIGNALING GROUP

Group Number: 1                                Group Type: sip
IMS Enabled? n                                Transport Method: tcp
Q-SIP? n
IP Video? n                                    Enforce SIPS URI for SRTP? y
Peer Detection Enabled? y Peer Server: SM
Prepend '+' to Outgoing Calling/Alerting/Diverting/Connected Public Numbers? y
Remove '+' from Incoming Called/Calling/Alerting/Diverting/Connected Numbers? n

Near-end Node Name: procr                       Far-end Node Name: SM100
Near-end Listen Port: 5060                     Far-end Listen Port: 5060
                                                    Far-end Network Region: 1

Far-end Domain:

Incoming Dialog Loopbacks: eliminate           Bypass If IP Threshold Exceeded? n
DTMF over IP: rtp-payload                     RFC 3389 Comfort Noise? n
Session Establishment Timer(min): 3            Direct IP-IP Audio Connections? y
Enable Layer 3 Test? y                       IP Audio Hairpinning? n
H.323 Station Outgoing Direct Media? n       Initial IP-IP Direct Media? n
                                                    Alternate Route Timer(sec): 6
```

5.6. Administer SIP Trunk Group

A trunk group is associated with the signalling group described in **Section 5.5**. Configure the trunk group using the **add trunk-group x** command, where **x** is an available trunk group. On **Page 1** of this form:

- Set the **Group Type** field to **sip**.
- Choose a descriptive **Group Name**.
- Specify a trunk access code (**TAC**) consistent with the dial plan.
- The **Direction** is set to **two-way** to allow incoming and outgoing calls.
- Set the **Service Type** field to **public-netwrk**.
- Specify the signalling group associated with this trunk group in the **Signaling Group** field as previously configured in **Section 5.5**.
- Specify the **Number of Members** supported by this SIP trunk group.

```
add trunk-group 1                                     Page 1 of 21
                                     TRUNK GROUP
Group Number: 1                                     Group Type: sip           CDR Reports: y
  Group Name: OUTSIDE CALL                         COR: 1                   TN: 1           TAC: 101
  Direction: two-way                               Outgoing Display? n
Dial Access? n                                     Night Service:
Queue Length: 0
Service Type: public-ntwrk                       Auth Code? n
                                                Member Assignment Method: auto
                                                Signaling Group: 1
                                                Number of Members: 10
```

On **Page 2** of the trunk-group form, the **Preferred Minimum Session Refresh Interval (sec)** field should be set to a value mutually agreed with Vodafone UK to prevent unnecessary SIP messages during call setup.

```
add trunk-group 1                                     Page 2 of 21
  Group Type: sip
TRUNK PARAMETERS
  Unicode Name: auto
                                                Redirect On OPTIM Failure: 10000
  SCCAN? n                                         Digital Loss Group: 18
                                                Preferred Minimum Session Refresh Interval(sec): 900
Disconnect Supervision - In? y Out? Y
  XOIP Treatment: auto   Delay Call Setup When Accessed Via IGAR? n
```

On **Page 3**, set the **Numbering Format** field to **public**. This allows delivery of CLI in formats other than E.164 with leading “+”.

```
add trunk-group 1                                     Page 3 of 21
TRUNK FEATURES
    ACA Assignment? n                               Measured: none
                                                    Maintenance Tests? y

    Numbering Format: public
                                                    UUI Treatment: service-provider
                                                    Replace Restricted Numbers? n
                                                    Replace Unavailable Numbers? n
```

On **Page 4** of this form:

- Set **Mark Users as Phone** to **y**.
- Set **Send Transferring Party Information** to **n**.
- Set **Network Call Direction** to **n**.
- Set **Send Diversion Header** to **y**.
- Set **Support Request History** to **n**.
- Set the **Telephone Event Payload Type** to **101** to match the value preferred by Vodafone UK.
- Set **Always Use re-INVITE for Display Updates** to **y**.
- Set the **Identity for Calling Party Display** to **P-Asserted-Identity**.

```
add trunk-group 1                                     Page 4 of 21
                                                    PROTOCOL VARIATIONS
                                                    Mark Users as Phone? y
Prepend '+' to Calling/Alerting/Diverting/Connected Number? n
    Send Transferring Party Information? n
    Network Call Redirection? n
                                                    Send Diversion Header? y
    Support Request History? n
    Telephone Event Payload Type: 101

    Convert 180 to 183 for Early Media? n
    Always Use re-INVITE for Display Updates? y
    Identity for Calling Party Display: P-Asserted-Identity
Block Sending Calling Party Location in INVITE? n
    Accept Redirect to Blank User Destination? n
                                                    Enable Q-SIP? n
```

5.7. Administer Calling Party Number Information

Use the **change private-unknown-numbering** command to configure Communication Manager to send the calling party number in the format required. This calling party number is sent in the SIP From, Contact and PAI headers, and displayed on display-equipped PSTN telephones.

```
public-unknown-numbering 1                               Page 1 of 2
                NUMBERING - PUBLIC/UNKNOWN FORMAT
Ext  Ext      Trk      CPN      Total
Len  Code     Grp(s)  Prefix  CPN
                                     Len
4   6010      1       44149xxxxxxx  12
4   6011      1       44149xxxxxxx  12
4   6012      1       44149xxxxxxx  12
4   6100      1       44149xxxxxxx  12
4   6102      1       44149xxxxxxx  12
Total Administered: 7
Maximum Entries: 240
Note: If an entry applies to
a SIP connection to Avaya
Aura(R) Session Manager,
the resulting number must
be a complete E.164 number.
Communication Manager
automatically inserts
a '+' digit in this case.
```

Note: The above configuration accepts all 4 digit numbers starting with 6, which includes all SIP and H.323 extension numbers, and passes them on with no prefix.

5.8. Administer Route Selection for Outbound Calls

In the test environment, the Automatic Route Selection (ARS) feature was used to route outbound calls via the SIP trunk to Vodafone's SIP Trunk. The single digit 9 was used as the ARS access code providing a facility for telephone users to dial 9 to reach an outside line. Use the **change feature-access-codes** command to configure a digit as the **Auto Route Selection (ARS) - Access Code 1**.

```
change feature-access-codes                             Page 1 of 10
                FEATURE ACCESS CODE (FAC)
Abbreviated Dialing List1 Access Code:
Abbreviated Dialing List2 Access Code:
Abbreviated Dialing List3 Access Code:
Abbreviated Dial - Prgm Group List Access Code:
Announcement Access Code: *69
Answer Back Access Code:
Attendant Access Code:
Auto Alternate Routing (AAR) Access Code: 7
Auto Route Selection (ARS) - Access Code 1: 9      Access Code 2:
```

Use the **change ars analysis** command to configure the routing of dialled digits following the first digit 9. A small sample of dial patterns are shown here as an example. Further administration of ARS is beyond the scope of this document. The example entries shown will match outgoing calls to numbers beginning 0. Note that exact maximum number lengths should be used where possible to reduce post-dial delay. Calls are sent to **Route Pattern 1**.

```

change ars analysis 0
ARS DIGIT ANALYSIS TABLE
Location: all
Percent Full: 0
Dialed      Total      Route      Call      Node      ANI
String      Min      Max      Pattern   Type      Num      Reqd
0           11      14      1         pubu      n
00          13      15      1         pubu      n
0035391    13      13      1         pubu      n
030        10      10      1         pubu      n
0800       8        10      1         pubu      n
0900       8        8        1         pubu      n
118        3        6        1         pubu      n

```

Use the **change route-pattern x** command, where **x** is an available route pattern, to add the SIP trunk group to the route pattern that ARS selects. In this configuration, route pattern **1** is used to route calls to trunk group **1**. **Numbering Format** is applied to CLI and is used to set TDM signalling parameters such as type of number and numbering plan indicator. This doesn't have the same significance in SIP calls and during testing it was set to **unk-unk**.

```

change route-pattern 1
Pattern Number: 1      Pattern Name:
SCCAN? n              Secure SIP? n
Grp FRL NPA Pfx Hop Toll No.  Inserted      DCS/ IXC
No   Mrk Lmt List Del  Digits        QSIG
                               Dgts          Intw
1: 1   0
2:
3:
4:
5:
6:
                               n   user
                               n   user
                               n   user
                               n   user
                               n   user
                               n   user
BCC VALUE  TSC CA-TSC      ITC BCIE Service/Feature PARM No. Numbering LAR
0 1 2 M 4 W      Request
                               Dgts Format
                               Subaddress
1: y y y y y n  n      rest      unk-unk  none
2: y y y y y n  n      rest      none
3: y y y y y n  n      rest      none
4: y y y y y n  n      rest      none
5: y y y y y n  n      rest      none
6: y y y y y n  n      rest      none

```

5.9. Administer Incoming Digit Translation

This step configures the settings necessary to map incoming DID calls to the proper Communication Manager extension(s). The incoming digits sent in the INVITE message from Vodafone UK can be manipulated as necessary to route calls to the desired extension. In the examples used in the compliance testing, the incoming DID numbers provided by Vodafone correlate to the internal extensions assigned within Communication Manager. The entries displayed below translates incoming DID numbers **0149xxxxxxx** to a 4 digit extension by deleting all of the incoming digits and inserting an extension. Public DID numbers have been masked for security purposes.

```
change inc-call-handling-trmt trunk-group 1                               Page 1 of 3
                                INCOMING CALL HANDLING TREATMENT
```

Service/ Feature	Number Len	Number Digits	Del	Insert
public-ntwrk	10	0149xxxxxxx25	all	6010
public-ntwrk	10	0149xxxxxxx26	all	6012
public-ntwrk	10	0149xxxxxxx27	all	6102

5.10. EC500 Configuration

When EC500 is enabled on the Communication Manager station, a call to that station will generate a new outbound call from Communication Manager to the configured EC500 destination, typically a mobile phone. The following screen shows an example EC500 configuration for the user with station extension 6102. Use the command **change off-pbx-telephone station-mapping x** where **x** is the Communication Manager station.

- The **Station Extension** field will automatically populate with station extension.
- For **Application** enter **EC500**.
- Enter a **Dial Prefix** (e.g., 9) if required by the routing configuration.
- For the **Phone Number** enter the phone that will also be called (e.g. **0035389434nnnn**).
- Set the **Trunk Selection** to **1** so that Trunk Group 1 will be used for routing.
- Set the **Config Set** to **1**.

```
change off-pbx-telephone station-mapping 2396                           Page 1 of 3
                                STATIONS WITH OFF-PBX TELEPHONE INTEGRATION
```

Station Extension	Application	Dial Prefix	CC	Phone Number	Trunk Selection	Config Set	Dual Mode
6102	EC500	-		0035389434nnnn	1	1	
-							

Note: The phone number shown is for a mobile phone used for testing at Avaya Labs and is in international format with international dialling prefix **00**. To use facilities for calls coming in from EC500 mobile phones, the number received in Communication Manager must exactly match the number specified in the above table.

Save Communication Manager changes by entering **save translation** to make them permanent.


6. Configuring Avaya Aura® Session Manager

This section provides the procedures for configuring Session Manager. Session Manager is configured via System Manager. The procedures include the following areas:

- Login to Avaya Aura® System Manager
- Administer SIP domain
- Administer Locations
- Administer Adaptations
- Administer SIP Entities
- Administer Entity Links
- Administer Routing Policies
- Administer Dial Patterns

6.1. Log in to Avaya Aura® System Manager

Access System Manager using a Web Browser by entering **http://<FQDN >/SMGR**, where **<FQDN>** is the fully qualified domain name of System Manager. Log in using appropriate credentials (not shown) and the **Home** tab will be presented with menu options shown below.

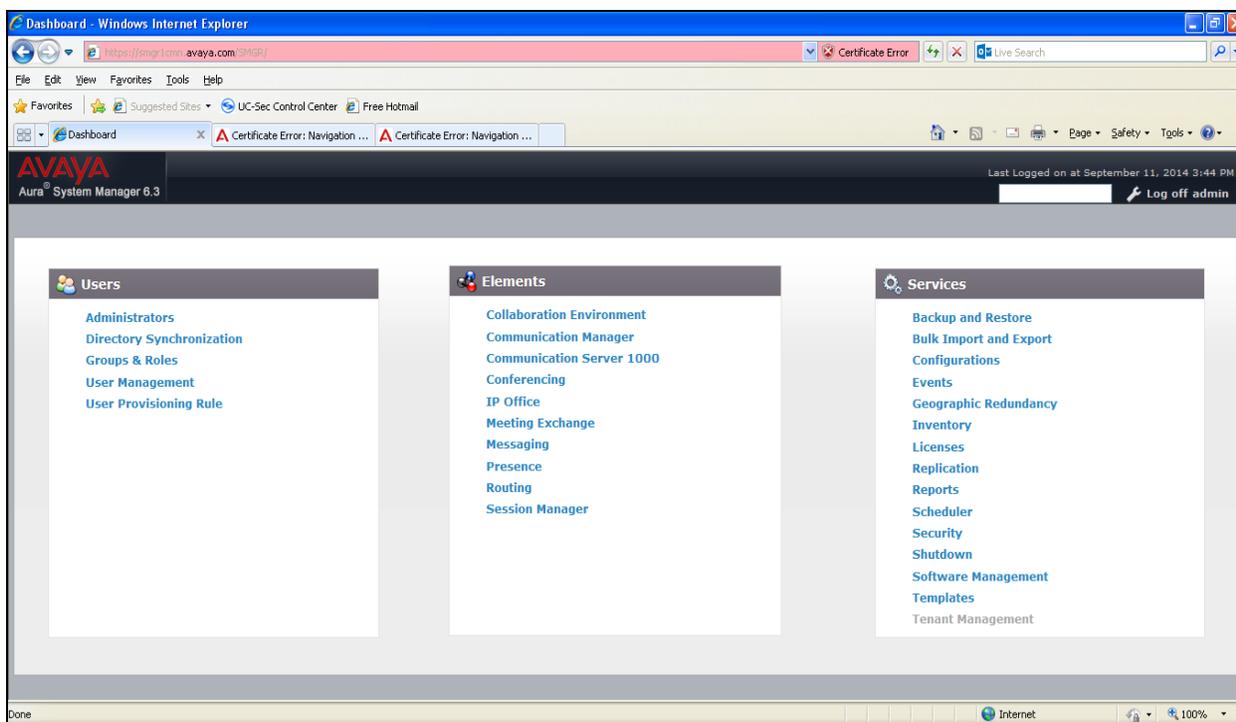


6.2. Administer SIP Domain

Create a SIP domain for each domain for which Session Manager will need to be aware in order to route calls. Expand **Elements** → **Routing** and select **Domains** from the left navigation menu, click **New** (not shown). Enter the following values and use default values for remaining fields.

- **Name** Enter a Domain Name. In the sample configuration, **avaya.com** was used.
- **Type** Verify **SIP** is selected.
- **Notes** Add a brief description [Optional].

Click **Commit** to save. The screen below shows the SIP Domain defined for the sample configuration.

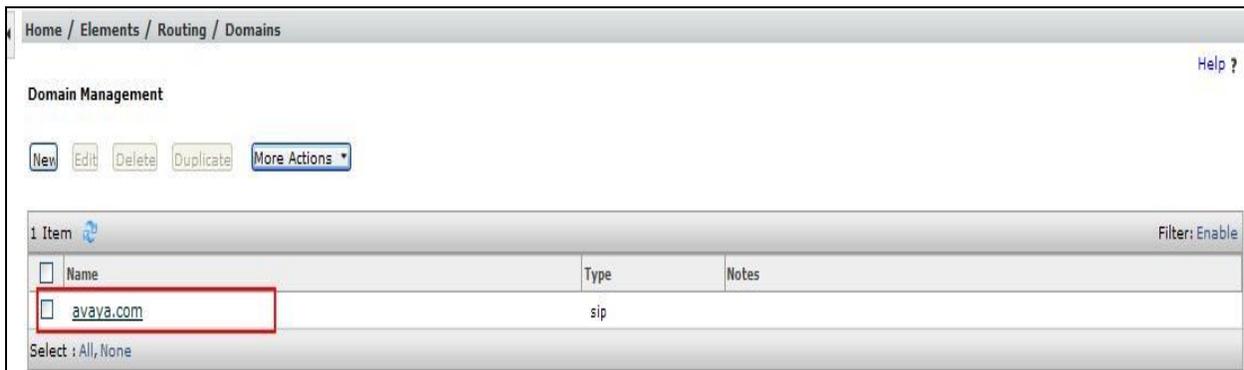

6.3. Administer Locations

Locations can be used to identify logical and/or physical locations where SIP Entities reside for purposes of bandwidth management and call admission control. To add a location, navigate to **Routing** → **Locations** in the left-hand navigation pane and click the **New** button in the right pane (not shown). In the **General** section, enter the following values. Use default values for all remaining fields:

- **Name:** Enter a descriptive name for the location.
- **Notes:** Add a brief description (optional).

The Location Pattern is used to identify call routing based on IP address. Session Manager matches the IP address against the patterns defined in this section. If a call is from a SIP Entity that does not match the IP address pattern then Session Manager uses the location administered for the SIP Entity.

In the **Location Pattern** section, click **Add** and enter the following values.

- **IP Address Pattern** Enter the logical pattern used to identify the location.
- **Notes** Add a brief description [Optional].

Click **Commit** to save. The screenshot below shows the Location **VM_SMGR** defined for the compliance testing.

Home / Elements / Routing / Locations

Location Details Commit Cancel

General

* Name:

Notes:

Dial Plan Transparency in Survivable Mode

Enabled:

Listed Directory Number:

Associated CM SIP Entity:

Overall Managed Bandwidth

Managed Bandwidth Units:

Total Bandwidth:

Multimedia Bandwidth:

Audio Calls Can Take Multimedia Bandwidth:

Per-Call Bandwidth Parameters

Maximum Multimedia Bandwidth (Intra-Location): Kbit/Sec

Maximum Multimedia Bandwidth (Inter-Location): Kbit/Sec

Location Pattern

Add Remove

7 Items Filter: Enable

<input type="checkbox"/>	IP Address Pattern	Notes
<input type="checkbox"/>	*10.10.2.*	
<input type="checkbox"/>	*10.10.3.*	
<input type="checkbox"/>	*10.10.5.*	
<input type="checkbox"/>	*10.10.73.*	
<input type="checkbox"/>	*10.10.8.*	
<input type="checkbox"/>	*10.10.9.*	
<input type="checkbox"/>	*	

Select : All, None

Commit Cancel

6.4. Administer Adaptations

Adaptations can be used to modify the called and calling party numbers to meet the requirements of the service. The called party number present in the SIP INVITE Request URI is modified by the **Digit Conversion** in the Adaptation. The example below was applied to the Avaya SBCE SIP Entity and was used during testing to convert numbers being passed between the Avaya SBCE and Session Manager.

To add an adaptation, under the **Routing** tab select **Adaptations** on the left hand menu and then click on the **New** button (not shown). Under **Adaption Details** → **General**:

- In the **Adaptation name** field enter an informative name.
- In the **Module name** field, click on the down arrow and then select the <click to add module> entry from the drop down list and type **DigitConversionAdapter** in the resulting New Module Name field.
- **Module parameter** **MIME =no** Strips MIME message bodies on egress from Session Manager.
fromto=true Modifies from and to headers of a message.

Home / Elements / Routing / Adaptations Help ?

Adaptation Details Commit Cancel

General

* Adaptation Name:

Module Name:

Module Parameter Type:

<input type="checkbox"/>	Name	Value
<input type="checkbox"/>	fromto	true
<input type="checkbox"/>	MIME	no

Select : All, None

Egress URI Parameters:

Notes:

6.5. Administer SIP Entities

A SIP Entity must be added for each SIP-based telephony system supported by a SIP connection to Session Manager. To add a SIP Entity, select **SIP Entities** on the left panel menu and then click on the **New** button (not shown). The following will need to be entered for each SIP Entity.

Under **General**:

- In the **Name** field enter an informative name
- In the **FQDN or IP Address** field enter the IP address of Session Manager or the signalling interface on the connecting system
- In the **Type** field use **Session Manager** for a Session Manager SIP Entity, **CM** for a Communication Manager SIP Entity and **SIP Trunk** for the Avaya SBCE SIP Entity
- In the **Location** field select the appropriate location from the drop down menu
- In the **Time Zone** field enter the time zone for the SIP Entity

In this configuration there are three SIP Entities.

- Session Manager SIP Entity
- Communication Manager SIP Entity
- Avaya SBCE SIP Entity

6.5.1. Avaya Aura® Session Manager SIP Entity

The following screens show the SIP entity for Session Manager. The **FQDN or IP Address** field is set to the IP address of the Session Manager SIP signalling interface and **Type** is **Session Manager**. Set the **Location** to that defined in **Section 6.3** and the **Time Zone** to the appropriate time.

Home / Elements / Routing / SIP Entities

SIP Entity Details Commit Cancel Help ?

General

* Name:

* FQDN or IP Address:

Type:

Notes:

Location:

Outbound Proxy:

Time Zone:

Credential name:

SIP Link Monitoring:

Session Manager must be configured with the port numbers on the protocols that will be used by the other SIP entities. To configure these scroll to the bottom of the page and under **Port**, click **Add**, then edit the fields in the resulting new row.

- In the **Port** field enter the port number on which the system listens for SIP requests.
- In the **Protocol** field enter the transport protocol to be used for SIP requests.
- In the **Default Domain** field, from the drop down menu select the domain added in **Section 6.2** as the default domain.

Port

TCP Failover port:

TLS Failover port:

Add Remove

3 Items Filter: Enable

<input type="checkbox"/>	Port	Protocol	Default Domain	Notes
<input type="checkbox"/>	5060	TCP	avaya.com	<input type="text"/>
<input type="checkbox"/>	5060	UDP	avaya.com	<input type="text"/>
<input type="checkbox"/>	5061	TLS	avaya.com	<input type="text"/>

Select : All, None

6.5.2. Avaya Aura® Communication Manager SIP Entity

The following screen shows the SIP entity for Communication Manager which is configured as an Evolution Server. The **FQDN or IP Address** field is set to the IP address of the interface on Communication Manager that will be providing SIP signalling and **Type** is **CM**. Set the **Location** to that defined in **Section 6.3** and the **Time Zone** to the appropriate time.

The screenshot shows the 'SIP Entity Details' configuration page. The 'General' section is highlighted. The 'Name' field is set to 'Communication_Manager'. The 'FQDN or IP Address' field is set to '10.10.8.67'. The 'Type' dropdown is set to 'CM'. The 'Location' dropdown is set to 'VM_SMGR'. The 'Time Zone' dropdown is set to 'Europe/Dublin'. The 'SIP Timer B/F (in seconds)' field is set to '4'. The 'Call Detail Recording' dropdown is set to 'none'. The 'Loop Detection Mode' dropdown is set to 'Off'. The 'SIP Link Monitoring' dropdown is set to 'Use Session Manager Configuration'. The 'Adaptation' dropdown is set to its default value. The 'Credential name' field is empty. The 'Notes' field is empty. The 'Commit' and 'Cancel' buttons are visible at the top right.

Other parameters can be set for the SIP Entity as shown in the following screenshot, but for test, these were left at default values.

The screenshot shows the 'Loop Detection' and 'SIP Link Monitoring' sections. The 'Loop Detection Mode' dropdown is set to 'Off'. The 'SIP Link Monitoring' dropdown is set to 'Use Session Manager Configuration'.

6.5.3. Avaya Session Border Controller for Enterprise SIP Entity

The following screen shows the SIP Entity for the Avaya SBCE. The **FQDN or IP Address** field is set to the IP address of the Avaya SBCE private network interface (see **Figure 1**). Set **Type** to **SIP Trunk** and **Adaptation** to that defined in **Section 6.4**. Set the **Location** to that defined in **Section 6.3** and the **Time Zone** to the appropriate time zone.

Home / Elements / Routing / SIP Entities Help ?

SIP Entity Details Commit Cancel

General

* Name: Avaya_SBCE

* FQDN or IP Address: 10.10.9.71

Type: SIP Trunk

Notes:

Adaptation: VodafoneUK

Location: VM_SMGR

Time Zone: Etc/GMT

* SIP Timer B/F (in seconds): 4

Credential name:

Call Detail Recording: egress

Loop Detection

Loop Detection Mode: Off

SIP Link Monitoring

SIP Link Monitoring: Use Session Manager Configuration

6.6. Administer Entity Links

A SIP trunk between a Session Manager and another system is described by an Entity Link. To add an Entity Link, select **Entity Links** on the left panel menu and click on the **New** button (not shown). Fill in the following fields in the new row that is displayed.

- In the **Name** field enter an informative name.
- In the **SIP Entity 1** field select **Session Manager**.
- In the **Protocol** field enter the transport protocol to be used to send SIP requests.
- In the **Port** field enter the port number to which the other system sends its SIP requests.
- In the **SIP Entity 2** field enter the other SIP Entity for this link, created in **Section 6.5**.
- In the **Port** field enter the port number to which the other system expects to receive SIP requests.
- Select **Trusted** from the drop-down menu to make the other system trusted.

Click **Commit** to save changes. The following screenshot shows the Entity Links used in this configuration.

<input type="checkbox"/>	Name	SIP Entity 1	Protocol	Port	SIP Entity 2	DNS Override	Port	Connection Policy	Deny New Service	Notes
<input type="checkbox"/>	Avaya_SBCE	Session_Manager	TCP	5060	Avaya_SBCE	<input type="checkbox"/>	5060	trusted	<input type="checkbox"/>	
<input type="checkbox"/>	Communication_Manager	Session_Manager	TCP	5060	Communication_Manager	<input type="checkbox"/>	5060	trusted	<input type="checkbox"/>	

6.7. Administer Routing Policies

Routing policies must be created to direct how calls will be routed to a system. To add a routing policy, select **Routing Policies** on the left panel menu and then click on the **New** button (not shown).

Under **General**:

- Enter an informative name in the **Name** field
- Under **SIP Entity as Destination**, click **Select**, and then select the appropriate SIP entity to which this routing policy applies
- Under **Time of Day**, click **Add**, and then select the time range

The following screen shows the routing policy for Communication Manager.

The screenshot shows the 'Routing Policy Details' configuration page. The 'General' section contains the following fields:

- Name:** to_Communication_Manager
- Disabled:**
- Retries:** 0
- Notes:** (empty text box)

The 'SIP Entity as Destination' section has a 'Select' button and a table with the following data:

Name	FQDN or IP Address	Type	Notes
Communication_Manager	10.10.8.67	CM	

The 'Time of Day' section has 'Add', 'Remove', and 'View Gaps/Overlaps' buttons. It displays a table with 1 item:

Ranking	Name	Mon	Tue	Wed	Thu	Fri	Sat	Sun	Start Time	End Time	Notes
0	24/7	<input checked="" type="checkbox"/>	00:00	23:59	Time Range 24/7						

At the bottom, there is a 'Select : All, None' option.

The following screen shows the Routing Policy for the Avaya SBCE.

The screenshot shows the 'Routing Policy Details' configuration page. The 'General' section is highlighted with a red box and contains the following fields:

- Name: to_Avaya_SBCE
- Disabled:
- Retries: 0
- Notes: (empty text box)

The 'SIP Entity as Destination' section includes a 'Select' button and a table with the following data:

Name	FQDN or IP Address	Type	Notes
Avaya_SBCE	10.10.9.71	SIP Trunk	

The 'Time of Day' section includes 'Add', 'Remove', and 'View Gaps/Overlaps' buttons. Below is a table showing the time range configuration:

Ranking	Name	Mon	Tue	Wed	Thu	Fri	Sat	Sun	Start Time	End Time	Notes
0	24/7	<input checked="" type="checkbox"/>	00:00	23:59	Time Range 24/7						

At the bottom, there is a 'Select : All, None' option.

6.8. Administer Dial Patterns

A dial pattern must be defined to direct calls to the appropriate telephony system. To configure a dial pattern select **Dial Patterns** on the left panel menu and then click on the **New** button (not shown).

Under **General**:

- In the **Pattern** field enter a dialled number or prefix to be matched.
- In the **Min** field enter the minimum length of the dialled number.
- In the **Max** field enter the maximum length of the dialled number.
- In the **SIP Domain** field select **ALL** or alternatively one of those configured in **Section 6.2**.

Under **Originating Locations and Routing Policies**:

- Click **Add**, in the resulting screen (not shown).
- Under **Originating Location**, select the location defined in **Section 6.3** or **ALL**.
- Under **Routing Policies** select one of the routing policies defined in **Section 6.7**.
- Click **Select** button to save.

The following screen shows an example dial pattern configured for the Avaya SBCE.

Dial Pattern Details Commit Cancel Help ?

General

* Pattern:
 * Min:
 * Max:
 Emergency Call:
 Emergency Priority:
 Emergency Type:
 SIP Domain:
 Notes:

Originating Locations and Routing Policies

1 Item Filter: Enable

<input type="checkbox"/>	Originating Location Name	Originating Location Notes	Routing Policy Name	Rank	Routing Policy Disabled	Routing Policy Destination	Routing Policy Notes
<input type="checkbox"/>	VM_SMGR		to_Avaya_SBCE	0	<input type="checkbox"/>	Avaya_SBCE	

Select : All, None

The following screen shows the test dial pattern configured for Communication Manager.

Dial Pattern Details Commit Cancel Help ?

General

* Pattern:
 * Min:
 * Max:
 Emergency Call:
 Emergency Priority:
 Emergency Type:
 SIP Domain:
 Notes:

Originating Locations and Routing Policies

1 Item Filter: Enable

<input type="checkbox"/>	Originating Location Name	Originating Location Notes	Routing Policy Name	Rank	Routing Policy Disabled	Routing Policy Destination	Routing Policy Notes
<input type="checkbox"/>	VM_SMGR		to_Communication_Manager	0	<input type="checkbox"/>	Communication_Manager	


Select : All, None

7. Configure Avaya Session Border Controller for Enterprise


This section describes the configuration of the Session Border Controller for Enterprise (Avaya SBCE). The Avaya SBCE provides security and manipulation of signalling to provide an interface to the Service Provider's SIP Trunk that is standard where possible and adapted to the Service Provider's SIP implementation where necessary.

7.1. Access Avaya Session Border Controller for Enterprise


Access the Avaya SBCE using a web browser by entering the URL **https://<ip-address>**, where **<ip-address>** is the management IP address configured at installation and enter the **Username** and **Password**.

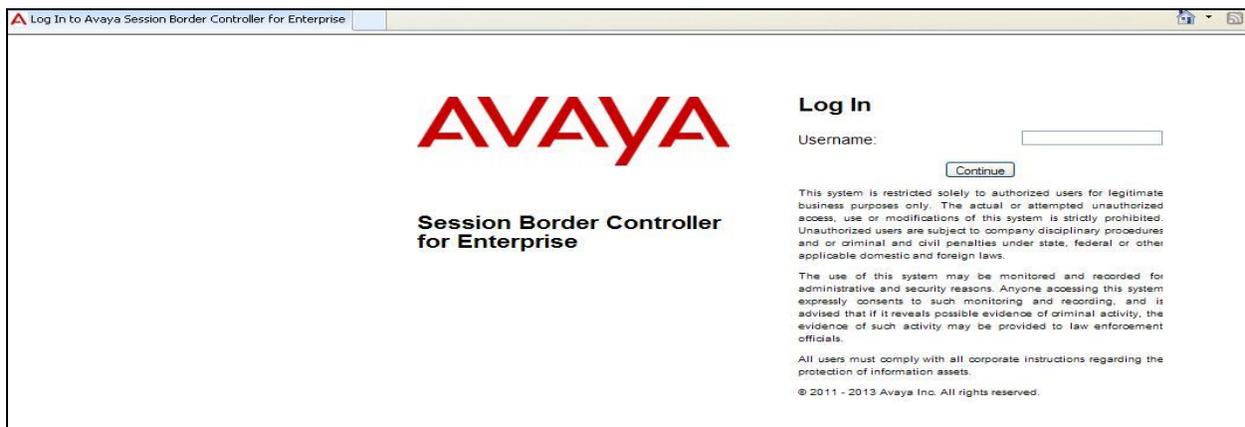


Once logged in, a dashboard is presented with a menu on the left-hand side. The menu is used as a starting point for all configuration of the Avaya SBCE.

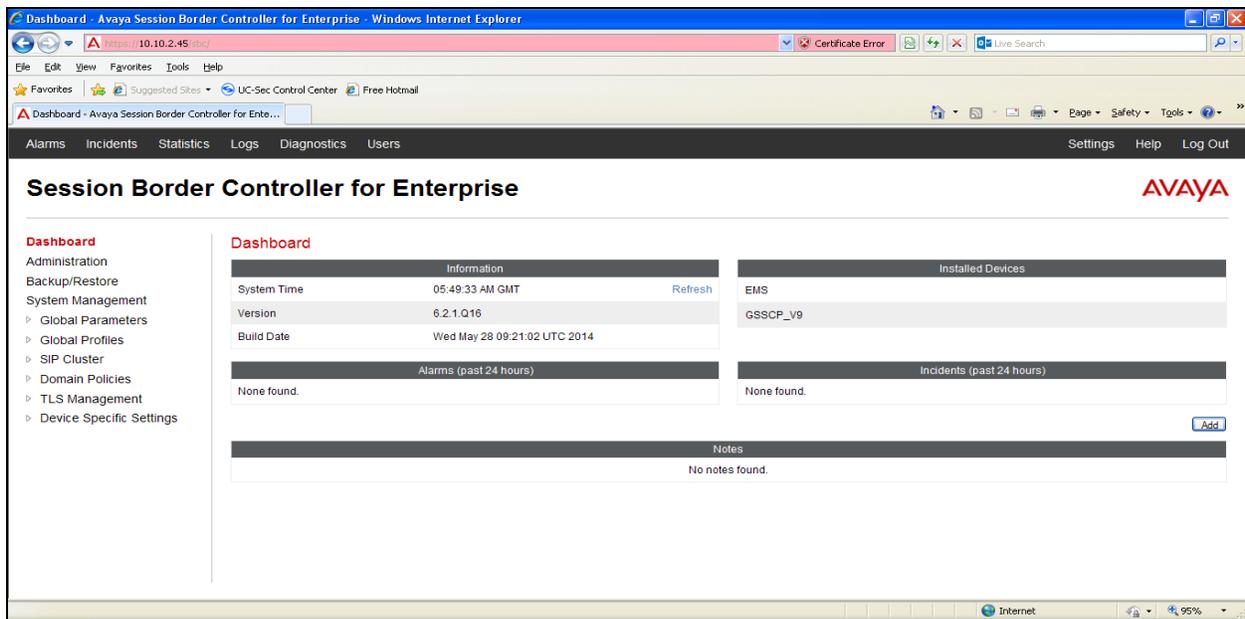

To view system information that was configured during installation, navigate to **System Management**. A list of installed devices is shown in the right pane. In the case of the sample configuration, a single device named **GSSCP_V9** is shown. To view the configuration of this device, click **View** (the third option from the right).

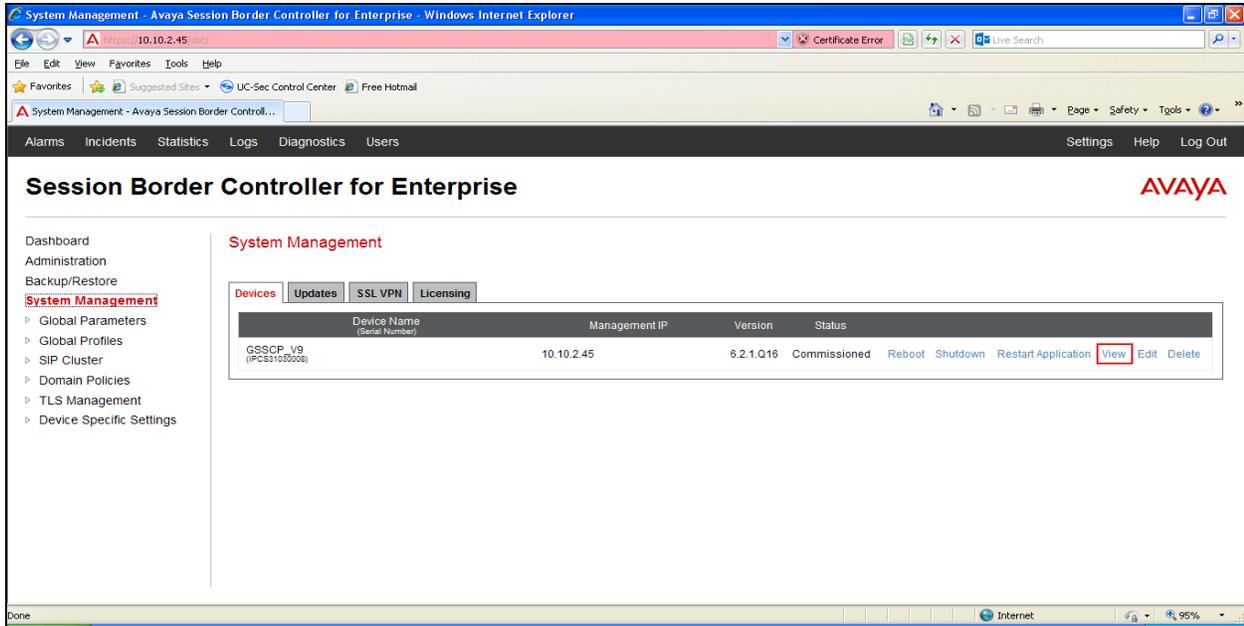

The System Information screen shows the **Appliance Name**, **Device Settings** and **DNS Configuration** information.

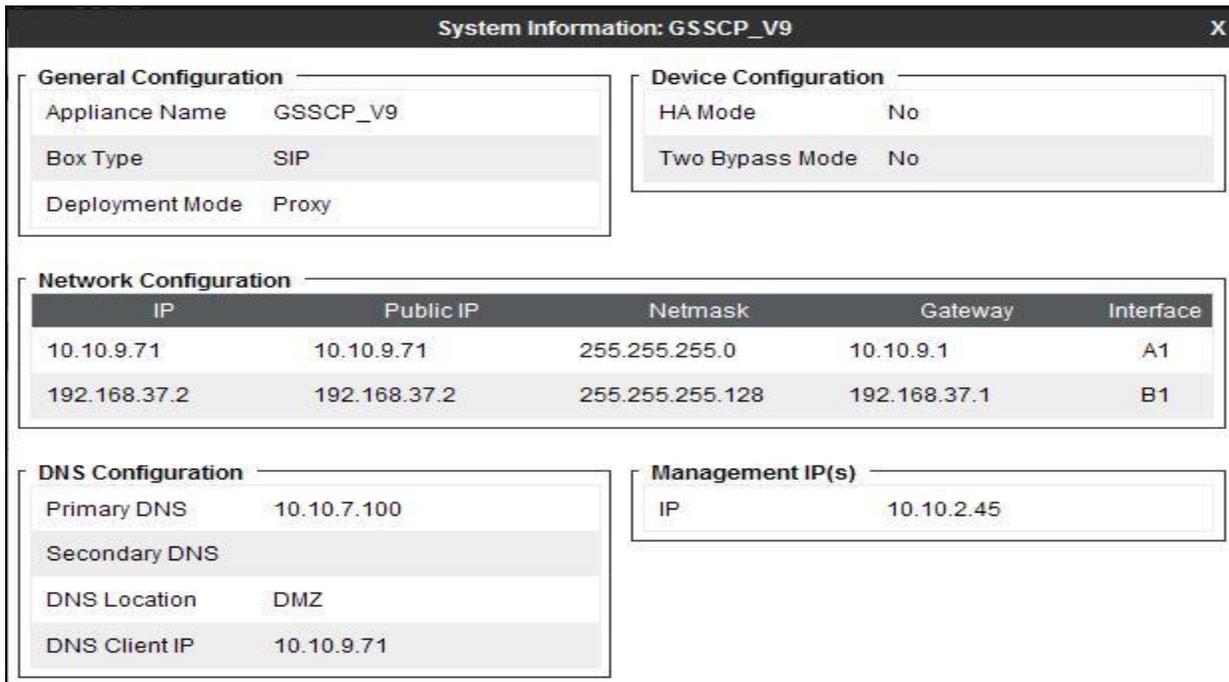

7.2. Global Profiles

When selected, Global Profiles allows for configuration of parameters across all Avaya SBCE devices.

7.2.1. Server Interworking - Avaya

Server Interworking allows the configuration and management of various SIP call server-specific capabilities such as call hold and T.38. From the left-hand menu select **Global Profiles** → **Server Interworking** and click on **Add**.

- Enter profile name such as **Avaya_SM** and click **Next** (Not Shown).
- Check **Hold Support=None**.
- All other options on the **General** Tab can be left at default.

The screenshot shows a configuration window titled "Profile: Avaya_SM" with a close button (X) in the top right corner. The main content area is labeled "General" and contains the following settings:

Setting	Value
Hold Support	<input checked="" type="radio"/> None <input type="radio"/> RFC2543 - c=0.0.0.0 <input type="radio"/> RFC3264 - a=sendonly
180 Handling	<input checked="" type="radio"/> None <input type="radio"/> SDP <input type="radio"/> No SDP
181 Handling	<input checked="" type="radio"/> None <input type="radio"/> SDP <input type="radio"/> No SDP
182 Handling	<input checked="" type="radio"/> None <input type="radio"/> SDP <input type="radio"/> No SDP
183 Handling	<input checked="" type="radio"/> None <input type="radio"/> SDP <input type="radio"/> No SDP
Refer Handling	<input type="checkbox"/>
URI Group	None (dropdown menu)
3xx Handling	<input type="checkbox"/>
Diversion Header Support	<input type="checkbox"/>
Delayed SDP Handling	<input type="checkbox"/>
Re-Invite Handling	<input type="checkbox"/>
T.38 Support	<input type="checkbox"/>
URI Scheme	<input checked="" type="radio"/> SIP <input type="radio"/> TEL <input type="radio"/> ANY
Via Header Format	<input checked="" type="radio"/> RFC3261 <input type="radio"/> RFC2543

At the bottom center of the window is a "Next" button.

Default values can be used for the **Advanced Settings** window. Click **Finish**

Setting	Value
Record Routes	<input checked="" type="radio"/> None <input type="radio"/> Single Side <input type="radio"/> Both Sides
Topology Hiding: Change Call-ID	<input type="checkbox"/>
Call-Info NAT	<input type="checkbox"/>
Change Max Forwards	<input type="checkbox"/>
Include End Point IP for Context Lookup	<input type="checkbox"/>
OCS Extensions	<input type="checkbox"/>
AVAYA Extensions	<input type="checkbox"/>
NORTEL Extensions	<input type="checkbox"/>
Diversion Manipulation	<input type="checkbox"/>
Diversion Header URI	<input type="text"/>
Metaswitch Extensions	<input type="checkbox"/>
Reset on Talk Spurt	<input type="checkbox"/>
Reset SRTP Context on Session Refresh	<input type="checkbox"/>
Has Remote SBC	<input checked="" type="checkbox"/>
Route Response on Via Port	<input type="checkbox"/>
Cisco Extensions	<input type="checkbox"/>

7.2.2. Server Interworking – Vodafone UK

Server Interworking allows the configuration and management of various SIP call server-specific capabilities such as call hold and T.38. From the left-hand menu select **Global Profiles** → **Server Interworking** and click on **Add**.

- Enter profile name such as **VF_UK** and click **Next** (Not Shown).
- Check **Hold Support** = **None**.
- All other options on the **General** Tab can be left at default.

Click on **Next** on the following screens and then **Finish**.

The screenshot shows the configuration interface for a profile named 'VF_UK'. The 'General' tab is active. The 'Hold Support' option is selected as 'None', which is highlighted with a red rectangular box. Below it, there are radio buttons for 'RFC2543 - c=0.0.0.0' and 'RFC3264 - a=sendonly'. Other options include '180 Handling', '181 Handling', '182 Handling', and '183 Handling', each with radio buttons for 'None', 'SDP', and 'No SDP'. 'Refer Handling' has an unchecked checkbox. 'URI Group' is a dropdown menu set to 'None'. '3xx Handling' has an unchecked checkbox. 'Diversion Header Support', 'Delayed SDP Handling', and 'Re-Invite Handling' all have unchecked checkboxes. 'T.38 Support' has an unchecked checkbox. 'URI Scheme' has radio buttons for 'SIP' (selected), 'TEL', and 'ANY'. 'Via Header Format' has radio buttons for 'RFC3261' (selected) and 'RFC2543'. A 'Next' button is located at the bottom center of the screen.

Default values can be used for the **Advanced Settings** window. Click **Finish**.

Profile: VF_UK

Record Routes	<input type="radio"/> None <input type="radio"/> Single Side <input checked="" type="radio"/> Both Sides
Topology Hiding: Change Call-ID	<input type="checkbox"/>
Call-Info NAT	<input type="checkbox"/>
Change Max Forwards	<input checked="" type="checkbox"/>
Include End Point IP for Context Lookup	<input type="checkbox"/>
OCS Extensions	<input type="checkbox"/>
AVAYA Extensions	<input type="checkbox"/>
NORTEL Extensions	<input type="checkbox"/>
Diversion Manipulation	<input type="checkbox"/>
Diversion Header URI	<input type="text"/>
Metaswitch Extensions	<input type="checkbox"/>
Reset on Talk Spurt	<input type="checkbox"/>
Reset SRTP Context on Session Refresh	<input type="checkbox"/>
Has Remote SBC	<input checked="" type="checkbox"/>
Route Response on Via Port	<input type="checkbox"/>
Cisco Extensions	<input type="checkbox"/>

Finish

7.2.3. Routing

Routing profiles define a specific set of packet routing criteria that are used in conjunction with other types of domain policies to identify a particular call flow and thereby ascertain which security features will be applied to those packets. Parameters defined by Routing Profiles include packet transport settings, name server addresses and resolution methods, next hop routing information, and packet transport types.

Routing information is required for routing to Session Manager on the internal side and Vodafone UK addresses on the external side. The IP addresses and ports defined here will be used as the destination addresses for signalling. If no port is specified in the **Next Hop IP Address**, default 5060 is used.

Create a Routing Profile for both Session Manager and Vodafone UK SIP trunk. To add a routing profile, navigate to **Global Profiles → Routing** and select **Add Profile**. Enter a **Profile Name** and click **Next** to continue.

In the new window that appears, enter the following values. Use default values for all remaining fields:

- **URI Group:** Select “*” from the drop down box.
- **Next Hop Server 1:** Enter the Domain Name or IP address of the Primary Next Hop server, e.g. Session Manager.
- **Next Hop Server 2:** (Optional) Enter the Domain Name or IP address of the secondary Next Hop server.
- **Routing Priority Based on Next Hop Server:** Checked
- **Use Next Hop for In-Dialog Messages:** Select only if there is no secondary Next Hop server.
- **Outgoing Transport:** Choose the protocol used for transporting outgoing signalling packets.

Click **Finish**.

The following screen shows the Routing Profile to Session Manager.



The following screen shows the Routing Profile to Vodafone UK SBC.

Routing Profiles: VF_UK

Buttons: Add, Rename, Clone, Delete

Routing Profiles sidebar: default, Avaya_SM, VF_UK

Main area: Click here to add a description.

Routing Profile section: Add

Priority	URI Group	Next Hop Server 1	Next Hop Server 2	
1	*	192.168.24.8	---	View Edit

7.2.4. Server Configuration– Avaya Aura® Session Manager

Servers are defined for each server connected to the Avaya SBCE. In this case, Vodafone is connected as the Trunk Server and Session Manager is connected as the Call Server.

The **Server Configuration** screen contains four tabs: **General**, **Authentication**, **Heartbeat**, and **Advanced**. Together, these tabs allow administrator to configure and manage various SIP call server-specific parameters such as TCP and UDP port assignments, IP Server type, heartbeat signalling parameters and some advanced options. From the left-hand menu select **Global Profiles** → **Server Configuration** and click on **Add Profile** and enter a descriptive name. On the **Add Server Configuration Profile** tab, set the following:

- Select **Server Type** to be **Call Server**.
- Enter **IP Addresses / Supported FQDNs** to **10.10.3.19** (Session Manager IP Address).
- For **Supported Transports**, check **TCP**.
- **TCP Port: 5060**.
- Click on **Next** (not shown) to use default entries on the **Authentication** and **Heartbeat** tabs.

The screenshot displays the 'Server Configuration Profile - General' window. The 'Server Type' dropdown is set to 'Call Server'. The 'IP Addresses / Supported FQDNs' text area contains '10.10.3.19'. Under 'Supported Transports', the 'TCP' checkbox is checked, while 'UDP' and 'TLS' are unchecked. The 'TCP Port' field is set to '5060'. There are empty input fields for 'UDP Port' and 'TLS Port'. A 'Finish' button is located at the bottom center of the window.

On the **Advanced** tab:

- Select **Avaya_SM** for **Interworking Profile** defined in **Section 7.2.1**.
- Click **Finish**.

The screenshot shows a window titled "Server Configuration Profile - Advanced" with a close button (X) in the top right corner. The window contains several configuration options:

- Enable DoS Protection**:
- Enable Grooming**:
- Interworking Profile**: A dropdown menu with "Avaya_SM" selected. This dropdown is highlighted with a red rectangular box.
- Signaling Manipulation Script**: A dropdown menu with "None" selected.
- TCP Connection Type**: Three radio buttons: SUBID, PORTID, and MAPPING.

At the bottom center of the window is a button labeled "Finish".

7.2.5. Server Configuration – Vodafone UK

To define the Vodafone UK SBC as a Trunk Servers, navigate to select **Global Profiles** → **Server Configuration** and click on **Add Profile** and enter a descriptive name. On the **Add Server Configuration Profile** tab, click on **Edit** and set the following:

- Select **Server Type** as **Trunk Server**.
- Set **IP Address** to **192.168.24.8** (Vodafone UK SBC).
- **Supported Transports**: Check **UDP**.
- **UDP Port**: **5060**.
- Click **Next**.
- Click on **Next** (not shown) to use default entries on the **Authentication** and **Heartbeat** tabs

Server Configuration Profile - General

Server Type: Trunk Server

IP Addresses / Supported FQDNs
Separate entries with commas
192.168.24.8

Supported Transports:
 TCP
 UDP
 TLS

TCP Port: [Empty]

UDP Port: 5060

TLS Port: [Empty]

Finish

On the **Advanced** tab:

- Select **VF_UK** for **Interworking Profile** as defined in **Section 7.2.2**.
- Click **Finish**.

The screenshot shows a window titled "Server Configuration Profile - Advanced" with a close button (X) in the top right corner. The window contains several configuration options:

- Enable DoS Protection:** A checkbox that is currently unchecked.
- Enable Grooming:** A checkbox that is currently unchecked.
- Interworking Profile:** A dropdown menu with "VF_UK" selected. This dropdown is highlighted with a red rectangular box.
- Signaling Manipulation Script:** A dropdown menu with "None" selected.
- UDP Connection Type:** Three radio buttons: "SUBID" (selected), "PORTID", and "MAPPING".


At the bottom center of the window is a button labeled "Finish".

7.2.6. Topology Hiding

Topology hiding is used to hide local information such as private IP addresses and local domain names. The local information can be overwritten with a domain name or IP addresses. The default **Replace Action** is **Auto**, this replaces local information with IP addresses, generally the next hop. Topology hiding has the advantage of presenting single Via and Record-Route headers externally where multiple headers may be received from the enterprise, particularly from Session Manager. In some cases where Topology Hiding can't be applied, in particular the Contact header, IP addresses are translated to the Avaya SBCE external addresses using NAT.

To define Topology Hiding for Session Manager, navigate to **Global Profiles** → **Topology Hiding** from menu on the left hand side. Click on **Add** and enter details in the **Topology Hiding Profile** pop-up menu (not shown).

- Enter a descriptive Profile Name such as **Avaya_SM**.
- If the required Header is not shown, click on **Add Header**.
- Under the **Header** field for **To**, **From** and **Request Line**, select **IP/Domain** under **Criteria** and **Overwrite** under **Replace Action**. For Overwrite value, insert **avaya.com**.
- Click **Finish** (not shown).

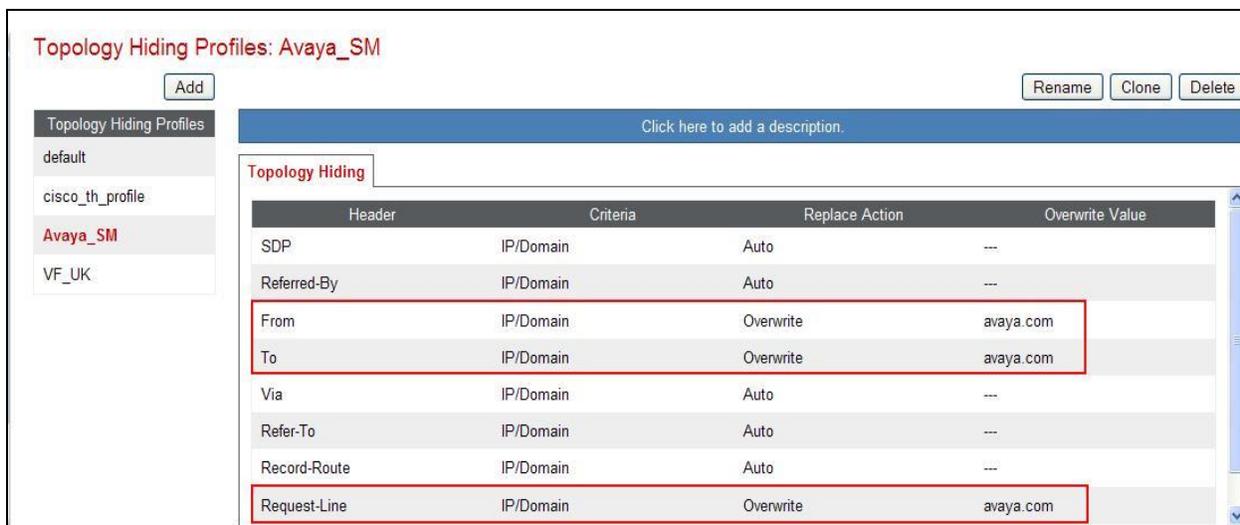

Topology Hiding Profiles: Avaya_SM

Buttons: Add, Rename, Clone, Delete

Click here to add a description.

Header	Criteria	Replace Action	Overwrite Value
SDP	IP/Domain	Auto	---
Referred-By	IP/Domain	Auto	---
From	IP/Domain	Overwrite	avaya.com
To	IP/Domain	Overwrite	avaya.com
Via	IP/Domain	Auto	---
Refer-To	IP/Domain	Auto	---
Record-Route	IP/Domain	Auto	---
Request-Line	IP/Domain	Overwrite	avaya.com

To define Topology Hiding for Vodafone UK, navigate to **Global Profiles** → **Topology Hiding** from the menu on the left hand side. Click on **Add** and enter details in the **Topology Hiding Profile** pop-up menu (not shown).

- In the **Profile Name** field enter a descriptive name for Vodafone UK such as **VF_UK** and click **Next**.
- If the required Header is not shown, click on **Add Header**.
- Under the **Header** field for **To**, **From** and **Request Line**, select **IP/Domain** under **Criteria** and **Auto** under **Replace Action**.
- Click **Finish** (not shown).

Topology Hiding Profiles: VF_UK

Buttons: Add, Rename, Clone, Delete

Click here to add a description.

Header	Criteria	Replace Action	Overwrite Value
SDP	IP	Auto	---
Referred-By	IP	Auto	---
From	IP	Auto	---
To	IP/Domain	Auto	---
Via	IP/Domain	Auto	---
Refer-To	IP/Domain	Auto	---
Record-Route	IP/Domain	Auto	---
Request-Line	IP/Domain	Auto	---

Buttons: Edit

7.3. Define Network Information

Network information is required on the Avaya SBCE to allocate IP addresses and masks to the interfaces. Note that only the **A1** and **B1** interfaces are used, typically the **A1** interface is used for the internal side and **B1** is used for external. Each side of the Avaya SBCE can have only one interface assigned.

To define the network information, navigate to **Device Specific Settings → Network Management** from the menu on the left-hand side and click on **Add**. Enter details in the blank box that appears at the end of the list

- Click on **Add**.
- Define the internal IP address with screening mask and assign to interface **A1**.
- Select **Save** to save the information.
- Click on **Add IP**.
- Define the external IP address with screening mask and assign to interface **B1**.
- Select **Save** to save the information.
- Click on **System Management** in the main menu.
- Select **Restart Application** indicated by an icon in the status bar (not shown).

IP Address	Public IP	Gateway	Interface	Delete
10.10.9.71		10.10.9.1	A1	Delete
192.168.37.2		192.168.37.1	B1	Delete

Select the **Interface Configuration** tab and click on **Toggle State** to enable the interfaces.

Name	Administrative Status	Toggle
A1	Enabled	Toggle
A2	Disabled	Toggle
B1	Enabled	Toggle
B2	Disabled	Toggle

7.4. Define Interfaces


When the IP addresses and masks are assigned to the interfaces, these are then configured as signalling and media interfaces.

7.4.1. Signalling Interfaces

The Signalling Interface screen allows the IP address and ports to be set for transporting signalling messages over the SIP trunk. The Avaya SBCE listens for SIP requests on the defined ports. Create a Signalling Interface for both the inside and outside IP interfaces. To create a new Signalling Interface, navigate to **Device Specific Settings** → **Signaling Interface** and click **Add**.

- **Name: Int_Sig.**
- **Signaling IP: 10.10.9.71** (Internal address for calls toward Session Manager).
- **UDP Port: 5060.**
- Click **Finish**.
- Select **Add**.
- **Name: Ext_Sig**
- **Signaling IP: 192.168.37.2** (External address for calls toward Vodafone UK).
- **TCP Port: 5060.**
- **UDP Port: 5060.**
- Click **Finish**.

The following screen shows the signalling interfaces created in the sample configuration for the inside and outside IP interfaces.

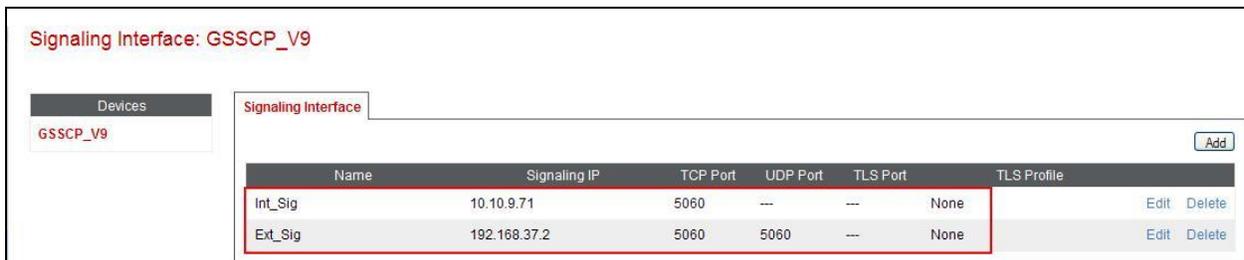

Signaling Interface: GSSCP_V9

Devices

GSSCP_V9

Signaling Interface

Add

Name	Signaling IP	TCP Port	UDP Port	TLS Port	TLS Profile	
Int_Sig	10.10.9.71	5060	---	---	None	Edit Delete
Ext_Sig	192.168.37.2	5060	5060	---	None	Edit Delete

7.4.2. Media Interfaces

The Media Interface screen allows the IP address and ports to be set for transporting Media over the SIP trunk. The Avaya SBCE listens for SIP media on the defined ports.

To create a new Media Interface, navigate to **Device Specific Settings → Media Interface**.

- Select **Add**.
- **Name: Int_Media**.
- **Media IP: 10.10.9.71** (Internal address for calls toward Session Manager).
- **Port Range: 35000-51000**.
- Click **Finish**.
- Select **Add**.
- **Name: Ext_Media**.
- **Media IP: 192.168.37.2** (External address for calls toward Vodafone UK).
- **Port Range: 35000-51000**.
- Click **Finish**.

The following screen shows the Media Interfaces created in the sample configuration for the inside and outside IP interfaces.

Media Interface: GSSCP_V9

Devices

GSSCP_V9

Media Interface


Modifying or deleting an existing media interface will require an application restart before taking effect. Application restarts can be issued from [System Management](#).

Add

Name	Media IP	Port Range	
Int_Med	10.10.9.71	35000 - 51000	Edit Delete
Ext_Med	192.168.37.2	35000 - 51000	Edit Delete

7.5. Server Flows

Server Flows combine the previously defined profiles into outgoing flows from Session Manager to Vodafone UK's SIP Trunk and incoming flows from Vodafone UK's SIP Trunk to Session Manager. This configuration ties all the previously entered information together so that signalling can be routed from Session Manager to the PSTN via the Vodafone network and vice versa. The following screen illustrates the flow through the Avaya SBCE to secure a SIP Trunk call.

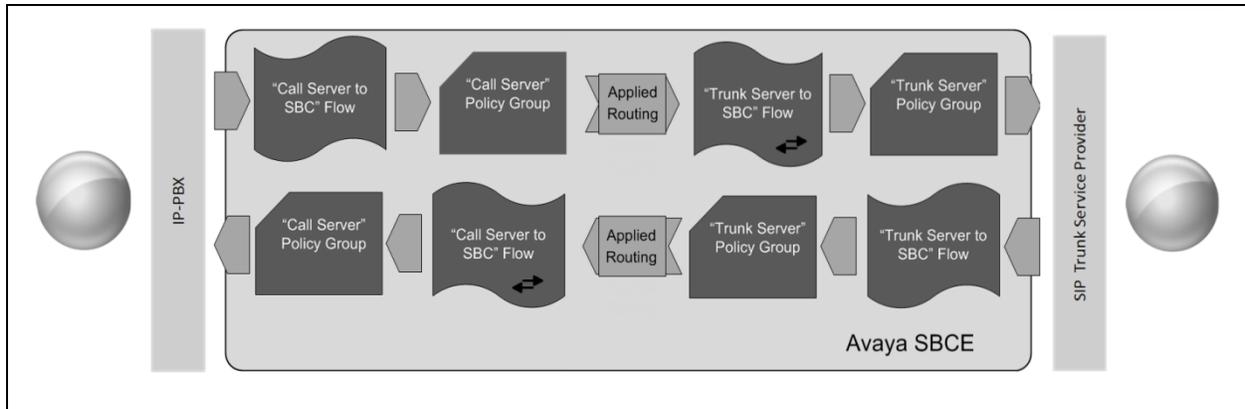

To create a Server Flow, navigate to **Device Specific Settings → End Point Flows**. Select the **Server Flows** tab and click **Add**.

- **Flow Name:** Enter a descriptive name.
- **Server Configuration:** Select a Server Configuration created in **Section 7.2.4** and **7.2.5** and assign to the Flow.
- **Received Interface:** Select the Signaling Interface the Server Configuration is allowed to receive SIP messages from.
- **Signaling Interface:** Select the Signaling Interface used to communicate with the Server Configuration.
- **Media Interface:** Select the Media Interface used to communicate with the Server Configuration.
- **End Point Policy Group:** Select the policy assigned to the Server Configuration.
- **Routing Profile:** Select the profile the Server Configuration will use to route SIP messages.
- **Topology Hiding Profile:** Select the profile to apply toward the Server Configuration.

Click **Finish** to save and exit.

The following screen shows the Server Flow for Session Manager.

The screenshot shows a configuration window titled "Call_Server". It contains the following fields and values:

Flow Name	Call_Server
Server Configuration	Avaya_SM
URI Group	*
Transport	*
Remote Subnet	*
Received Interface	Ext_Sig
Signaling Interface	Int_Sig
Media Interface	Int_Med
End Point Policy Group	default-low
Routing Profile	VF_UK
Topology Hiding Profile	Avaya_SM
File Transfer Profile	None

A "Finish" button is located at the bottom center of the window.

The following screen shows the Server Flow for Vodafone UK.

The screenshot shows a configuration window titled "Trunk_Server". It contains the following fields and values:

Flow Name	Trunk_Server
Server Configuration	VF_UK
URI Group	*
Transport	*
Remote Subnet	*
Received Interface	Int_Sig
Signaling Interface	Ext_Sig
Media Interface	Ext_Med
End Point Policy Group	default-low
Routing Profile	Avaya_SM
Topology Hiding Profile	VF_UK
File Transfer Profile	None

A "Finish" button is located at the bottom center of the window.

This configuration ties all the previously entered information together so that calls can be routed from Session Manager to Vodafone UK SIP Trunk service and vice versa. The following screenshot shows all configured flows.

Subscriber Flows | **Server Flows** | Add

Hover over a row to see its description.

Server Configuration: Avaya_SM

Priority	Flow Name	URI Group	Received Interface	Signaling Interface	End Point Policy Group	Routing Profile	
1	Call_Server	*	Ext_Sig	Int_Sig	default-low	VF_UK	View Clone Edit Delete

Server Configuration: VF_UK

Priority	Flow Name	URI Group	Received Interface	Signaling Interface	End Point Policy Group	Routing Profile	
1	Trunk_Server	*	Int_Sig	Ext_Sig	default-low	Avaya_SM	View Clone Edit Delete

8. Configure Vodafone UK SIP Trunk Equipment

The configuration of the Vodafone UK equipment used to support Vodafone UK's SIP Trunk is outside of the scope of these Application Notes and will not be covered. To obtain further information on Vodafone UK equipment and system configuration please contact an authorized Vodafone representative.

9. Verification Steps

This section provides steps that may be performed to verify that the solution is configured correctly.

1. From System Manager **Home** tab click on **Session Manager** and navigate to **Session Manager → System Status → SIP Entity Monitoring**. Select the relevant SIP Entities from the list and observe if the **Conn Status** and **Link Status** are showing as **UP**.

Home / Elements / Session Manager Help ?

Session Manager Entity Link Connection Status

This page displays detailed connection status for all entity links from a Session Manager.

All Entity Links for Session Manager: [Session_Manager](#)

Status Details for the selected Session Manager:

5 Items Refresh Filter: Enable

	SIP Entity Name	SIP Entity Resolved IP	Port	Proto.	Deny	Conn. Status	Reason Code	Link Status
<input type="radio"/>	Communication Manager	10.10.8.67	5060	TCP	FALSE	UP	200 OK	UP
<input type="radio"/>	Avaya SBCE	10.10.3.30	5060	TCP	FALSE	UP	200 OK	UP
<input type="radio"/>	CS1K R7.6	10.10.9.21	5060	TCP	FALSE	UP	200 OK	UP
<input type="radio"/>	Avaya SBCE 2	10.10.9.71	5060	TCP	FALSE	UP	200 OK	UP
<input type="radio"/>	Messaging	10.10.2.82	5060	TCP	FALSE	UP	200 OK	UP

- From the Communication Manager SAT interface run the command **status trunk n** where **n** is a previously configured SIP trunk. Observe if all channels on the trunk group display **in-service/idle**.

```
status trunk 1

                                TRUNK GROUP STATUS

Member   Port      Service State      Mtce Connected Ports
                               Busy

0001/001 T00001   in-service/idle    no
0001/002 T00002   in-service/idle    no
0001/003 T00003   in-service/idle    no
0001/004 T00004   in-service/idle    no
0001/005 T00005   in-service/idle    no
0001/006 T00006   in-service/idle    no
0001/007 T00007   in-service/idle    no
0001/008 T00008   in-service/idle    no
0001/009 T00009   in-service/idle    no
0001/010 T00010   in-service/idle    no
```

- Verify that endpoints at the enterprise site can place calls to the PSTN and that the call remains active.
- Verify that endpoints at the enterprise site can receive calls from the PSTN and that the call can remain active.
- Verify that the user on the PSTN can end an active call by hanging up.
- Verify that an endpoint at the enterprise site can end an active call by hanging up.
- Should issues arise with the SIP trunk, use the Avaya SBCE trace facility to check that the OPTIONS requests sent from Session Manager via the Avaya SBCE to the network SBCs are receiving a response.

To define the trace, navigate to **Device Specific Settings** → **Advanced Options** → **Troubleshooting** → **Trace** in the main menu on the left hand side and select the **Packet Capture** tab.

- Select the SIP Trunk interface from the **Interface** drop down menu.
- Select the signalling interface IP address from the **Local Address** drop down menu.
- Enter the IP address of the network SBC in the **Remote Address** field or enter a * to capture all traffic.
- Specify the **Maximum Number of Packets to Capture**, 10000 is shown as an example.
- Specify the filename of the resultant pcap file in the **Capture Filename** field.
- Click on **Start Capture**.

Trace: GSSCP_V9

Devices	Call Trace	Packet Capture	Captures
GSSCP_V9	Packet Capture Configuration		
Status	Ready		
Interface	B1		
Local Address IP[:Port]	192.168.372		
Remote Address *, *Port, IP, IP:Port	*		
Protocol	UDP		
Maximum Number of Packets to Capture	10000		
Capture Filename Using the name of an existing capture will overwrite it.	SP_Trunk_Test1.pcap		
<input type="button" value="Start Capture"/> <input type="button" value="Clear"/>			

To view the trace, select the **Captures** tab and click on the relevant filename in the list of traces.

Trace: GSSCP_V9

Devices

GSSCP_V9

Call Trace Packet Capture Captures

Refresh

File Name	File Size (bytes)	Last Modified	
SP_Trunk_Test1_20140916074423.pcap	0	September 16, 2014 7:44:24 AM GMT	Delete

The trace is viewed as a standard pcap file in Wireshark. If the SIP trunk is working correctly, a SIP response in the form of a 200 OK will be seen from the Vodafone UK network.

10. Conclusion

These Application Notes describe the configuration necessary to connect Avaya Aura® Communication Manager R6.3 as an Evolution Server, Avaya Aura® Session Manager R6.3 and Avaya Session Border Controller for Enterprise to Vodafone UK's SIP Trunk Service. Vodafone UK's SIP Trunk Service is a SIP-based Voice over IP solution providing businesses a flexible, cost-saving alternative to traditional hardwired telephony trunks. The service was successfully tested with a number of observations listed in **Section 2.2**.

11. Additional References

This section references the documentation relevant to these Application Notes. Additional Avaya product documentation is available at <http://support.avaya.com>.

- [1] *Installing and Configuring Avaya Aura® System Platform*, Release 6.3, May 2014
- [2] *Administering Avaya Aura® System Platform*, Release 6.3, May 2014
- [3] *Avaya Aura® Communication Manager using VMware® in the Virtualized Environment Deployment Guide*, April 2014
- [4] *Avaya Aura® Communication Manager 6.3 Documentation library*, August 2014
- [5] *Avaya Aura® System Manager using VMware® in the Virtualized Environment Deployment Guide* Release 6.3 April 2014
- [6] *Implementing Avaya Aura® System Manager* Release 6.3, May 2014
- [7] *Upgrading Avaya Aura® System Manager to 6.3* May 2014
- [8] *Administering Avaya Aura® System Manager* Release 6.3, May 2014
- [9] *Avaya Aura® Session Manager using VMware® in the Virtualized Environment Deployment Guide* Release 6.3 August 2014
- [10] *Implementing Avaya Aura® Session Manager* Release 6.3, May 2014
- [11] *Upgrading Avaya Aura® Session Manager* Release 6.3, May 2014
- [12] *Administering Avaya Aura® Session Manager* Release 6.3, June 2014
- [13] *Installing Avaya Session Border Controller for Enterprise*, Release 6.2 June 2014
- [14] *Upgrading Avaya Session Border Controller for Enterprise* Release 6.2 July 2014
- [15] *Administering Avaya Session Border Controller for Enterprise* Release 6.2 March 2014
- [16] *RFC 3261 SIP: Session Initiation Protocol*, <http://www.ietf.org/>

©2014 Avaya Inc. All Rights Reserved.

Avaya and the Avaya Logo are trademarks of Avaya Inc. All trademarks identified by ® and ™ are registered trademarks or trademarks, respectively, of Avaya Inc. All other trademarks are the property of their respective owners. The information provided in these Application Notes is subject to change without notice. The configurations, technical data, and recommendations provided in these Application Notes are believed to be accurate and dependable, but are presented without express or implied warranty. Users are responsible for their application of any products specified in these Application Notes.

Please e-mail any questions or comments pertaining to these Application Notes along with the full title name and filename, located in the lower right corner, directly to the Avaya DevConnect Program at devconnect@avaya.com.