



Avaya Solution & Interoperability Test Lab

Application Notes for OpenText Qfiniti Observe (Service Observe – No Talk) with Avaya Aura® Application Enablement Services and Avaya Aura® Communication Manager using DMCC – Issue 1.0

Abstract

These Application Notes provide configuration instructions for OpenText Qfiniti Observe (Service Observe – No Talk) with Avaya Aura® Application Enablement Services and Avaya Aura® Communication Manager to successfully interoperate and record calls.

Readers should pay attention to **Section 2**, in particular the scope of testing as outlined in **Section 2.1** as well as the observations noted in **Section 2.2**, to ensure that their own use cases are adequately covered by this scope and results.

Information in these Application Notes has been obtained through DevConnect compliance testing and additional technical discussions. Testing was conducted via the DevConnect Program at the Avaya Solution and Interoperability Test Lab.

1. Introduction

These Application Notes provide configuration instructions for OpenText Qfiniti Observe (Qfiniti Observe) with Avaya Aura® Application Enablement Services (AES) and Avaya Aura® Communication Manager (Communication Manager) to successfully interoperate and record calls.

Qfiniti Observe is a call recording solution which utilizes the Device, Media and Call Control (DMCC) and TSAPI services on AES to record calls for Quality Monitoring and Compliance purposes.

Qfiniti Observe registers as a stand-alone recording device for each extension that needs to be monitored. Qfiniti Observe (Service Observe – No Talk) uses the DMCC and Service Observing No Talk Access Code for recording calls.

2. General Test Approach and Test Results

The compliance test focused on the ability for calls to be recorded. Calls were manually placed from the public switched telephone network (PSTN) directly to and from recorded devices, and to Automatic Call Distributor (ACD) queues.

DevConnect Compliance Testing is conducted jointly by Avaya and DevConnect members. The jointly-defined test plan focuses on exercising APIs and/or standards-based interfaces pertinent to the interoperability of the tested products and their functionalities. DevConnect Compliance Testing is not intended to substitute full product performance or feature testing performed by DevConnect members, nor is it to be construed as an endorsement by Avaya of the suitability or completeness of a DevConnect member's solution.

2.1. Interoperability Compliance Testing

The compliance test validated the ability of Qfiniti Observe to successfully record various types of calls routed to and from analog, sigital, IP and SIP endpoints. The feature testing included the following:

- Handling of real-time agent states and call events from Qfiniti Observe
- Use of AES DMCC registration services to register and un-register the virtual IP Softphone
- Use of Communication Manager Service Observing feature to have virtual IP softphones service-observing target stations
- Use of AES DMCC monitoring services and media control events to obtain the media from the virtual IP Softphones
- Proper recording, logging, and playback of calls for scenarios involving inbound, outbound, agent drop, customer drop, hold, reconnect, transfer and conference

Additionally, testing confirmed the ability for Qfiniti Observe to recover from common outages such as network outages and server reboots.

2.2. Test Results

All test cases were passed.

2.3. Support

Technical support for OpenText Qfiniti Observe can be obtained via the following means.

Web: <http://engage.opentext.com/products/qfiniti>

Phone: (800) 540-7292

3. Reference Configuration

Figure 1 illustrates a sample configuration that consists of Avaya products and OpenText Qfiniti Observe.

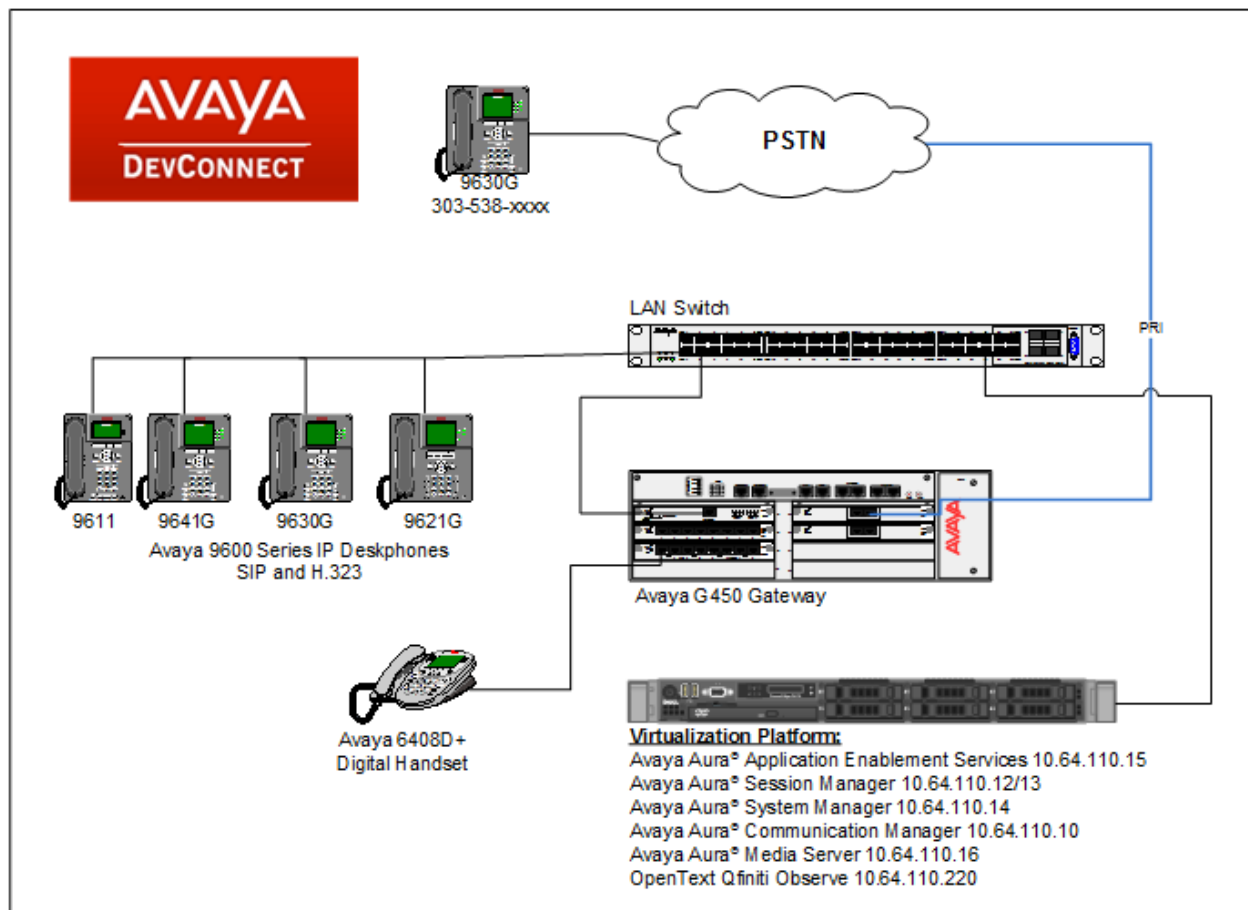


Figure 1: Test Configuration for OpenText Qfiniti Observe

4. Equipment and Software Validated

The following equipment and software were used for the sample configuration provided:

Equipment/Software	Release/Version
Avaya Aura [®] Communication Manager	7.0.1.2.0-FP1SP2
Avaya Aura [®] Session Manager	7.0.1.1.701114
Avaya Aura [®] System Manager	7.0.1.1.065378
Avaya G450 Media Gateway	37.19.0
Avaya Aura [®] Application Enablement Services	7.0.1.0.0.15-0
Avaya TSAPI Client	7.0.1
Qfiniti Observe	10.6

5. Configure Avaya Aura® Communication Manager

This section contains steps necessary to configure Qfiniti Observe successfully with Communication Manager.

All configurations in Communication Manager were performed via SAT terminal.

5.1. Verify Feature and License

Enter the **display system-parameters customer-options** command and ensure that the following features are enabled.

One Page 4, verify **Computer Telephony Adjunct Links** is set to **y**.

display system-parameters customer-options		Page	4 of	12
OPTIONAL FEATURES				
Abbreviated Dialing Enhanced List?	y	Audible Message Waiting?	y	
Access Security Gateway (ASG)?	n	Authorization Codes?	y	
Analog Trunk Incoming Call ID?	y	CAS Branch?	n	
A/D Grp/Sys List Dialing Start at 01?	y	CAS Main?	n	
Answer Supervision by Call Classifier?	y	Change COR by FAC?	n	
ARS?	y	Computer Telephony Adjunct Links?	y	
ARS/AAR Partitioning?	y	Cvg Of Calls Redirected Off-net?	y	
ARS/AAR Dialing without FAC?	n	DCS (Basic)?	y	
ASAI Link Core Capabilities?	y	DCS Call Coverage?	y	
ASAI Link Plus Capabilities?	y	DCS with Rerouting?	y	
Async. Transfer Mode (ATM) PNC?	n	Digital Loss Plan Modification?	y	
Async. Transfer Mode (ATM) Trunking?	n	DS1 MSP?	y	
ATM WAN Spare Processor?	n	DS1 Echo Cancellation?	y	
ATMS?	y			
Attendant Vectoring?	y			

5.2. Configure Stations

5.2.1. Configure Call Center Stations

Use **add station *n*** command to add a station, where *n* is an available station extension. This station is used by call centers agents to log in and will also be monitored by Qfiniti Observe to receive TSAPI events. Configure the station as follows, on Page 1:

- In **Name** field, enter a descriptive name.
- Set **Type** to the type of the telephones.
- Enter a **Security Code**.
- Set **IP SoftPhone** to **y**.

add station 11001		Page 1 of 5
STATION		
Extension: 11001	Lock Messages? n	BCC: 0
Type: 9650	Security Code: 123456	TN: 1
Port: S00168	Coverage Path 1:	COR: 1
Name: IP Station 1	Coverage Path 2:	COS: 1
	Hunt-to Station:	Tests? y
STATION OPTIONS		
Location:	Time of Day Lock Table:	
Loss Group: 19	Personalized Ringing Pattern: 1	
	Message Lamp Ext: 11001	
Speakerphone: 2-way	Mute Button Enabled? y	
Display Language: english	Button Modules: 0	
Survivable GK Node Name:		
Survivable COR: internal	Media Complex Ext:	
Survivable Trunk Dest? y	IP SoftPhone? y	
	IP Video Softphone? n	
	Short/Prefixed Registration Allowed: default	
	Customizable Labels? y	

During the compliance testing, the following stations, H.323, SIP and digital, were created for call center agents.

list station										Page	1
STATIONS											
Ext/ Hunt-to	Port/ Type	Name/ Surv	GK	NN	Move	Room/ Data	Ext	Cv1/ Cv2	COR/ COS	Cable/ TN	Jack
11001	S00168	IP Station 1							1		
11002	S00171	IP Station 2							1		
11003	S00004	IP Station 3							1		
11004	S00005	IP Station 4							1		
11005	S00008	IP Station 5							1		
11101	S00100	SIP, User 1							1		
11102	S00180	SIP, User 2							1		
11251	001V301	Digital Station 1							1		

Administration for SIP Stations is performed via System Manager (not shown). Refer to documentation in **Section 10**.

5.2.2. Configure DMCC Stations

Use **add station *n*** command to add a station, where *n* is an available station extension. This station is used by Qfiniti Observe for DMCC call recording. Configure the station as follows, on Page 1:

- In **Name** field, enter a descriptive name.
- Set **Type** to the type of the telephones.
- Enter a **Security Code**.
- Set **IP SoftPhone** to **y**.

add station 11551		Page 1 of 5
STATION		
Extension: 11551	Lock Messages? n	BCC: 0
Type: 9650	Security Code: 123456	TN: 1
Port: S00141	Coverage Path 1:	COR: 1
Name: DMCC Station 1	Coverage Path 2:	COS: 1
	Hunt-to Station:	Tests? y
STATION OPTIONS		
Location:	Time of Day Lock Table:	
Loss Group: 19	Personalized Ringing Pattern: 1	
	Message Lamp Ext: 11551	
Speakerphone: 2-way	Mute Button Enabled? y	
Display Language: english	Button Modules: 0	
Survivable GK Node Name:		
Survivable COR: internal	Media Complex Ext:	
Survivable Trunk Dest? y	IP SoftPhone? y	
	IP Video Softphone? n	
	Short/Prefixed Registration Allowed: default	
	Customizable Labels? y	

During the compliance testing, the following DMCC stations were created.

list station										Page	1
STATIONS											
Ext/ Hunt-to	Port/ Type	Name/ Surv GK NN	Move	Room/ Data Ext	Cv1/ Cv2	COR/ COS	Cable/ TN	Jack			
11551	S00141	DMCC Station 1				1					
11552	S00144	DMCC Station 2				1					
11553	S00147	DMCC Station 3				1					
11554	S00150	DMCC Station 4				1					
11555	S00153	DMCC Station 5				1					
11556	S00156	DMCC Station 6				1					
11557	S00159	DMCC Station 7				1					
11558	S00162	DMCC Station 8				1					

5.3. Configure Hunt Group

Use **add hunt-group *n*** command to add a station, where *n* is an available hunt group number. Call center agents will log into this hunt group. Configure the hunt group as follows, on Page 1:

- In **Group Name** field, enter a descriptive name.
- In the **Group Extension** field, type in an available extension.
- Set **ACD**, **Queue**, and **Vector** fields to **y**.

add hunt-group 1		Page 1 of 4
HUNT GROUP		
Group Number: 1		ACD? y
Group Name: Hunt Group 1		Queue? y
Group Extension: 12001		Vector? y
Group Type: ucd-mia		
TN: 1		
COR: 1		MM Early Answer? n
Security Code:		Local Agent Preference? n
ISDN/SIP Caller Display:		
Queue Limit: unlimited		
Calls Warning Threshold:	Port:	
Time Warning Threshold:	Port:	

On page 2, set **Skill** to **y**.

add hunt-group 1		Page 2 of 4
HUNT GROUP		
Skill? y		Expected Call Handling Time (sec): 180
AAS? n		Service Level Target (% in sec): 80 in 20
Measured: both		
Supervisor Extension:		
Controlling Adjunct: none		
VuStats Objective:		
Multiple Call Handling: none		
Timed ACW Interval (sec): 1		After Xfer or Held Call Drops? n

5.4. Configure Agents

Use **add agent-loginID *n*** command to add a station, where *n* is an available agent extension. This agent is used by call center agents. Configure the agent as follows, on Page 1:

- In **Name** field, enter a descriptive name.
- In the **Password** and **Password (enter again)** fields, type in a password.

```
add agent-loginID 1101                                     Page 1 of 2
                                AGENT LOGINID

Login ID: 1101                                             AAS? n
  Name: IP Agent 1                                         AUDIX? n
    TN: 1          Check skill TNs to match agent TN? n
    COR: 1
Coverage Path: 1                                           LWC Reception: spe
Security Code:                                           LWC Log External Calls? n
Attribute:                                               AUDIX Name for Messaging:

                                LoginID for ISDN/SIP Display? n
                                Password: 123456
                                Password (enter again): 123456
                                Auto Answer: none
                                MIA Across Skills: system
AUX Agent Considered Idle (MIA)? n      ACW Agent Considered Idle: system
                                Aux Work Reason Code Type: system
                                Logout Reason Code Type: system
                                Maximum time agent in ACW before logout (sec): system
                                Forced Agent Logout Time: :
```

On Page 2, set **SN** to the hunt group configured in previous section and set **SL** to **1**.

```
add agent-loginID 1101                                     Page 2 of 2
                                AGENT LOGINID

Direct Agent Skill:                                         Service Objective? n
Call Handling Preference: skill-level                       Local Call Preference? n

    SN    RL SL          SN    RL SL
1: 1      1             16:
```

During compliance testing, following agents were added. The table below also displays the corresponding extensions that were used for logging in the agents.

list agent-loginID										Page 1
AGENT LOGINID										
Login ID	Name	Extension	Dir	Agt	AAS/AUD	COR	Ag	Pr	SO	
	Skil/Lv	Skil/Lv	Skil/Lv	Skil/Lv	Skil/Lv	Skil/Lv	Skil/Lv	Skil/Lv	Skil/Lv	
1101	IP Agent 1	11001				1		lv1		
1102	IP Agent 2	11002				1		lv1		
1103	IP Agent 3	11003				1		lv1		
1104	IP Agent 4	11004				1		lv1		
1105	IP Agent 5	11005				1		lv1		
1111	SIP Agent 1	11101				1		lv1		
1112	SIP Agent 2	11102				1		lv1		
1121	Digital Agent	111251				1		lv1		

5.5. Configure IP Services

Add an IP-Services entry, using the **change ip-services** command, for AES. On Page 1:

- In the **Service Type** field, type **AESVCS**.
- In the **Enabled** field, type **y**.
- In the **Local Node** field, type the Node name **procr** for the Processor Ethernet Interface.
- In the **Local Port** field, use the default of **8765**.

change ip-services			Page 1 of 4		
Service Type	Enabled	Local Node	IP SERVICES Local Port	Remote Node	Remote Port
AESVCS	y	procr	8765		

On Page 4 of the IP Services form, enter the following values:

- In the **AE Services Server** field, type the host name of AES.
- In the **Password** field, type the same password to be administered on AES in **Section 6.1**.
- In the **Enabled** field, type **y**.

change ip-services		Page 4 of 4		
AE Services Administration				
Server ID	AE Services Server	Password	Enabled	Status
1:	aes	*	y	in use

5.6. Configure CTI Link

Enter the **add cti-link <link number>** command, where **<link number>** is an available CTI link number.

- In the **Extension** field, type a valid station extension.
- In the **Type** field, type **ADJ-IP**.
- In the **Name** field, type a descriptive name.

cti-link 3		Page 1 of 3	
		CTI LINK	
CTI Link: 3			
Extension: 19995			
Type: ADJ-IP			
Name: TSAPI		COR: 1	

5.7. Configure Feature Access Code

Use the **change feature-access-codes** to configure the Service Observing code. Set an available feature access code on Page 5 for **Service Observing No Talk Access Code**.

change feature-access-codes	Page 5 of 10
FEATURE ACCESS CODE (FAC)	
Call Center Features	
AGENT WORK MODES	
After Call Work Access Code: *04	
Assist Access Code:	
Auto-In Access Code: *02	
Aux Work Access Code: *05	
Login Access Code: *01	
Logout Access Code: *06	
Manual-in Access Code: *03	
SERVICE OBSERVING	
Service Observing Listen Only Access Code: *40	
Service Observing Listen/Talk Access Code: *41	
Service Observing No Talk Access Code: *42	
Service Observing Next Call Listen Only Access Code:	
Service Observing by Location Listen Only Access Code:	
Service Observing by Location Listen/Talk Access Code:	
AACC CONFERENCE MODES	
Restrict First Consult Activation:	Deactivation:
Restrict Second Consult Activation:	Deactivation:


6. Configure Avaya Aura® Application Enablement Services

Configuration of AES requires a user account be configured for Qfiniti Observe and CTI/TSAPI configuration for Communication Manager.

All administration is performed by web browser, <https://<aes-ip-address>/>. Log in using appropriate credentials.

6.1. Configure Communication Manager Switch Connections

To add links to Communication Manager, navigate to the **Communication Manager Interface** → **Switch Connections** page and enter a name for the new switch connection (e.g. **acm**) and click the **Add Connection** button (not shown). The **Connection Details** screen is shown. Enter the **Switch Password** configured in **Section 5.5** and check the **Processor Ethernet** box if using the **procr** interface. Click **Apply**.



Application Enablement Services
Management Console

Welcome: User cust
Last login: Tue Jan 24 14:33:24 2017 from 10.64.10.47
Number of prior failed login attempts: 0
HostName/IP: aes/10.64.110.15
Server Offer Type: VIRTUAL_APPLIANCE_ON_VMWARE
SW Version: 7.0.1.0.0.15-0
Server Date and Time: Fri Jan 27 12:40:57 MST 2017
HA Status: Not Configured

Communication Manager Interface | Switch ConnectionsHome | Help | Logout

▶ AE Services

▼ Communication Manager Interface

Switch Connections

▶ Dial Plan

High Availability

▶ Licensing

▶ Maintenance

▶ Networking

▶ Security

▶ Status

Connection Details - acm

Switch Password

.....

Confirm Switch Password

Msg Period

30

Minutes (1 - 72)

Provide AE Services certificate to switch☒

Secure H323 Connection☐

Processor Ethernet☒

ApplyCancel

The display returns to the **Switch Connections** screen which shows that the **CM3010** switch connection has been added.

Switch Connections

Add Connection

Connection Name	Processor Ethernet	Msg Period	Number of Active Connections
<input checked="" type="radio"/> acm	Yes	30	1
<input type="radio"/> cmpub	Yes	30	1

Edit Connection


Edit PE/CLAN IPs

Edit H.323 Gatekeeper

Delete Connection

Survivability Hierarchy

Click the **Edit PE/CLAN IPs** button on the **Switch Connections** screen to configure the **procr** or **CLAN** IP Address(es). The **Edit Processor Ethernet IP** screen is displayed. Enter the IP address of the **procr** interface and click the **Add/Edit Name or IP** button.



Application Enablement Services
 Management Console

Welcome: User cust
 Last login: Tue Jan 24 14:33:24 2017 from 10.64.10.47
 Number of prior failed login attempts: 0
 HostName/IP: aes/10.64.110.15
 Server Offer Type: VIRTUAL_APPLIANCE_ON_VMWARE
 SW Version: 7.0.1.0.0.15-0
 Server Date and Time: Fri Jan 27 12:40:37 MST 2017
 HA Status: Not Configured


Communication Manager Interface | Switch Connections
 Home | Help | Logout

▶ AE Services
 ▼ Communication Manager Interface
 Switch Connections
 ▶ Dial Plan
 High Availability
 ▶ Licensing
 ▶ Maintenance

Edit Processor Ethernet IP - acm

Name or IP Address	Status
10.64.110.10	In Use

Click the **Edit H.323 Gatekeeper** button on the **Switch Connections** screen to configure the **procr** or **CLAN** IP Address(es) for DMCC registrations. The **Edit H.323 Gatekeeper** screen is displayed. Enter the IP address of the **procr** interface and click the **Add Name or IP** button.



Application Enablement Services
 Management Console

Welcome: User cust
 Last login: Tue Jan 24 14:33:24 2017 from 10.64.10.47
 Number of prior failed login attempts: 0
 HostName/IP: aes/10.64.110.15
 Server Offer Type: VIRTUAL_APPLIANCE_ON_VMWARE
 SW Version: 7.0.1.0.0.15-0
 Server Date and Time: Fri Jan 27 12:41:50 MST 2017
 HA Status: Not Configured

Communication Manager Interface | Switch Connections
 Home | Help | Logout

▶ AE Services
 ▼ Communication Manager Interface
 Switch Connections
 ▶ Dial Plan
 High Availability
 ▶ Licensing
 ▶ Maintenance

Edit H.323 Gatekeeper - acm

Name or IP Address

● 10.64.110.10

6.2. Add TSAPI Link

Navigate to the **AE Services** → **TSAPI** → **TSAPI Links** page to add a TSAPI CTI Link. Click **Add Link** (not shown).

Select a **Switch Connection** using the drop down menu. Select the **Switch CTI Link Number** using the drop down menu. The **Switch CTI Link Number** must match the number configured in the **cti-link** form in **Section 5.6**. Select **Both** in the **Security** field.

Click **Apply Changes**.

AVAYA

Application Enablement Services
Management Console

Welcome: User cust
Last login: Tue Jan 24 14:33:24 2017 from 10.64.10.47
Number of prior failed login attempts: 0
HostName/IP: aes/10.64.110.15
Server Offer Type: VIRTUAL_APPLIANCE_ON_VMWARE
SW Version: 7.0.1.0.0.15-0
Server Date and Time: Fri Jan 27 12:43:42 MST 2017
HA Status: Not Configured

AE Services | TSAPI | TSAPI Links

Home | Help | Logout

▼ AE Services

▶ CVLAN

▶ DLG

▶ DMCC

▶ SMS

▼ TSAPI

▪ TSAPI Links

▪ TSAPI Properties

▶ TWS

Communication Manager

Edit TSAPI Links

Link1

Switch Connectionacm

Switch CTI Link Number3

ASAI Link Version7

SecurityBoth

Apply ChangesCancel ChangesAdvanced Settings

The user is returned to the **TSAPI Links** screen which shows that the **acm** link has been added.

TSAPI Links


Link	Switch Connection	Switch CTI Link #	ASAI Link Version	Security
<input checked="" type="radio"/> 1	acm	3	7	Both
<input type="radio"/> 2	cmpub	1	7	Both

Add LinkEdit LinkDelete Link

6.3. Configure User

A user needs to be created for Qfiniti Observe to communicate with AES. Navigate to **User Management → User Admin → Add User**.

Fill in **User Id**, **Common Name**, **Surname**, **User Password** and **Confirm Password**. Set the **CT User** to **Yes**, and **Apply**.

**Application Enablement Services**
Management Console

Welcome: User cust
Last login: Tue Jan 24 14:33:24 2017 from 10.64.10.47
Number of prior failed login attempts: 0
HostName/IP: aes/10.64.110.15
Server Offer Type: VIRTUAL_APPLIANCE_ON_VMWARE
SW Version: 7.0.1.0.0.15-0
Server Date and Time: Fri Jan 27 12:46:11 MST 2017
HA Status: Not Configured

User Management | User Admin | Add UserHome | Help | Logout

▶ AE Services

▶ Communication Manager Interface

▶ High Availability

▶ Licensing

▶ Maintenance

▶ Networking

▶ Security

▶ Status

▼ User Management

▶ Service Admin

▼ User Admin

▪ Add User

▪ Change User Password

▪ List All Users

▪ Modify Default Users

▪ Create Users

Add User

Fields marked with * can not be empty.

* User Id

* Common Name

* Surname

* User Password

* Confirm Password

Admin Note

Avaya Role

Business Category

Car License

CM Home

Css Home

CT User

Navigate to **Security → Security Database → CTI Users → List All Users**. Select the recently added user and click **Edit**.

CTI Users

User ID	Common Name	Worktop Name	Device ID
<input type="radio"/> afiniti	afiniti	NONE	NONE
<input type="radio"/> interop	interop	NONE	NONE
<input type="radio"/> interop1	interop1	NONE	NONE
<input type="radio"/> interop2	interop2	NONE	NONE
<input type="radio"/> interop3	interop3	NONE	NONE
<input checked="" type="radio"/> qfiniti	qfiniti	NONE	NONE
<input type="radio"/> synergem	synergem	NONE	NONE

Check the box for **Unrestricted Access** and click **Apply Changes**.

Edit CTI User

User Profile:

User ID	qfiniti
Common Name	qfiniti
Worktop Name	NONE ▾
Unrestricted Access	<input checked="" type="checkbox"/>

Call and Device Control:

Call Origination/Termination and Device Status	None ▾
--	--------

Call and Device Monitoring:

Device Monitoring	None ▾
Calls On A Device Monitoring	None ▾
Call Monitoring	<input type="checkbox"/>

Routing Control:

Allow Routing on Listed Devices	None ▾
---------------------------------	--------

7. Configure OpenText Qfiniti Observe

The Qfiniti product line consists of various applications. Three recording modes were tested: Service Observe, Service Observe – No Talk and Media Streaming (Multiple Registrations). However, this Application Notes contains instructions for Service Observe – No Talk only. The configurations of these modes are very similar; the differences are noted below.

Service Observe

- **Switch definition:** Set Service Observe Button field to 268 and keep Observe String field blank.
- **Logger Voice Recording Manager:** Set PCM Acquisition field to “Service Observe”.

Service Observe – No Talk

- **Switch definition:** Set Observe String field to the Feature Access Code of the SO – No Talk feature (e.g., “*46”).
- **Logger Voice Recording Manager:** Set PCM Acquisition field to “SO – No Talk”.

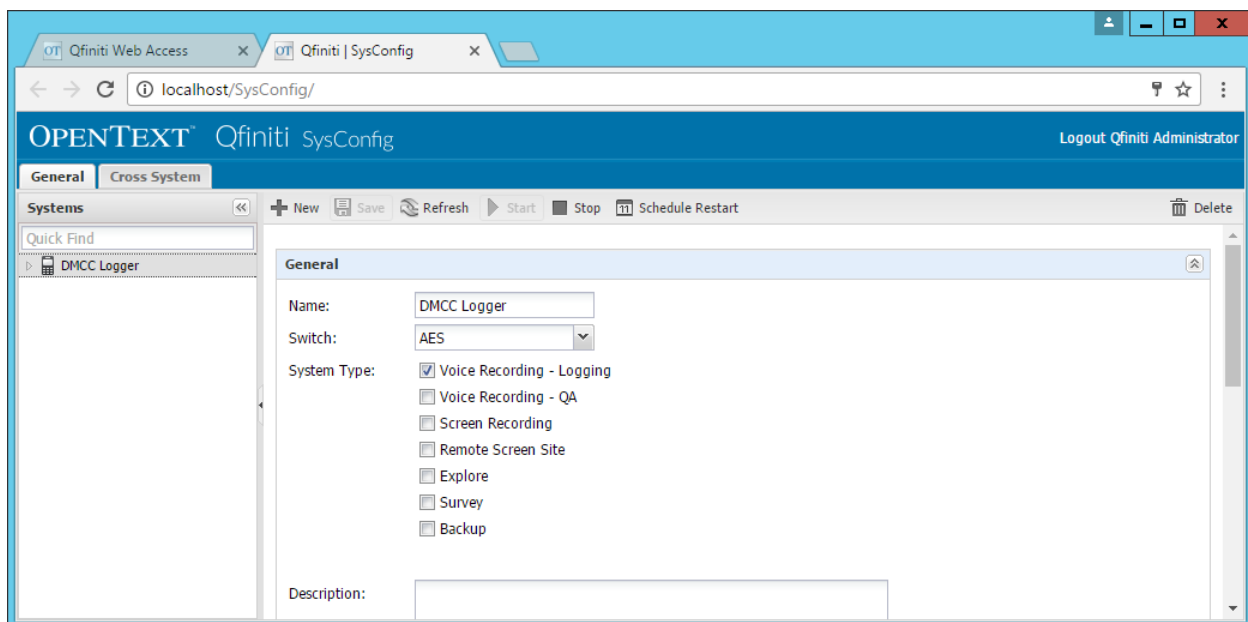
Media Streaming

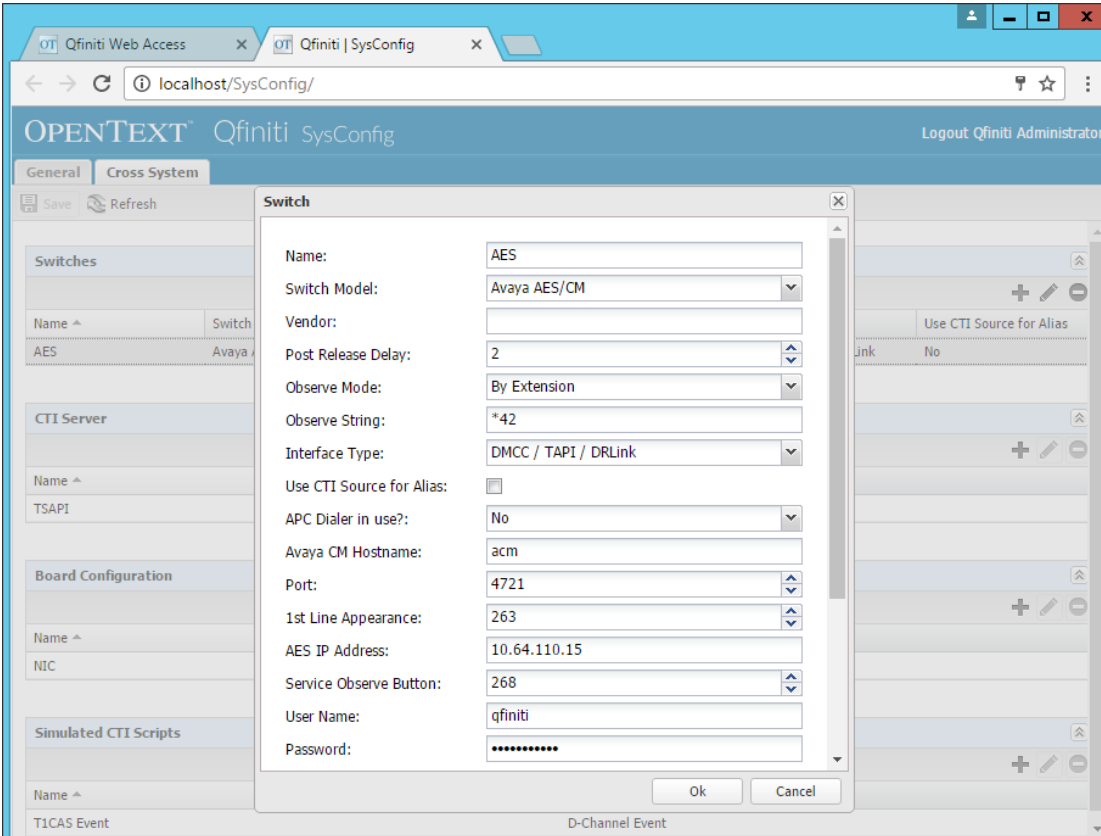
- **Logger Voice Recording Manager:** Set PCM Acquisition field to “Media Streaming”.

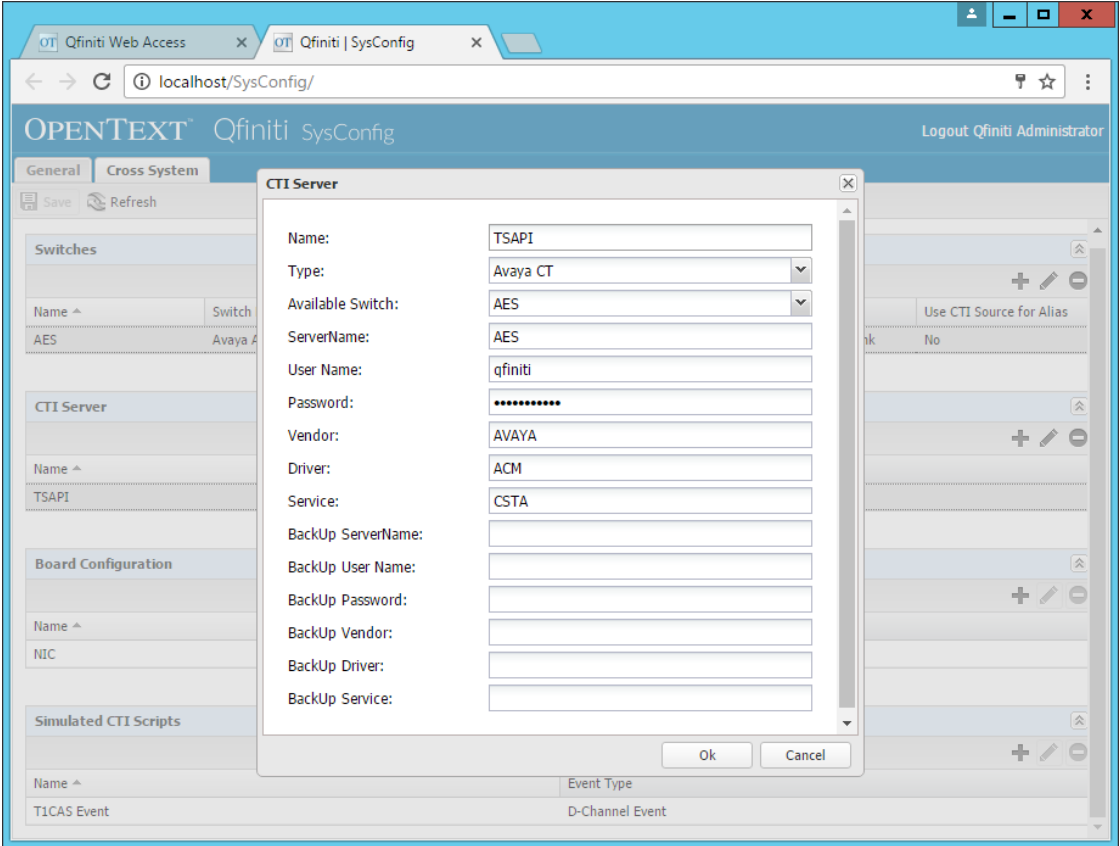
This document is specific to Service Observe – No Talk and that configuration is described below.

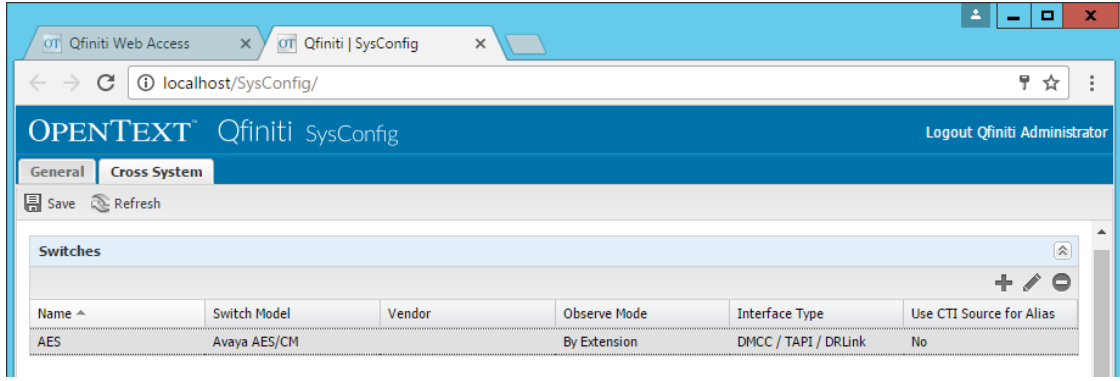
7.1. Qfiniti Configuration – Cross System

Launch the **Qfiniti SysConfig** interface via a web browser using the following URL: <http://localhost/SysConfig>. After logging in as user “administrator”, a webpage will appear that has two tabs – **General** and **Cross System**. Select the former to define a switch, CTI server and board configuration. Perform the steps given on the following pages.



Step	Description
1	<p data-bbox="302 186 662 218">Create a Switch Definition</p> <p data-bbox="302 243 1396 405">In the Switches section of the Cross System tab, click on the New Item icon (plus sign). In the dialog box that pops up, specify the Name of an AES Switch definition, then specify or select the given values of the following fields. Keep default values for any fields not given below.</p> <ul data-bbox="350 430 1219 892" style="list-style-type: none"> • Switch Model – <i>Avaya AES/CM</i> • Post Release Delay – 2 (seconds) or greater • Observe Mode – <i>By Extension</i> • Observe String – “*42” (as configured in Section 5.7) • Interface Type – <i>DMCC/TAPI/DRLink</i> • Avaya CM Hostname – Hostname of Communication Manager • Port – 4721 • 1st Line Appearance – 263 • AES IP Address – IP address of AES • Service Observe Button – 268 (corresponds to Button 6) • User Name – User ID specified in Section 6.3 • Password – Password specified in Section 6.3 <p data-bbox="302 911 1396 984">When done, click on the Ok button to close the window. The new entry will appear in the list of Switch definitions.</p> 

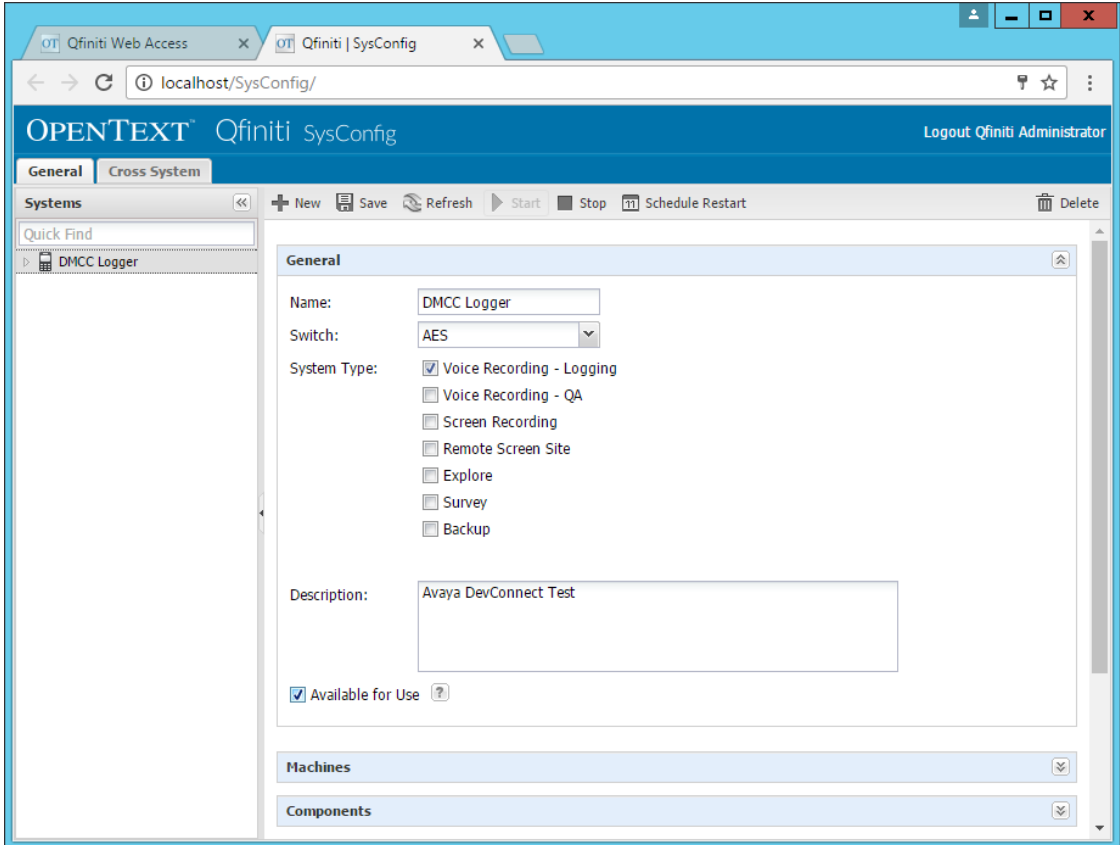
Step	Description
2	<p data-bbox="302 184 557 220">Create CTI Server</p> <p data-bbox="302 243 1382 363">In the CTI Server section, click on the New Item icon (plus sign). In the dialog box that pops up, specify the Name of a TSAPI CTI Server, then specify or select the given values of the following fields. Any fields not given below are optional.</p> <ul data-bbox="350 390 1271 695" style="list-style-type: none"> • Type – <i>Avaya CT</i> • Available Switch – Name of the Switch defined in the previous step • Server Name – Hostname or IP address of AES • User Name – User ID specified in Section 6.3 • Password – Password specified in Section 6.3 • Vendor – <i>Avaya</i> • Driver – Hostname of the TSAPI Link (see Section 6.2) • Service – <i>CSTA</i> <p data-bbox="302 714 1398 833">When done, click on the Ok button to close the window. The new entry will appear in the list of CTI Server definitions. Below is a screenshot showing a CTI Server named “TSAPI”.</p> 

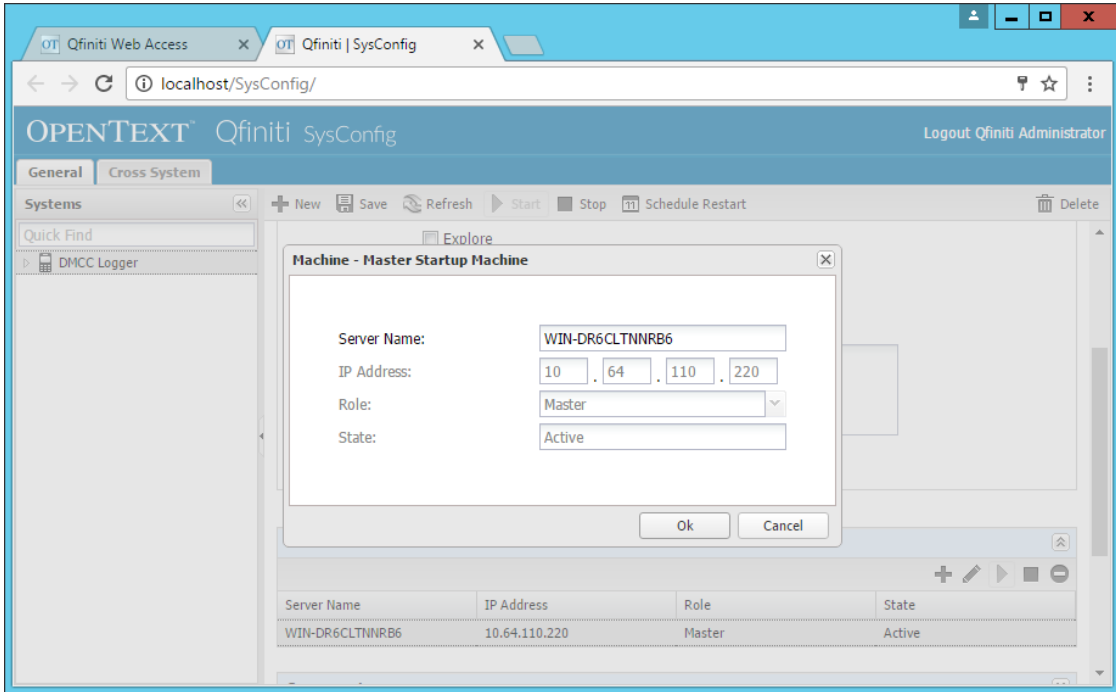
Step	Description												
3	<p>Define a Board Configuration (not shown)</p> <p>Although Qfiniti uses DMCC to record a call, a board configuration is still required. In the Board Configuration section, click on the New Item icon (plus sign). In the dialog box that pops up, specify the Name for a default board and select <i>Network Interface Card (NIC)</i> as the Model. Keep default values for the other fields. When done, click on the Ok button to close the window.</p>												
4	<p>IMPORTANT! Press the Save button near the top of the page (below the tabs) in order to save all changes. If the tabs are changed without doing this, a prompt to save changes first will appear.</p>  <p>The screenshot shows the Qfiniti SysConfig web interface. The browser address bar shows 'localhost/SysConfig/'. The page title is 'OPENTEXT Qfiniti SysConfig'. There are tabs for 'General' and 'Cross System'. Below the tabs are 'Save' and 'Refresh' buttons. The main content area is titled 'Switches' and contains a table with the following data:</p> <table><thead><tr><th>Name ^</th><th>Switch Model</th><th>Vendor</th><th>Observe Mode</th><th>Interface Type</th><th>Use CTI Source for Alias</th></tr></thead><tbody><tr><td>AES</td><td>Avaya AES/CM</td><td></td><td>By Extension</td><td>DMCC / TAPI / DRLink</td><td>No</td></tr></tbody></table>	Name ^	Switch Model	Vendor	Observe Mode	Interface Type	Use CTI Source for Alias	AES	Avaya AES/CM		By Extension	DMCC / TAPI / DRLink	No
Name ^	Switch Model	Vendor	Observe Mode	Interface Type	Use CTI Source for Alias								
AES	Avaya AES/CM		By Extension	DMCC / TAPI / DRLink	No								

7.2. Qfiniti Configuration – Voice Logger

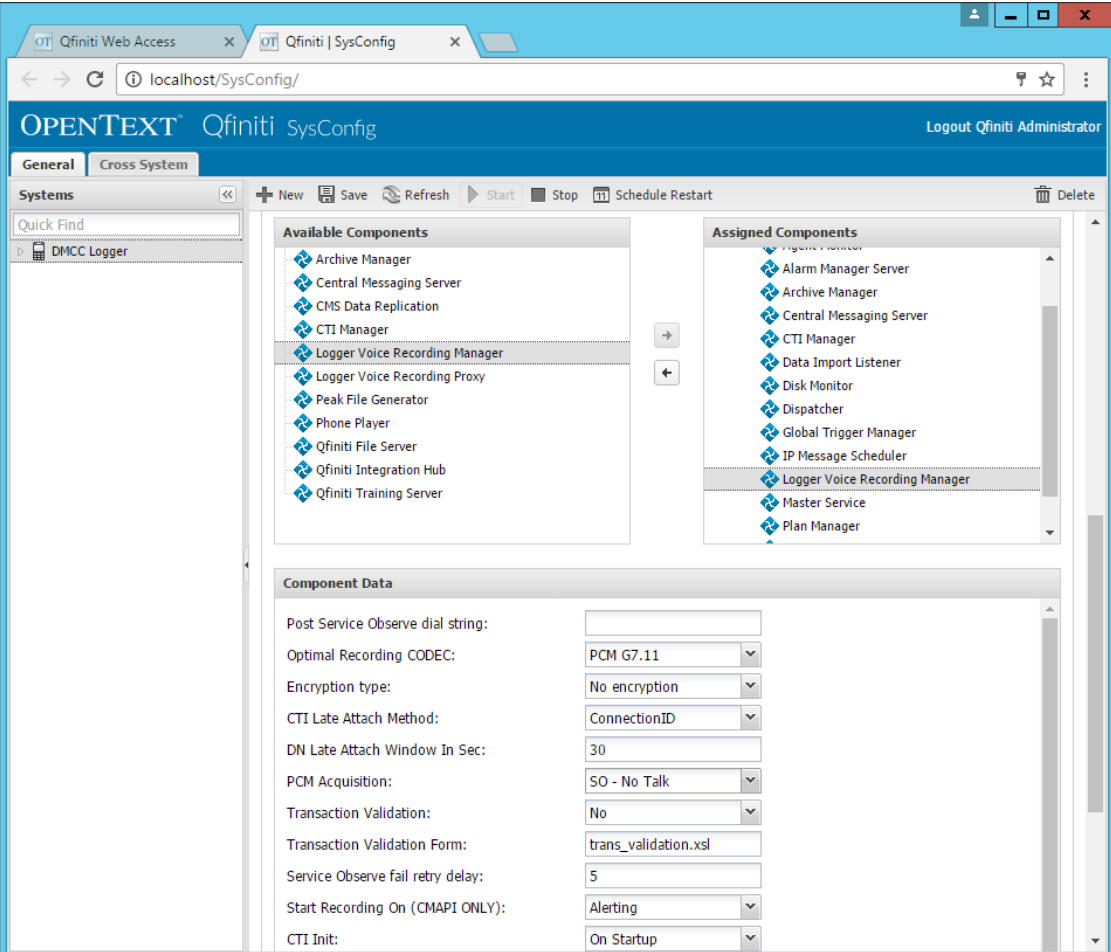
After configuring Cross-System items, click on the **General** tab in order to define a DMCC Voice Logger system. Perform the steps given below.

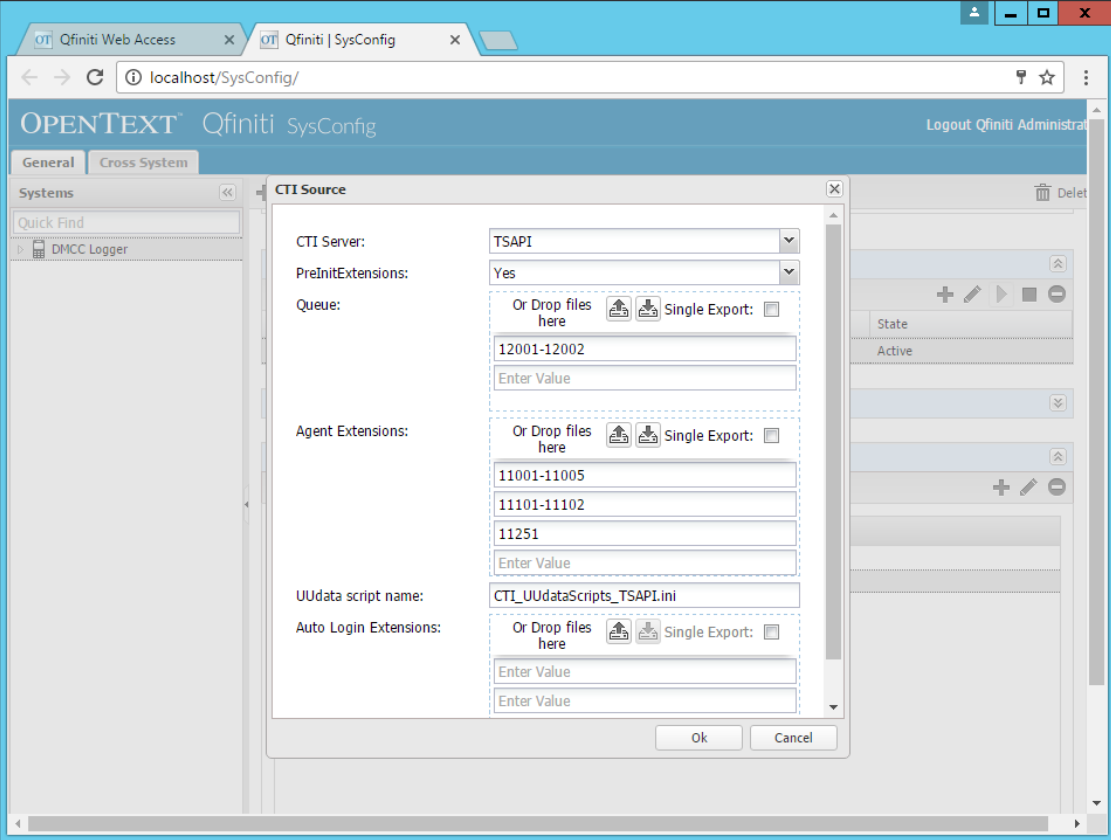
IMPORTANT: All steps must be completed before the data can be saved (via the **Save** button).

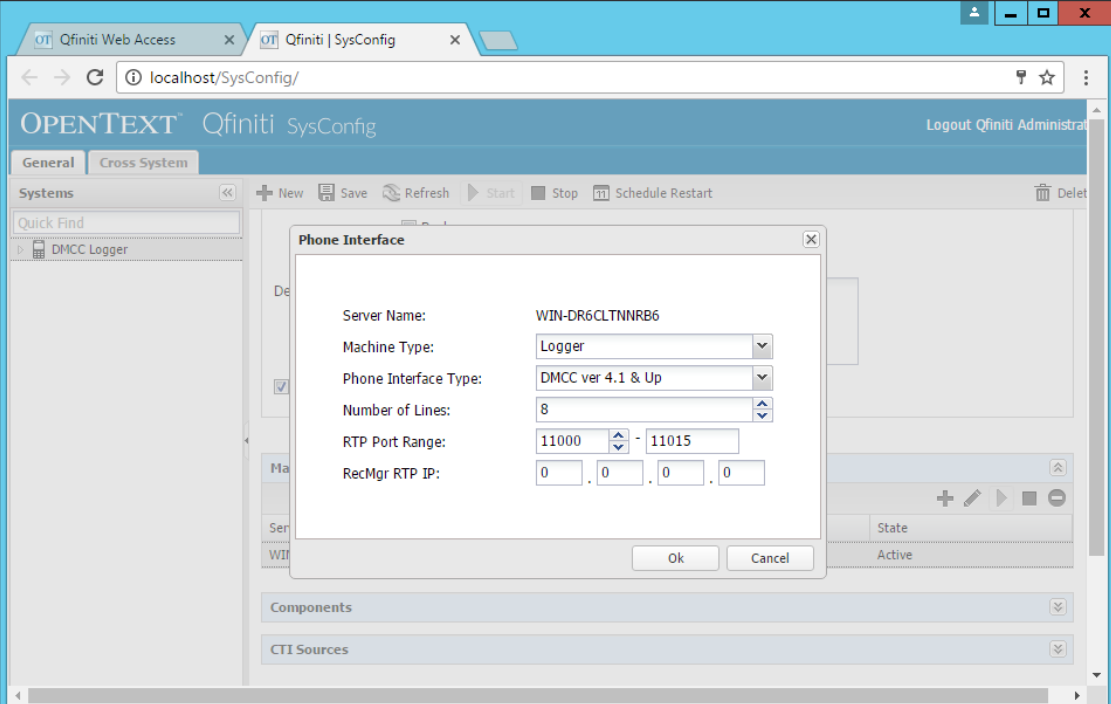
Step	Description
1	<p>Create a Voice Logger System</p> <p>Under the General tab, click the New icon to create a Voice Logger. Provide a descriptive Name, select the Switch definition that was created in <i>Step 1</i>, and select Voice Recording – Logging as the System Type. A Description is optional. Check the Available for Use checkbox to make the system active.</p>  <p>The screenshot shows the Qfiniti SysConfig web interface. The 'General' tab is selected, and the 'DMCC Logger' system is being configured. The 'Name' field is 'DMCC Logger', the 'Switch' is 'AES', and the 'System Type' is 'Voice Recording - Logging'. The 'Description' field contains 'Avaya DevConnect Test'. The 'Available for Use' checkbox is checked. The 'Machines' and 'Components' sections are visible at the bottom.</p>

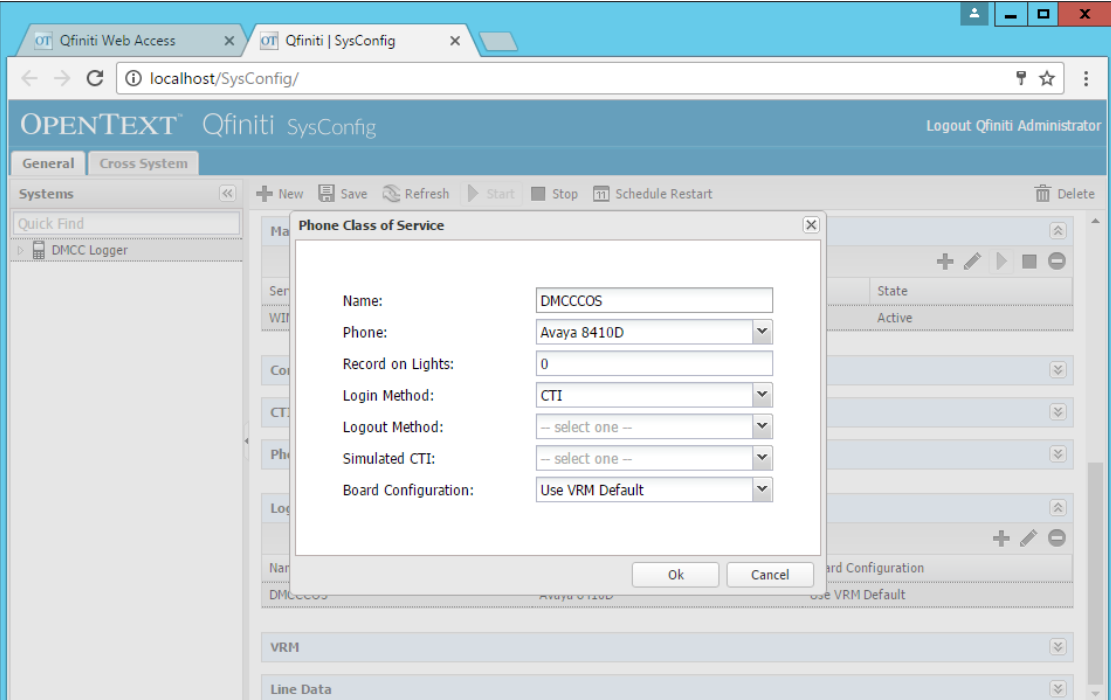
Step	Description
2	<p>In the Machines section, press the New Item icon (plus sign), and then provide the Name and IP Address of the server that will be running Qfiniti. Specify the Server Role to be “Master”. (The State cannot be set.)</p> <p>Below is a screenshot of a system named “DMCC Logger” on a server named “WIN-DR6CLTNNRB6” while the system was running.</p> 

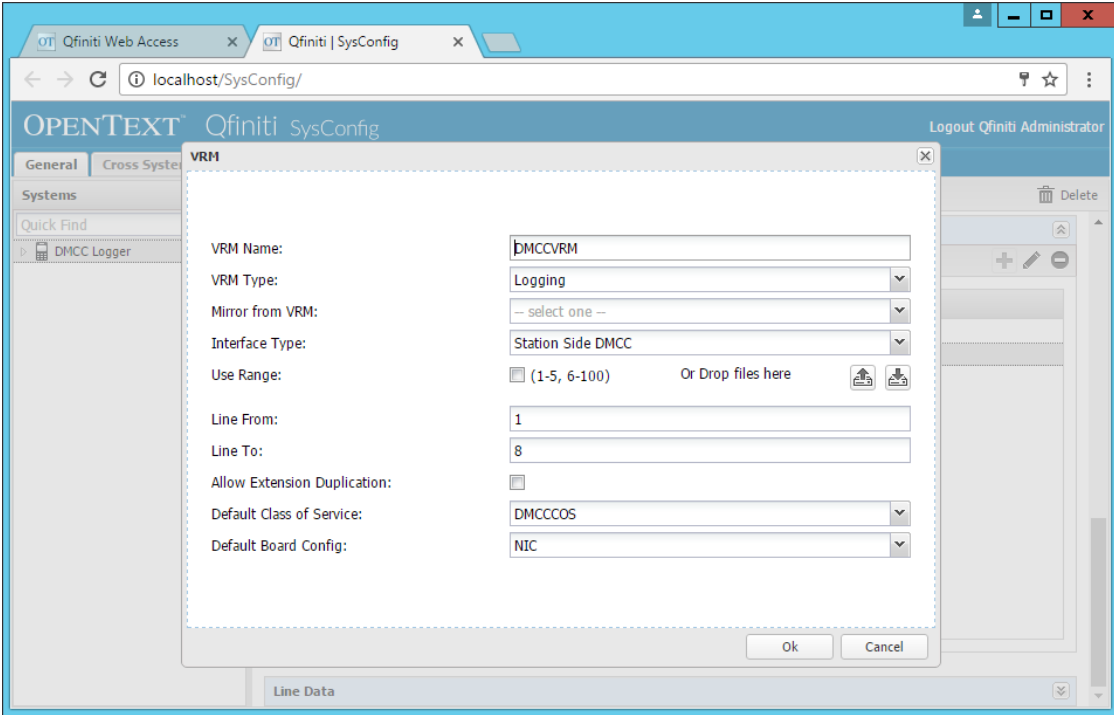
Step	Description
3	<p>In the Components section, assign the required Qfiniti components to the selected machine name. Note: This step is not shown in detail; it will be performed by OpenText personnel and is covered in product documentation. The minimum set of components required for use with the Avaya AES is:</p> <ul style="list-style-type: none"> • Agent Monitor • Alarm Manager Server • Archive Manager (requires additional configuration) • Central Messaging Server • CTI Manager • Data Import Listener • Disk Monitor • Dispatcher • Global Trigger Manager • IP Message Scheduler • Logger Voice Recording Manager (requires additional configuration; see <i>Step 8</i>) • Master Service • Peak File Generator • Plan Manager • Qfiniti File Server (requires additional configuration) • Session Manager

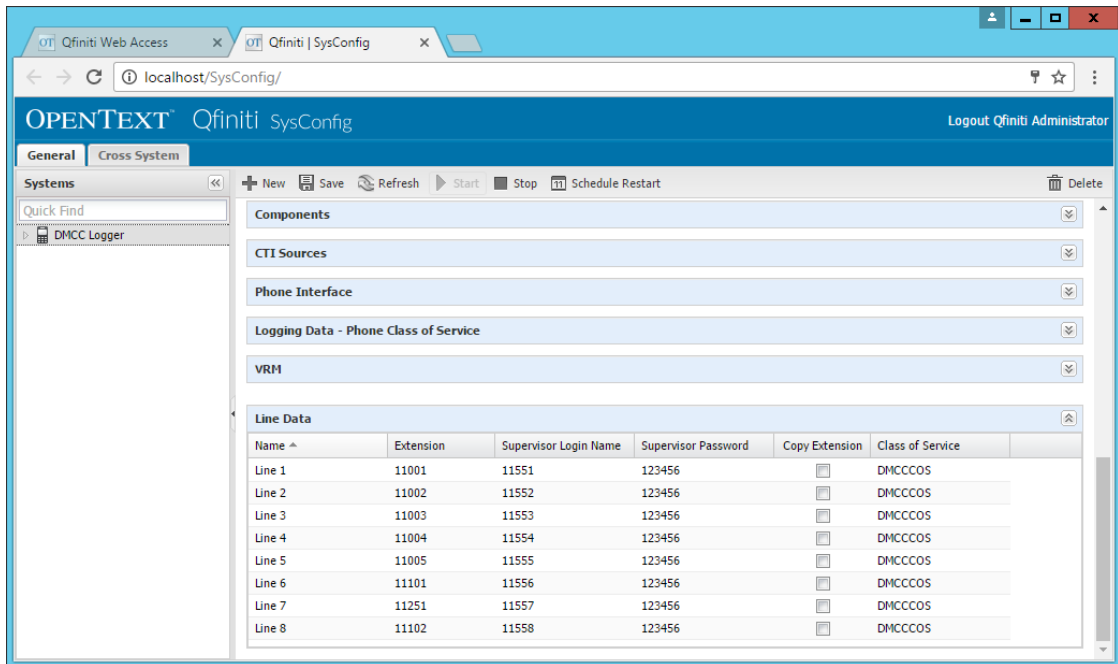
Step	Description																								
4	<p>Configure Logger Voice Recording Manager</p> <p>In the list of assigned components, select Logger Voice Recording Manager (LRecMan). The configuration parameters for this component will be displayed in the Component Data section. Select the given values of the following fields. Keep default values for any fields not given below.</p> <ul style="list-style-type: none"> • Optimal Recording CODEC – <i>PCM G7.11</i> • PCM Acquisition – <i>SO – No Talk</i> • Start Recording On – <i>Alerting</i> <p>Note: This configuration assumes that the Communication Manager has been set up for G.711 codec.</p>  <p>The screenshot shows the Qfiniti SysConfig web interface. The 'Available Components' list on the left includes 'Logger Voice Recording Manager', which is highlighted. The 'Assigned Components' list on the right also includes 'Logger Voice Recording Manager'. The 'Component Data' section at the bottom shows the following configuration values:</p> <table border="1"> <thead> <tr> <th>Field</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>Post Service Observe dial string:</td> <td></td> </tr> <tr> <td>Optimal Recording CODEC:</td> <td>PCM G7.11</td> </tr> <tr> <td>Encryption type:</td> <td>No encryption</td> </tr> <tr> <td>CTI Late Attach Method:</td> <td>ConnectionID</td> </tr> <tr> <td>DN Late Attach Window In Sec:</td> <td>30</td> </tr> <tr> <td>PCM Acquisition:</td> <td>SO - No Talk</td> </tr> <tr> <td>Transaction Validation:</td> <td>No</td> </tr> <tr> <td>Transaction Validation Form:</td> <td>trans_validation.xml</td> </tr> <tr> <td>Service Observe fail retry delay:</td> <td>5</td> </tr> <tr> <td>Start Recording On (CMAPI ONLY):</td> <td>Alerting</td> </tr> <tr> <td>CTI Init:</td> <td>On Startup</td> </tr> </tbody> </table>	Field	Value	Post Service Observe dial string:		Optimal Recording CODEC:	PCM G7.11	Encryption type:	No encryption	CTI Late Attach Method:	ConnectionID	DN Late Attach Window In Sec:	30	PCM Acquisition:	SO - No Talk	Transaction Validation:	No	Transaction Validation Form:	trans_validation.xml	Service Observe fail retry delay:	5	Start Recording On (CMAPI ONLY):	Alerting	CTI Init:	On Startup
Field	Value																								
Post Service Observe dial string:																									
Optimal Recording CODEC:	PCM G7.11																								
Encryption type:	No encryption																								
CTI Late Attach Method:	ConnectionID																								
DN Late Attach Window In Sec:	30																								
PCM Acquisition:	SO - No Talk																								
Transaction Validation:	No																								
Transaction Validation Form:	trans_validation.xml																								
Service Observe fail retry delay:	5																								
Start Recording On (CMAPI ONLY):	Alerting																								
CTI Init:	On Startup																								

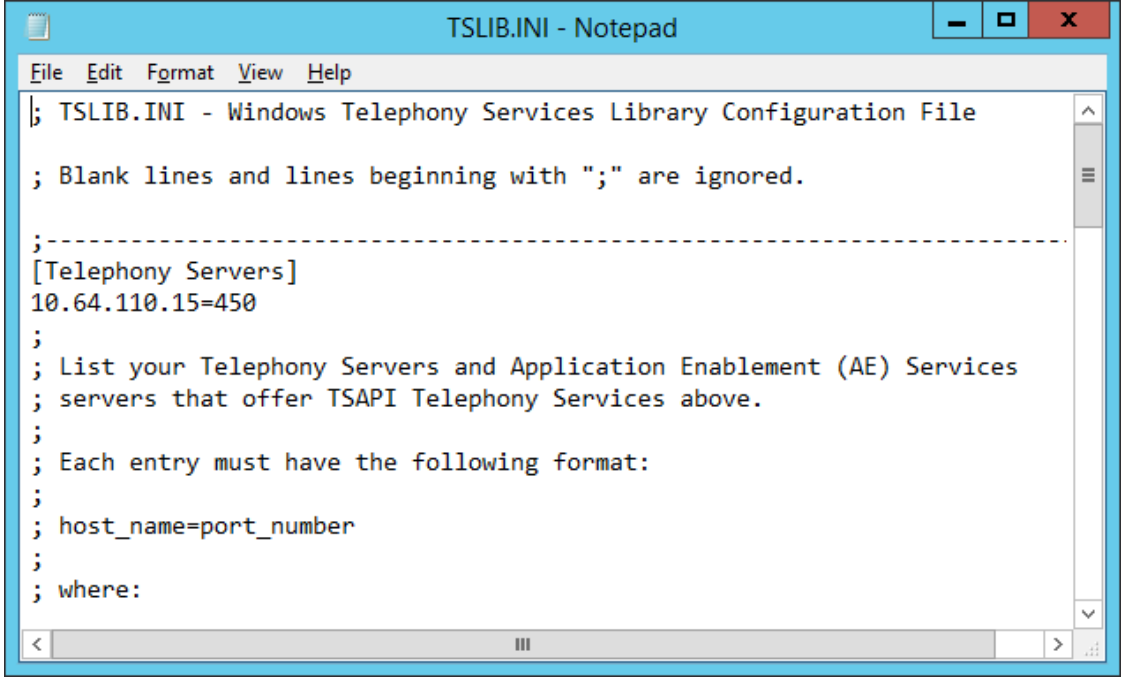
Step	Description
5	<p>Identify the CTI Source</p> <p>In the CTI Sources section, select the machine name, and then click on the Add CTI Source icon (plus sign). In the dialog box that pops up, select the name of the CTI Server that was defined in <i>Step 2</i>. Specify the range(s) of Agent Extensions (or individual extensions) from Section 5.2 that will be used for the tests. A Queue is defined from Section 5.3. Keep default values for the other fields. When done, click on the Ok button to close the window.</p> 

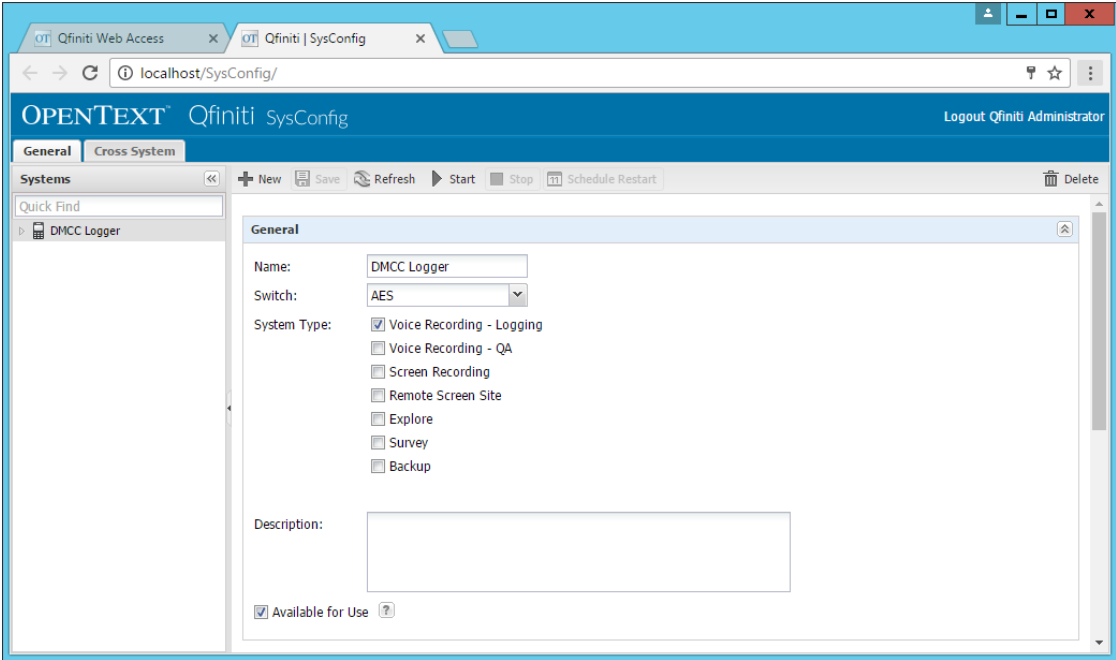
Step	Description
6	<p>Define a Phone Interface</p> <p>In the Phone Interface section, select the server name, and then click on the Edit Item icon (pencil) to define the phone interface for the logger. In the dialog box that pops up, specify or select the given values of the following fields.</p> <ul style="list-style-type: none"> • Machine Type – <i>Logger</i> • Phone Interface Type – <i>DMCC ver 4.1 & Up</i> • Number of Lines – quantity of stations set up in Section 5.2 <p>When done, click on the Ok button to close the window.</p> <p>Note: The RTP Port Range will be set automatically based upon the line quantity. The RecMgr RTP IP field should remain set as “0.0.0.0” so that the Qfiniti Observe server receives the RTP data.</p> 

Step	Description
7	<p data-bbox="300 184 730 220">Define a Phone Class of Service</p> <p data-bbox="300 241 1372 409">In the Logging Data – Phone Class of Service section, click on the New Item icon (plus sign). In the dialog box that pops up, specify the Name of a Phone Class of Service, and then specify or select the given values of the following fields. Keep default values for any fields not given below.</p> <ul data-bbox="349 430 1136 577" style="list-style-type: none"> • Phone – <i>Avaya 8410D</i> (or any other Avaya phone model) • Record on Lights – <i>0</i> • Login Method – <i>CTI</i> • Board Configuration – <i>Use VRM Default</i> <p data-bbox="300 598 1023 634">When done, click on the Ok button to close the window.</p> 

Step	Description
8	<p>Define a VRM</p> <p>In the VRM section, select the machine name, and then click on the New Item icon (plus sign). In the dialog box that pops up, specify the Name of a Virtual Recording Machine (VRM). Then specify or select the given values of the following fields. Keep default values for any fields not given below.</p> <ul style="list-style-type: none"> • VRM Type – <i>Logging</i> • Interface Type – <i>Station Side DMCC</i> • Line From – <i>1</i> • Line To – value \leq number of lines specified in <i>Step 10</i> • Default Class of Service – name specified in <i>Step 11</i> • Default Board Config – name specified in <i>Step 3</i> <p>When done, click on the Ok button to close the window.</p> 

Step	Description																																																						
9	<p>Assign Recording Lines</p> <p>Select the VRM named in <i>Step 12</i> so that the Line Data section displays a list of line numbers. For each line, specify the Extension of the agent device to be recorded at that line and a Supervisor Login (virtual extension) and Password for one of the available Device and Media Control API stations that were configured in Section 5.2. Also select the Class of Service defined in <i>Step 11</i> (which should be the default).</p>  <p>The screenshot shows the Qfiniti SysConfig web interface. The 'Line Data' section is expanded, displaying a table with the following data:</p> <table><tr><th>Name</th><th>Extension</th><th>Supervisor Login Name</th><th>Supervisor Password</th><th>Copy Extension</th><th>Class of Service</th></tr><tr><td>Line 1</td><td>11001</td><td>11551</td><td>123456</td><td><input type="checkbox"/></td><td>DMCCOS</td></tr><tr><td>Line 2</td><td>11002</td><td>11552</td><td>123456</td><td><input type="checkbox"/></td><td>DMCCOS</td></tr><tr><td>Line 3</td><td>11003</td><td>11553</td><td>123456</td><td><input type="checkbox"/></td><td>DMCCOS</td></tr><tr><td>Line 4</td><td>11004</td><td>11554</td><td>123456</td><td><input type="checkbox"/></td><td>DMCCOS</td></tr><tr><td>Line 5</td><td>11005</td><td>11555</td><td>123456</td><td><input type="checkbox"/></td><td>DMCCOS</td></tr><tr><td>Line 6</td><td>11101</td><td>11556</td><td>123456</td><td><input type="checkbox"/></td><td>DMCCOS</td></tr><tr><td>Line 7</td><td>11251</td><td>11557</td><td>123456</td><td><input type="checkbox"/></td><td>DMCCOS</td></tr><tr><td>Line 8</td><td>11102</td><td>11558</td><td>123456</td><td><input type="checkbox"/></td><td>DMCCOS</td></tr></table>	Name	Extension	Supervisor Login Name	Supervisor Password	Copy Extension	Class of Service	Line 1	11001	11551	123456	<input type="checkbox"/>	DMCCOS	Line 2	11002	11552	123456	<input type="checkbox"/>	DMCCOS	Line 3	11003	11553	123456	<input type="checkbox"/>	DMCCOS	Line 4	11004	11554	123456	<input type="checkbox"/>	DMCCOS	Line 5	11005	11555	123456	<input type="checkbox"/>	DMCCOS	Line 6	11101	11556	123456	<input type="checkbox"/>	DMCCOS	Line 7	11251	11557	123456	<input type="checkbox"/>	DMCCOS	Line 8	11102	11558	123456	<input type="checkbox"/>	DMCCOS
Name	Extension	Supervisor Login Name	Supervisor Password	Copy Extension	Class of Service																																																		
Line 1	11001	11551	123456	<input type="checkbox"/>	DMCCOS																																																		
Line 2	11002	11552	123456	<input type="checkbox"/>	DMCCOS																																																		
Line 3	11003	11553	123456	<input type="checkbox"/>	DMCCOS																																																		
Line 4	11004	11554	123456	<input type="checkbox"/>	DMCCOS																																																		
Line 5	11005	11555	123456	<input type="checkbox"/>	DMCCOS																																																		
Line 6	11101	11556	123456	<input type="checkbox"/>	DMCCOS																																																		
Line 7	11251	11557	123456	<input type="checkbox"/>	DMCCOS																																																		
Line 8	11102	11558	123456	<input type="checkbox"/>	DMCCOS																																																		
10	<p>IMPORTANT! Press the Save button near the top of the page (below the tabs) in order to save all changes. If tabs are changed without saving changes, user will be prompted to save changes first.</p>																																																						

Step	Description
11	<p>Edit the TSLIB.INI File</p> <p>Open the <i>TSLIB.INI</i> file located in folder C:\Program Files\Avaya\AE Services\TSAPI Client. Add the following line in the [Telephony Servers] section of the file (if not already present):</p> <p><AES Server Client Connectivity Hostname/IP address>=450</p> <p>This line specifies the IP address (or hostname) and port that Qfiniti will use to connect to the TSAPI service on the AES server. The IP address or hostname should be the value that was specified in <i>Step 2</i>.</p> <p>Copy this file to the Windows folder, too.</p> <p>To test the connection without Qfiniti, run Avaya's TSAPI Test Application, a utility program of the TSAPI Client.</p>  <pre> TSLIB.INI - Windows Telephony Services Library Configuration File ; Blank lines and lines beginning with ";" are ignored. ;----- [Telephony Servers] 10.64.110.15=450 ; ; List your Telephony Servers and Application Enablement (AE) Services ; servers that offer TSAPI Telephony Services above. ; ; Each entry must have the following format: ; ; host_name=port_number ; ; where: </pre>

Step	Description
12	<p>Verify that the Available for Use checkbox in the General section has been checked and all data has been saved.</p> <p>Initially, Qfiniti must be started by going to the Windows Services Manager and starting the Qfiniti Startup Service. Henceforth, as long as the Startup Service is running, Qfiniti can be stopped and restarted via the Start and Stop buttons at the top of the page. The Refresh button may be pressed first to determine the current status of the system.</p>  <p>The screenshot shows the Qfiniti SysConfig web application. The browser address bar indicates the URL is localhost/SysConfig/. The application has a blue header with the 'OPENTEXT Qfiniti SysConfig' logo and a 'Logout Qfiniti Administrator' link. Below the header, there are tabs for 'General' and 'Cross System'. The 'General' tab is active, showing configuration options for a system named 'DMCC Logger'. The 'System Type' section includes several checkboxes: 'Voice Recording - Logging' (checked), 'Voice Recording - QA', 'Screen Recording', 'Remote Screen Site', 'Explore', 'Survey', and 'Backup'. At the bottom of the configuration form, the 'Available for Use' checkbox is checked. The left sidebar shows a 'Quick Find' search bar and a list of systems, with 'DMCC Logger' selected.</p>

8. Verification Steps

To verify the status CTI Links to AES, via SAT, use the **status aesvcs cti-link**. The **Service State** of **established** indicates that the CTI link is established.

```
status aesvcs cti-link
```

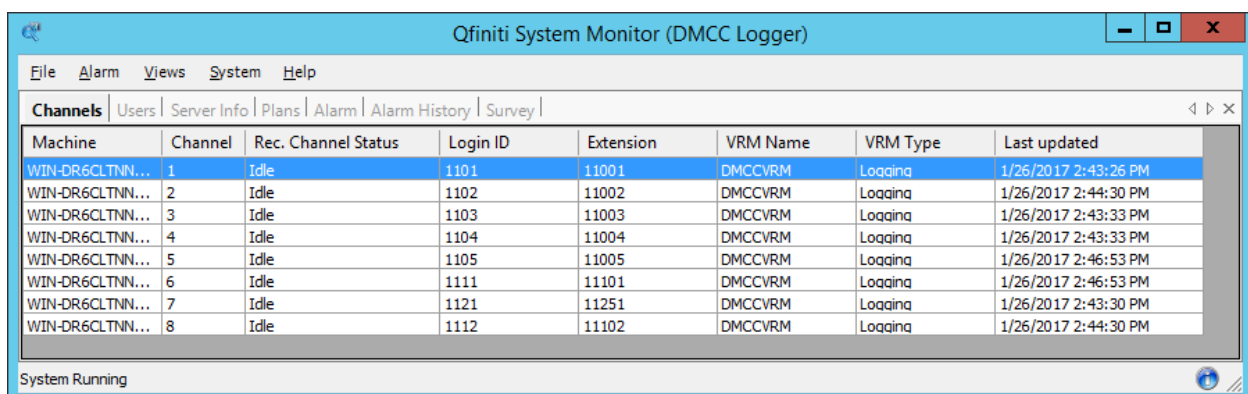
AE SERVICES CTI LINK STATUS						
CTI Link	Version	Mnt Busy	AE Services Server	Service State	Msgs Sent	Msgs Rcvd
1	5	no	aes6_tr1	established	15	15
2		no		down	0	0
3	4	no	AES2146	established	15	15

To verify Qfiniti Observe is able to monitor the stations correctly, use the **list monitored-station** command. All the stations that are being monitored by Qfiniti Observe are as shown below:

```
list monitored-station
```

MONITORED STATION									
Station Ext	Association 1		Association 2		Association 3		Association 4		
-----	CTI Link	CRV	CTI Link	CRV	CTI Link	CRV	CTI Link	CRV	
25001	1	27							
25002	1	25							
25003	1	22							
25004	1	15							
25005	1	13							
25051	1	17							
25101	1	11							
25551	1	8							
25552	1	4							

On the Qfiniti Server, open the **Qfiniti System Monitor**. Verify the **Rec. Channel Status** is **idle** for all configured lines. Also, the Agent Login IDs and Extensions can be viewed here.



Qfiniti System Monitor (DMCC Logger)							
File Alarm Views System Help							
Channels Users Server Info Plans Alarm Alarm History Survey							
Machine	Channel	Rec. Channel Status	Login ID	Extension	VRM Name	VRM Type	Last updated
WIN-DR6CLTNN...	1	Idle	1101	11001	DMCCVRM	Logging	1/26/2017 2:43:26 PM
WIN-DR6CLTNN...	2	Idle	1102	11002	DMCCVRM	Logging	1/26/2017 2:44:30 PM
WIN-DR6CLTNN...	3	Idle	1103	11003	DMCCVRM	Logging	1/26/2017 2:43:33 PM
WIN-DR6CLTNN...	4	Idle	1104	11004	DMCCVRM	Logging	1/26/2017 2:43:33 PM
WIN-DR6CLTNN...	5	Idle	1105	11005	DMCCVRM	Logging	1/26/2017 2:46:53 PM
WIN-DR6CLTNN...	6	Idle	1111	11101	DMCCVRM	Logging	1/26/2017 2:46:53 PM
WIN-DR6CLTNN...	7	Idle	1121	11251	DMCCVRM	Logging	1/26/2017 2:43:30 PM
WIN-DR6CLTNN...	8	Idle	1112	11102	DMCCVRM	Logging	1/26/2017 2:44:30 PM
System Running							

9. Conclusion

OpenText Qfiniti Observe was able to successfully interoperate with Avaya Aura® Communication Manager and Avaya Aura® Application Enablement Services.

10. Additional References

Documentation related to Avaya can be obtained from <https://support.avaya.com>.

- [1] *Administering Avaya Aura® Communication Manager*, Release 7.0.1, Issue 2.1, August 2016.
- [2] *Administering and Maintaining Avaya Aura® Application Enablement Service*, Issue 2, Release 7.0.1, August 2016.
- [3] *Administering Avaya Aura® Session Manager*, Release 7.0.1, Issue 2, May 2016.
- [4] *OpenText Qfiniti Configuration Guide*, Version 10.6, August 2016.

©2017 Avaya Inc. All Rights Reserved.

Avaya and the Avaya Logo are trademarks of Avaya Inc. All trademarks identified by ® and ™ are registered trademarks or trademarks, respectively, of Avaya Inc. All other trademarks are the property of their respective owners. The information provided in these Application Notes is subject to change without notice. The configurations, technical data, and recommendations provided in these Application Notes are believed to be accurate and dependable, but are presented without express or implied warranty. Users are responsible for their application of any products specified in these Application Notes.

Please e-mail any questions or comments pertaining to these Application Notes along with the full title name and filename, located in the lower right corner, directly to the Avaya DevConnect Program at devconnect@avaya.com.