



## **Avaya Solution & Interoperability Test Lab**

---

# **Application Notes for Configuring Avaya Aura® Communication Manager R6.0.1 as an Evolution Server, Avaya Aura® Session Manager R6.1 and Avaya Session Border Controller Advanced for Enterprise to support Telenor SIP Trunk Service – Issue 1.0**

## **Abstract**

These Application Notes describe the steps used to configure Session Initiation Protocol (SIP) trunking between the Telenor SIP Trunk service and an Avaya SIP enabled Enterprise Solution. The Avaya solution consists of Avaya Session Border Controller Advanced for Enterprise, Avaya Aura® Session Manager and Avaya Aura® Communication Manager as an Evolution Server. Telenor is a member of the DevConnect Service Provider program.

Information in these Application Notes has been obtained through DevConnect compliance testing and additional technical discussions. Testing was conducted via the DevConnect Program at the Avaya Solution and Interoperability Test Lab.

**NOTE:** This Application Note focused on the SIP Trunking aspect of the Avaya Session Border Controller Advanced for Enterprise. Advanced enterprise capabilities such as Remote Worker “a.k.a. Remote SIP Endpoints”, dual forking, and TLS/SRTP were not tested. As a result, the Avaya Session Border Controller for Enterprise is also considered Compliance Tested for this solution.

# 1. Introduction

These Application Notes describe the steps used to configure Session Initiation Protocol (SIP) trunking between Telenor SIP Trunk service and an Avaya SIP-enabled Enterprise Solution. The Avaya solution consists of Avaya Session Border Controller Advanced for Enterprise, Avaya Aura® Session Manager and Avaya Aura® Communication Manager Evolution Server. Customers using this Avaya SIP-enabled enterprise solution with Telenor SIP Trunk service are able to place and receive PSTN calls via a dedicated Internet connection and the SIP protocol. This converged network solution is an alternative to traditional PSTN trunks. This approach generally results in lower cost for the Enterprise customer.

## 2. General Test Approach and Test Results

The general test approach was to configure a simulated enterprise site using an Avaya SIP telephony solution consisting of Communication Manager, Session Manager and Session Border Controller. The enterprise site was configured to use the SIP Trunk service provided by Telenor.

### 2.1. Interoperability Compliance Testing

The interoperability test included the following:

- Incoming calls to the enterprise site from the PSTN routed to the DDI numbers assigned by Telenor
- Incoming PSTN calls made to SIP, H.323 and Digital telephones at the enterprise
- Outgoing calls from the enterprise site completed via Telenor to PSTN destinations
- Outgoing calls from the enterprise to the PSTN made from SIP, H.323 and Analogue telephones
- Calls using the G.711A codec
- Fax calls to/from a group 3 fax machine to a PSTN connected fax machine using T.38
- DTMF transmission using RFC 2833 with successful Voice Mail/Vector navigation for inbound and outbound calls
- User features such as hold and resume, transfer, conference, call forwarding, etc
- Caller ID Presentation and Caller ID Restriction
- Direct IP-to-IP media (also known as “shuffling”) with SIP and H.323 telephones
- Call coverage and call forwarding for endpoints at the enterprise site
- Transmission and response of SIP OPTIONS messages sent by Telenor requiring Avaya response and sent by Avaya requiring Telenor response

## 2.2. Test Results

Interoperability testing of the sample configuration was completed with successful results for the Telenor SIP Trunk service with the following observations:


- No inbound toll free numbers were tested as none were available from the Service Provider
- No Emergency Services numbers tested as test calls to these numbers should be pre-arranged with the Operator
- RTP Payload Type negotiation for DTMF on outgoing calls from a SIP phone failed, change of PT to 96 on the phone was required
- Telenor response to OPTIONS is SIP message 407 “Proxy Authentication Required” which has to be changed to 200 OK on the Avaya Session Border Controller Advanced for Enterprise using a signalling rule
- The private IP address of the Communication Manager is passed to Telenor in the contact header in the SIP INVITE message which is subsequently used in the Request URI of the BYE message from Telenor
- Telenor does not accept an SDP in the 181 “Call is being forwarded” message from the Enterprise
- Long post dial delay was experienced during test requiring a change to a timer for EC500

## 2.3. Support

For technical support on Telenor products please visit the website at [www.telenor.com](http://www.telenor.com) or contact an authorized Telenor representative.

### 3. Reference Configuration

**Figure 1** illustrates the test configuration. The test configuration shows an Enterprise site connected to the Telenor SIP Trunk Service. Located at the Enterprise site is a Session Border Controller, Session Manager and Communication Manager. Endpoints are Avaya 96x0 series and Avaya 96x1 series IP telephones (with SIP and H.323 firmware), Avaya 46xx series IP telephones (with H.323 firmware), Avaya 16xx series IP telephones (with SIP firmware) Avaya analogue telephones and an analogue fax machine. Also included in the test configuration was an Avaya one-X® Communicator soft phone running on a laptop PC configured for H.323.

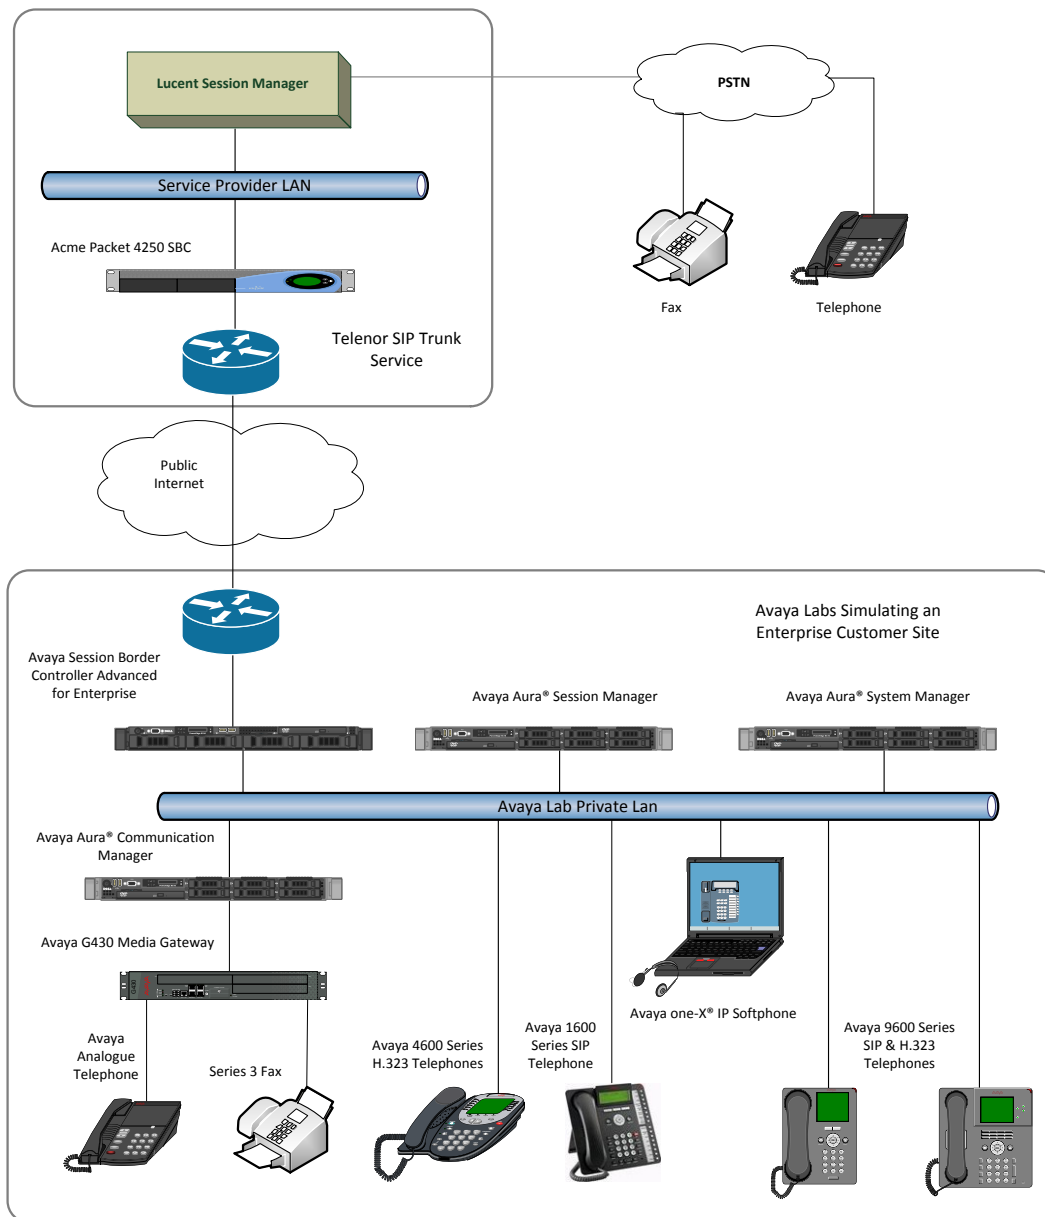

**Figure 1: Test Setup Telenor SIP Trunk to Avaya Enterprise**

## 4. Equipment and Software Validated

The following equipment and software were used for the sample configuration provided:

Equipment	Software
Avaya S8800 Server	Avaya Aura® Communication Manager R6.0.1 (R016x.00.1.510.1) Service Pack 19303 (System Platform 6.0.3.3.3)
Avaya G430 Media Gateway	FW 30.12.1
Avaya S8800 Server	Avaya Aura® Session Manager R6.1 (6.1.5.0.615006)
Avaya S8800 Server	Avaya Aura® System Manager R6.1 (System Platform 6.0.3.1.3, Template 6.1.5.0)
Avaya Session Border Controller Advanced for Enterprise Server	Avaya Session Border Controller Advanced for Enterprise 4.0.5.Q02
Avaya 1616 Phone (H.323)	1.22
Avaya 4621 Phone (H.323)	2.901
Avaya 9670 Phone (H.323)	2.0
Avaya 9601 Phone (SIP)	R6.1 SP3
Avaya one-X® Communicator (H.323) on Lenovo T510 Laptop PC	Avaya one-X® Communicator 6.0.1.16-SP1-25226
Analogue Phone	N/A
Telenor Equipment	Software
Telenor IPT	Version 2.1.2.119
Acme Packet Net-Net 4250 SBC	Firmware SC6.1.0 MR-10 Patch 4 (Build 1002) 14 <sup>th</sup> Dec 2011
Lucent Session Manager	14.28.00.18

## 5. Configure Avaya Aura® Communication Manager

This section describes the steps for configuring Communication Manager for SIP Trunking. SIP trunks are established between Communication Manager and Session Manager. These SIP trunks will carry SIP Signalling associated with the Telenor SIP Trunk Service. For incoming calls, the Session Manager receives SIP messages from the Avaya Session Border Controller Advanced for Enterprise and directs the incoming SIP messages to Communication Manager. Once the message arrives at Communication Manager, further incoming call treatment, such as incoming digit translations and class of service restrictions may be performed. All outgoing calls to the PSTN are processed within Communication Manager and may be first subject to outbound features such as automatic route selection, digit manipulation and class of service restrictions. Once Communication Manager selects a SIP trunk, the SIP signalling is routed to the Session Manager. The Session Manager directs the outbound SIP messages to the Session Border Controller at the enterprise site that then sends the SIP messages to the Telenor network. Communication Manager Configuration was performed using the System Access Terminal (SAT). Some screens in this section have been abridged and highlighted for brevity and clarity in presentation. The general installation of the Avaya S8800 Servers and Avaya G430 Media Gateway is presumed to have been previously completed and is not discussed here.

### 5.1. Confirm System Features

The license file installed on the system controls the maximum values for these attributes. If a required feature is not enabled or there is insufficient capacity, contact an authorized Avaya sales representative to add additional capacity. Use the **display system-parameters customer-options** command and on **Page 2**, verify that the **Maximum Administered SIP Trunks** supported by the system is sufficient for the combination of trunks to the Telenor network, and any other SIP trunks used.

display system-parameters customer-options		Page	2 of 11
OPTIONAL FEATURES			
IP PORT CAPACITIES		USED	
Maximum Administered H.323 Trunks:		12000	0
Maximum Concurrently Registered IP Stations:		18000	3
Maximum Administered Remote Office Trunks:		12000	0
Maximum Concurrently Registered Remote Office Stations:		18000	0
Maximum Concurrently Registered IP eCons:		414	0
Max Concur Registered Unauthenticated H.323 Stations:		100	0
Maximum Video Capable Stations:		18000	0
Maximum Video Capable IP Softphones:		18000	0
<b>Maximum Administered SIP Trunks:</b>		<b>24000</b>	<b>20</b>
Maximum Administered Ad-hoc Video Conferencing Ports:		24000	0
Maximum Number of DS1 Boards with Echo Cancellation:		522	0
Maximum TN2501 VAL Boards:		128	0
Maximum Media Gateway VAL Sources:		250	1
Maximum TN2602 Boards with 80 VoIP Channels:		128	0
Maximum TN2602 Boards with 320 VoIP Channels:		128	0
Maximum Number of Expanded Meet-me Conference Ports:		300	0

On **Page 4**, verify that **IP Trunks** field is set to **y**.

display system-parameters customer-options		Page 4 of 11
OPTIONAL FEATURES		
Emergency Access to Attendant? y	IP Stations? y	
Enable 'dadmin' Login? y		
Enhanced Conferencing? y	ISDN Feature Plus? n	
Enhanced EC500? y	ISDN/SIP Network Call Redirection? y	
Enterprise Survivable Server? n	ISDN-BRI Trunks? y	
Enterprise Wide Licensing? n	ISDN-PRI? y	
ESS Administration? y	Local Survivable Processor? n	
Extended Cvg/Fwd Admin? y	Malicious Call Trace? y	
External Device Alarm Admin? y	Media Encryption Over IP? n	
Five Port Networks Max Per MCC? n	Mode Code for Centralized Voice Mail? n	
Flexible Billing? n		
Forced Entry of Account Codes? y	Multifrequency Signaling? y	
Global Call Classification? y	Multimedia Call Handling (Basic)? y	
Hospitality (Basic)? y	Multimedia Call Handling (Enhanced)? y	
Hospitality (G3V3 Enhancements)? y	Multimedia IP SIP Trunking? y	
IP Trunks? y		
IP Attendant Consoles? y		

## 5.2. Administer IP Node Names

The node names defined here will be used in other configuration screens to define a SIP signalling group between Communication Manager and Session Manager. In the **IP Node Names** form, assign the node **Name** and **IP Address** for the Session Manager. In this case, **SM100** and **10.10.9.61** are the **Name** and **IP Address** for the Session Manager SIP interface. Also note the **procr** name as this is the processor interface that Communication Manager will use as the SIP signalling interface to Session Manager.

display node-names ip		IP NODE NAMES
Name	IP Address	
SM100	10.10.9.61	
default	0.0.0.0	
procr	10.10.9.52	
procr6	::	

### 5.3. Administer IP Network Region

Use the **change ip-network-region 1** command to set the following values:

- The **Authoritative Domain** field is configured to match the domain name configured on Session Manager. In this configuration, the domain name is **avaya.com**.
- By default, **IP-IP Direct Audio** (both **Intra-** and **Inter-Region**) is enabled (**yes**) to allow audio traffic to be sent directly between endpoints without using gateway VoIP resources. When a PSTN call is shuffled, the media stream is established directly between the enterprise end-point and the internal media interface of the Session Border Controller Advanced for Enterprise.
- The **Codec Set** is set to the number of the IP codec set to be used for calls within the IP network region. In this case, codec set **1** is used.

```
change ip-network-region 1                                     Page 1 of 20
                                                                IP NETWORK REGION
Region: 1
Location: 1           Authoritative Domain: avaya.com
Name: default
MEDIA PARAMETERS
  Codec Set: 1          Intra-region IP-IP Direct Audio: yes
                        Inter-region IP-IP Direct Audio: yes
                        IP Audio Hairpinning? n
  UDP Port Min: 2048
  UDP Port Max: 3329
DIFFSERV/TOS PARAMETERS
  Call Control PHB Value: 46
  Audio PHB Value: 46
  Video PHB Value: 26
802.1P/Q PARAMETERS
  Call Control 802.1p Priority: 6
  Audio 802.1p Priority: 6
  Video 802.1p Priority: 5
H.323 IP ENDPOINTS
  H.323 Link Bounce Recovery? y
  Idle Traffic Interval (sec): 20
  Keep-Alive Interval (sec): 5
  Keep-Alive Count: 5
                                                                AUDIO RESOURCE RESERVATION PARAMETERS
                                                                RSVP Enabled? n
```



## 5.4. Administer IP Codec Set

Open the **IP Codec Set** form for the codec set specified in the **IP Network Region** form, **Section 5.3**. Enter the list of audio codec's eligible to be used in order of preference. For the interoperability test the codec supported by Telenor was configured, namely **G.711A** and **G.711MU**.

change ip-codec-set 1				Page 1 of 2
IP Codec Set				
Codec Set: 1				
Audio Codec	Silence Suppression	Frames Per Pkt	Packet Size (ms)	
1: G.711A	n	2	20	
2: G.711MU	n	2	20	
3:				

The Telenor SIP Trunk service supports T.38 for transmission of fax. Navigate to **Page 2** to configure T.38 by setting the **Fax Mode** to **t.38-standard** as shown below.

change ip-codec-set 1			Page 2 of 2
IP Codec Set			
Allow Direct-IP Multimedia? n			
	Mode	Redundancy	
<b>FAX</b>	<b>t.38-standard</b>	<b>0</b>	
Modem	off	0	
TDD/TTY	US	3	
Clear-channel	n	0	

## 5.5. Administer SIP Signaling Groups

This signaling group (and trunk group) will be used for inbound and outbound PSTN calls to the Telenor SIP Trunk service. During test, this was configured to use TCP and port 5075 to facilitate tracing and fault analysis. It is recommended however, to use TLS (Transport Layer Security) and the default TLS port of 5061 for security. Configure the **Signaling Group** using the **add signaling-group x** command as follows:

- Set **Group Type** to **sip**
- Set **Transport Method** to **tcp**
- Set **Peer Detection Enabled** to **y** allowing the Communication Manager to automatically detect if the peer server is a Session Manager
- Set **Near-end Node Name** to the processor interface (node name **procr** as defined in the **IP Node Names** form shown in **Section 5.2**)
- Set **Far-end Node Name** to the Session Manager (node name **SM100** as defined in the **IP Node Names** form shown in **Section 5.2**)
- Set **Near-end Listen Port** and **Far-end Listen Port** to 5075 (Telenor preferred TCP port value)
- Set **Far-end Network Region** to the IP Network Region configured in **Section 5.3**. (logically establishes the **far-end** for calls using this signaling group as network region 1)
- Leave **Far-end Domain** blank (removes the analysis of the far end domain name and subsequent handling of multiple signaling groups where it is not required)
- Set **Direct IP-IP Audio Connections** to **y**
- Leave **DTMF over IP** at default value of **rtp-payload** (Enables **RFC2833** for DTMF transmission from the Communication Manager)

The default values for the other fields may be used.

change signaling-group 1		Page 1 of 1
SIGNALING GROUP		
Group Number: 1	Group Type: sip	
IMS Enabled? n	Transport Method: tcp	
Q-SIP? n	SIP Enabled LSP? n	
IP Video? n	Enforce SIPS URI for SRTP? y	
Peer Detection Enabled? y	Peer Server: SM	
Near-end Node Name: procr	Far-end Node Name: SM100	
Near-end Listen Port: 5075	Far-end Listen Port: 5075	
Far-end Network Region: 1		
Far-end Domain:		
Incoming Dialog Loopbacks: eliminate	Bypass If IP Threshold Exceeded? n	
DTMF over IP: rtp-payload	RFC 3389 Comfort Noise? n	
Session Establishment Timer(min): 3	Direct IP-IP Audio Connections? y	
Enable Layer 3 Test? y	IP Audio Hairpinning? n	
H.323 Station Outgoing Direct Media? n	Initial IP-IP Direct Media? n	
	Alternate Route Timer(sec): 6	

Note that the commonly used TCP port 5060 could be used between the Communication Manager and the Session Manager. Port 5075 has been used for consistency however, as this is the port preferred by the Telenor network.

## 5.6. Administer SIP Trunk Group

A trunk group is associated with the signaling group described in **Section 5.5**. Configure the trunk group using the **add trunk-group x** command, where **x** is an available trunk group. On **Page 1** of this form:

- Set the **Group Type** field to **sip**
- Choose a descriptive **Group Name**
- Specify a trunk access code (**TAC**) consistent with the dial plan
- The **Direction** is set to **two-way** to allow incoming and outgoing calls
- Set the **Service Type** field to **tie**
- Specify the signaling group associated with this trunk group in the **Signaling Group** field as previously configured in **Section 5.5**
- Specify the **Number of Members** supported by this SIP trunk group

add trunk-group 1		Page 1 of 21	
TRUNK GROUP			
Group Number: 1	Group Type: sip	CDR Reports: y	
Group Name: Group 1	COR: 1	TN: 1	TAC: 101
Direction: two-way	Outgoing Display? y	Night Service:	
Dial Access? n			
Queue Length: 0			
Service Type: tie	Auth Code? n		
		Member Assignment Method: auto	
		Signaling Group: 1	
		Number of Members: 10	

On **Page 2** of the trunk-group form, the **Preferred Minimum Session Refresh Interval (sec)** field should be set to a value mutually agreed with Telenor to prevent unnecessary SIP messages during call setup. Also note that the value for **Redirect On OPTIM Failure** was increased during test to allow additional set-up time for calls destined for an EC500 destination. This was necessary to overcome long post dial delay.

add trunk-group 1		Page 2 of 21	
Group Type: sip			
TRUNK PARAMETERS			
Unicode Name: auto			
		Redirect On OPTIM Failure: 10000	
SCCAN? n	Digital Loss Group: 18		
		Preferred Minimum Session Refresh Interval(sec): 600	

On **Page 3**, set the **Numbering Format** field to **public**.

add trunk-group 1	Page 3 of 21
TRUNK FEATURES	
ACA Assignment? n	Measured: none
	Maintenance Tests? y
<b>Numbering Format: public</b>	
	UUI Treatment: service-provider
	Replace Restricted Numbers? n
	Replace Unavailable Numbers? n

On **Page 4** of this form:

- Set the **Network Call Redirection** to **y** for the Network Call Redirection test
- Set the **Telephone Event Payload Type** to **96** to match the value preferred by Telenor
- Set **Always Use re-INVITE for Display Updates** to **y** to allow correct operation of fax when the Telenor network is the first to detect fax and initiate the re-INVITE.

add trunk-group 1	Page 4 of 21
PROTOCOL VARIATIONS	
Mark Users as Phone? n	
Prepend '+' to Calling Number? n	
Send Transferring Party Information? n	
<b>Network Call Redirection? y</b>	
Send Diversion Header? n	
Support Request History? y	
<b>Telephone Event Payload Type: 96</b>	
Convert 180 to 183 for Early Media? n	
<b>Always Use re-INVITE for Display Updates? y</b>	
Identity for Calling Party Display: P-Asserted-Identity	
Enable Q-SIP? n	

## 5.7. Administer Calling Party Number Information

Use the **change public-unknown-numbering** command to configure Communication Manager to send the calling party number. In the test configuration, individual stations were mapped to send numbers allocated from the Telenor DDI range supplied. This calling party number is sent in the SIP From, Contact and PAI headers, and displayed on display-equipped PSTN telephones. Note that the last six digits of the DDI range are not shown.

change public-unknown-numbering 0					Page 1 of 2
NUMBERING - PUBLIC/UNKNOWN FORMAT					
Ext	Ext	Trk	CPN	Total	
Len	Code	Grp(s)	Prefix	CPN	
				Len	
4	2000	1	4722xxxxxx	10	Total Administered: 6
4	2291	1	4722xxxxxx	10	Maximum Entries: 9999
4	2296	1	4722xxxxxx	10	Note: If an entry applies to a SIP connection to Avaya Aura(tm) Session Manager, the resulting number must be a complete E.164 number.
4	2316	1	4722xxxxxx	10	
4	2346	1	4722xxxxxx	10	
4	2396	1	4722xxxxxx	10	

## 5.8. Administer Route Selection for Outbound Calls

In the test environment, the Automatic Route Selection (ARS) feature was used to route outbound calls via the SIP trunk to Telenor SIP Trunk Service. The single digit **9** was used as the ARS access code providing a facility for telephone users to dial **9** to reach an outside line. Use the **change feature-access-codes** command to configure a digit as the **Auto Route Selection (ARS) - Access Code 1**.

change feature-access-codes		Page 1 of 10
FEATURE ACCESS CODE (FAC)		
Abbreviated Dialing List1 Access Code:		
Abbreviated Dialing List2 Access Code:		
Abbreviated Dialing List3 Access Code:		
Abbreviated Dial - Prgm Group List Access Code:		
Announcement Access Code: *69		
Answer Back Access Code:		
Attendant Access Code:		
Auto Alternate Routing (AAR) Access Code: 7		
<b>Auto Route Selection (ARS) - Access Code 1: 9</b>		Access Code 2:

Use the **change ars analysis** command to configure the routing of dialled digits following the first digit 9. A small sample of dial patterns are shown here as an example. Further administration of ARS is beyond the scope of this document. The example entries shown will match outgoing calls to numbers beginning **0 or 00**. Note that exact maximum number lengths have been used as it was found during test that a greater value resulted in transmission of a DTMF “#” after establishment of the media stream. Calls are sent to route pattern **1**.

change ars analysis 0								Page	1 of	2
ARS DIGIT ANALYSIS TABLE										
Location: all								Percent Full: 1		
	Dialed	Total		Route	Call	Node	ANI			
	String	Min	Max	Pattern	Type	Num	Reqd			
0		8	14	1	pubu		n			
00		13	13	1	pubu		n			
188		3	4	1	pubu		n			

Use the **change route-pattern x** command to add the SIP trunk group to the route pattern that ARS selects. In this configuration, route pattern **1** is used to route calls to trunk group **1**.

change route-pattern 1													Page	1 of	3
Pattern Number: 1 Pattern Name: all calls															
SCCAN? n Secure SIP? n															
Grp	FRL	NPA	Pfx	Hop	Toll	No.	Inserted						DCS/	IXC	
No			Mrk	Lmt	List	Del	Digits						QSIG		
													Intw		
1:	1	0											n	user	
2:													n	user	
3:													n	user	
4:													n	user	
5:													n	user	
6:													n	user	
		BCC	VALUE	TSC	CA-TSC			ITC	BCIE	Service/Feature	PARM	No.	Numbering	LAR	
		0	1	2	M	4	W	Request				Dgts	Format		
													Subaddress		
1:	y	y	y	y	y	n	n	rest				unk-unk	none		
2:	y	y	y	y	y	n	n	rest					none		

## 5.9. Administer Incoming Digit Translation

This step configures the settings necessary to map incoming DDI calls to the proper Communication Manager extension(s). The incoming digits sent in the INVITE message from Telenor can be manipulated as necessary to route calls to the desired extension. In the examples used in the compliance testing, the incoming DDI numbers provided by Telenor correlate to the internal extensions assigned within Communication Manager. The entries displayed below translate three incoming DDI numbers in the range +4722xxxxxx to a 4 digit extension by deleting all of the incoming digits and inserting an extension. Note that the last six digits of the DDI range are not shown.

change inc-call-handling-trmt trunk-group 1				Page	1 of 30
INCOMING CALL HANDLING TREATMENT					
Service/	Number	Number	Del	Insert	
Feature	Len	Digits			
tie	11	+4722xxxxxx	all	2396	
tie	11	+4722xxxxxx	all	6103	
tie	11	+4722xxxxxx	all	2296	
tie					

## 5.10. EC500 Configuration

When EC500 is enabled on the Communication Manager station, a call to that station will generate a new outbound call from Communication Manager to the configured EC500 destination, typically a mobile phone. The following screen shows an example EC500 configuration for the user with station extension 2396. Use the command **change off-pbx-telephone station mapping x** where **x** is the Communication Manager station.

- The **Station Extension** field will automatically populate with station extension
- For **Application** enter **EC500**
- Enter a **Dial Prefix** (e.g., 9) if required by the routing configuration
- For the **Phone Number** enter the phone that will also be called (e.g. **0035386xxxxxxx**)
- Set the **Trunk Selection** to **1** so that Trunk Group 1 will be used for routing
- Set the **Config Set** to **1**

Other parameters can retain default value

change off-pbx-telephone station-mapping 2396							Page	1 of 3
STATIONS WITH OFF-PBX TELEPHONE INTEGRATION								
Station	Application	Dial	CC	Phone Number	Trunk	Config	Dual	
Extension		Prefix			Selection	Set	Mode	
2396	EC500	-		0035386xxxxxxx	1	1		
		-						

Save Communication Manager changes by entering **save translation** to make them permanent.


## 6. Configuring Avaya Aura® Session Manager

This section provides the procedures for configuring Session Manager. The Session Manager is configured via the System Manager. The procedures include the following areas:

- Log in to Avaya Aura® System Manager
- Administer SIP domain
- Administer Locations
- Administer Adaptations
- Administer SIP Entities
- Administer Entity Links
- Administer Routing Policies
- Administer Dial Patterns
- Administer Application for Avaya Aura® Communication Manager
- Administer Application Sequence for Avaya Aura® Communication Manager
- Administer SIP Extensions

### 6.1. Log in to Avaya Aura® System Manager


Access the System Manager using a Web Browser by entering **http://<FQDN>/SMGR**, where <FQDN> is the fully qualified domain name of System Manager. Log in using appropriate credentials (not shown) and the Home tab will be presented with menu options shown below.

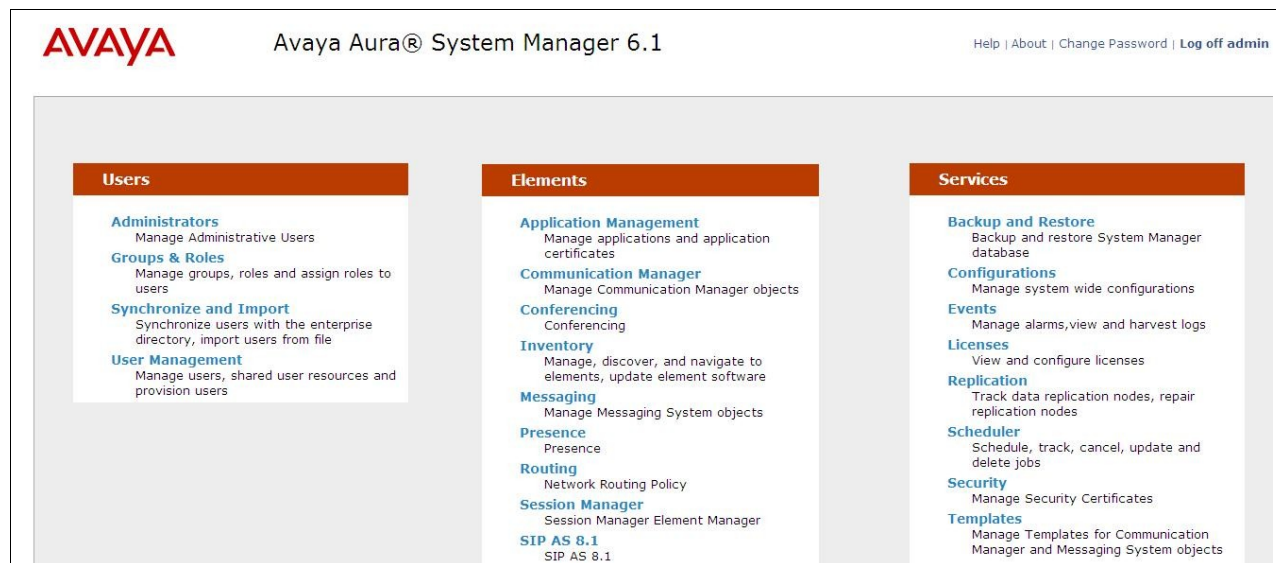



## 6.2. Administer SIP Domain

To add the SIP domain that will be used with Session Manager, select **Routing** from the **Home** tab menu and in the resulting tab select **Domains** from left hand menu. Click the **New** button to create a new SIP domain entry. In the **Name** field enter the domain name (e.g., **avaya.com**) and optionally a description for the domain in the **Notes** field. Click **Commit** to save changes.

 Avaya Aura® System Manager 6.1

Routing

Domains

Locations

Adaptations

SIP Entities

Entity Links

Time Ranges

Routing Policies

Dial Patterns

Regular Expressions

Defaults

Home / Elements / Routing / Domains- Domain Management

Domain Management

Edit

New

Duplicate

Delete

More Actions ▾

2 Items | Refresh

<input type="checkbox"/>	Name	Type	Default
<input type="checkbox"/>	avaya.com	sip	<input type="checkbox"/>
<input type="checkbox"/>	test.com	sip	<input type="checkbox"/>

Select : All, None

## 6.3. Administer Locations

Locations can be used to identify logical and/or physical locations where SIP Entities reside, for the purposes of bandwidth management. One location is added to the sample configuration for all of the enterprise SIP entities. On the **Routing** tab select **Locations** from the left hand menu. Under **General**, in the **Name** field enter an informative name for the location. Scroll to the bottom of the page and under **Location Pattern**, click **Add**, then enter an **IP Address Pattern** in the resulting new row, \* is used to specify any number of allowed characters at the end of the string. Below is the location configuration used for the test enterprise.

<b>SIP Entities</b>	<b>General</b>						
Entity Links	<b>* Name:</b> <input type="text" value="Galway"/>						
Time Ranges	Notes: <input type="text"/>						
Routing Policies							
Dial Patterns	<b>Overall Managed Bandwidth</b>						
Regular Expressions	Managed Bandwidth Units: <input type="text" value="Kbit/sec"/>						
Defaults	Total Bandwidth: <input type="text"/>						
	Multimedia Bandwidth: <input type="text"/>						
	Audio Calls Can Take Multimedia Bandwidth: <input checked="" type="checkbox"/>						
	<b>Per-Call Bandwidth Parameters</b>						
	Maximum Multimedia Bandwidth (Intra-Location): <input type="text" value="1000"/> Kbit/Sec						
	Maximum Multimedia Bandwidth (Inter-Location): <input type="text" value="1000"/> Kbit/Sec						
	Minimum Multimedia Bandwidth: <input type="text" value="64"/> Kbit/Sec						
	* Default Audio Bandwidth: <input type="text" value="80"/> <input type="text" value="Kbit/sec"/>						
	<b>Location Pattern</b>						
	<input type="button" value="Add"/> <input type="button" value="Remove"/>						
	1 Item   Refresh						
	<table border="1"><thead><tr><th><input type="checkbox"/></th><th>IP Address Pattern</th><th>Notes</th></tr></thead><tbody><tr><td><input type="checkbox"/></td><td>* 10.10.9.*</td><td>Private</td></tr></tbody></table>	<input type="checkbox"/>	IP Address Pattern	Notes	<input type="checkbox"/>	* 10.10.9.*	Private
<input type="checkbox"/>	IP Address Pattern	Notes					
<input type="checkbox"/>	* 10.10.9.*	Private					

## 6.4. Administer Adaptations

Adaptations can be used to modify the called party number to meet network requirements. The example shown was used in test to convert the called number to E.164 format. The module **DigitConversionAdaptor** is used to convert numbers in the following way:

- International Numbers – remove the international dialing prefix (00) and replace with a “+”
- National Numbers – remove the leading zero and replace with a “+” followed by the country code

These rules are applied to the **destination** addresses.

The screenshot displays the 'Adaptations' configuration page. On the left is a sidebar with a menu containing: Adaptations (highlighted), SIP Entities, Entity Links, Time Ranges, Routing Policies, Dial Patterns, Regular Expressions, and Defaults. The main content area is titled 'General' and contains the following fields:

- \* Adaptation name: International
- Module name: DigitConversionAdapter (dropdown menu)
- Module parameter: (empty text field)
- Egress URI Parameters: (empty text field)
- Notes: (empty text field)

Below these fields are two sections for digit conversion rules:

**Digit Conversion for Incoming Calls to SM**

Buttons: Add, Remove. Status: 0 Items, Refresh. Filter: Enable.

	Matching Pattern	Min	Max	Phone Context	Delete Digits	Insert Digits	Address to modify	Notes
--	------------------	-----	-----	---------------	---------------	---------------	-------------------	-------

**Digit Conversion for Outgoing Calls from SM**

Buttons: Add, Remove. Status: 2 Items, Refresh. Filter: Enable.

	Matching Pattern	Min	Max	Phone Context	Delete Digits	Insert Digits	Address to modify	Notes
<input type="checkbox"/>	*00	*2	*36		*2	+	destination	
<input type="checkbox"/>	*022	*3	*9		*1	+47	destination	

Select : All, None

## 6.5. Administer SIP Entities

A SIP Entity must be added for each SIP-based telephony system, supported by a SIP connection to the Session Manager. To add a SIP Entity, select **SIP Entities** on the left panel menu and then click on the **New** button (not shown). The following will need to be entered for each SIP Entity.

Under **General**:

- In the **Name** field enter an informative name
- In the **FQDN or IP Address** field enter the IP address of Session Manager or the signalling interface on the connecting system
- In the **Type** field use **Session Manager** for a Session Manager SIP entity, **CM** for a Communication Manager SIP entity and **Gateway** for the Session Border Controller SIP entity
- In the **Location** field select the appropriate location from the drop down menu
- In the **Time Zone** field enter the time zone for the SIP Entity

In this configuration there are three SIP Entities:

- Avaya Aura® Session Manager SIP Entity
- Avaya Aura® Communication Manager SIP Entity
- Avaya Session Border Controller Advanced for Enterprise SIP Entity

### 6.5.1. Avaya Aura® Session Manager SIP Entity

The following screens show the SIP entity for Session Manager. The **FQDN or IP Address** field is set to the IP address of the Session Manager SIP signalling interface.

The screenshot displays the 'SIP Entity Details' configuration page for a Session Manager SIP Entity. The left sidebar shows a navigation menu with 'SIP Entities' selected. The main content area is titled 'SIP Entity Details' and 'General'. The configuration fields are as follows:

- Name:** Session Manager
- FQDN or IP Address:** 10.10.9.61
- Type:** Session Manager (dropdown menu)
- Notes:** (empty text field)
- Location:** Galway (dropdown menu)
- Outbound Proxy:** (empty dropdown menu)
- Time Zone:** Europe/Dublin (dropdown menu)
- Credential name:** (empty text field)
- SIP Link Monitoring:** Use Session Manager Configuration (dropdown menu)

The Session Manager must be configured with the port numbers on the protocols that will be used by the other SIP entities. To configure these scroll to the bottom of the page and under **Port**, click **Add**, then edit the fields in the resulting new row.

- In the **Port** field enter the port number on which the system listens for SIP requests
- In the **Protocol** field enter the transport protocol to be used for SIP requests
- In the **Default Domain** field, from the drop down menu select **avaya.com** as the default domain

Port	Protocol	Default Domain	Notes
5061	TLS	avaya.com	
5075	UDP	avaya.com	
5075	TCP	avaya.com	

Select : All, None

\* Input Required

Commit Cancel

## 6.5.2. Avaya Aura® Communication Manager SIP Entity

The following screen shows the SIP entity for Communication Manager which is configured as an Evolution Server. The **FQDN or IP Address** field is set to the IP address of the interface on Communication Manager that will be providing SIP signalling.

Home / Elements / Routing / SIP Entities- SIP Entity Details

SIP Entity Details

General

\* Name: Communication Manager

\* FQDN or IP Address: 10.10.9.52

Type: CM

Notes:

Adaptation:

Location: Galway

Time Zone: Europe/Dublin

Override Port & Transport with DNS SRV: ☐

\* SIP Timer B/F (in seconds): 4

Credential name:

Call Detail Recording: none

SIP Link Monitoring

SIP Link Monitoring: Use Session Manager Configuration

### 6.5.3. Avaya Session Border Controller Advanced for Enterprise SIP Entity

The following screen shows the SIP Entity for the Session Border Controller. The **FQDN or IP Address** field is set to the IP address of the Session Border Controller private network interface (see **Figure 1**).

Home / Elements / Routing / SIP Entities- SIP Entity Details

SIP Entity Details

General

\* Name: Sipera SBC

\* FQDN or IP Address: 10.10.9.81

Type: Gateway

Notes:

Adaptation: International

Location: Galway

Time Zone: Europe/Dublin

Override Port & Transport with DNS SRV: ☐

\* SIP Timer B/F (in seconds): 4

Credential name:

Call Detail Recording: none

SIP Link Monitoring: Use Session Manager Configuration

## 6.6. Administer Entity Links

A SIP trunk between a Session Manager and another system is described by an Entity Link. To add an Entity Link, select **Entity Links** on the left panel menu and click on the **New** button (not shown). Fill in the following fields in the new row that is displayed.

- In the **Name** field enter an informative name
- In the **SIP Entity 1** field select **Session Manager 1**
- In the **Port** field enter the port number to which the other system sends its SIP requests
- In the **SIP Entity 2** field enter the other SIP Entity for this link, created in **Section 6.5**
- In the **Port** field enter the port number to which the other system expects to receive SIP requests
- Select the **Trusted** tick box to make the other system trusted
- In the **Protocol** field enter the transport protocol to be used to send SIP requests

Click **Commit** to save changes. The following screen shows the Entity Links used in this configuration.

	Name	SIP Entity 1	Protocol	Port	SIP Entity 2	Port	Trusted	Notes
<input type="checkbox"/>	Session Manager - Communication Manager - 5075 - TCP	Session Manager	TCP	5075	Communication Manager	5075	<input checked="" type="checkbox"/>	
<input type="checkbox"/>	Session Manager - Sipera SBC - 5075 - TCP	Session Manager	TCP	5075	Sipera SBC	5075	<input checked="" type="checkbox"/>	

## 6.7. Administer Routing Policies

Routing policies must be created to direct how calls will be routed to a system. To add a routing policy, select **Routing Policies** on the left panel menu and then click on the **New** button (not shown).

Under **General**:

- Enter an informative name in the **Name** field
- Under **SIP Entity as Destination**, click **Select**, and then select the appropriate SIP entity to which this routing policy applies
- Under **Time of Day**, click **Add**, and then select the time range

The following screen shows the routing policy for Communication Manager

The screenshot shows the 'Routing Policy Details' configuration page. The left sidebar lists various configuration options, with 'Routing Policies' selected. The main area is titled 'Routing Policy Details' and contains three sections: 'General', 'SIP Entity as Destination', and 'Time of Day'.

**General**

\* Name:

Disabled: ☐

Notes:

**SIP Entity as Destination**

Name	FQDN or IP Address	Type	Notes
Communication Manager	10.10.9.52	CM	

**Time of Day**

1 Item | Refresh Filter: Enable

<input type="checkbox"/>	Ranking	Name	Mon	Tue	Wed	Thu	Fri	Sat	Sun	Start Time	End Time	Notes
<input type="checkbox"/>	0	24/7	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	00:00	23:59	Time Range 24/7

Select : All, None



The following screen shows the routing policy for the Session Border Controller.

Routing

Domains

Locations

Adaptations

SIP Entities

Entity Links

Time Ranges

Routing Policies

Dial Patterns

Regular Expressions

Defaults

Home / Elements / Routing / Routing Policies- Routing Policy Details

Help ?

CommitCancel

Routing Policy Details

General

\* Name: External

Disabled: ☐

Notes:

SIP Entity as Destination

Select

Name	FQDN or IP Address	Type	Notes
Sipera SBC	10.10.9.81	Gateway	

Time of Day

AddRemoveView Gaps/Overlaps

1 Item RefreshFilter: Enable

	Ranking	Name	Mon	Tue	Wed	Thu	Fri	Sat	Sun	Start Time	End Time	Notes
<input type="checkbox"/>	0	24/7	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	00:00	23:59	Time Range 24/7

Select : All, None

## 6.8. Administer Dial Patterns

A dial pattern must be defined to direct calls to the appropriate telephony system. To configure a dial pattern select **Dial Patterns** on the left panel menu and then click on the **New** button (not shown).

Under **General**:

- In the **Pattern** field enter a dialled number or prefix to be matched
- In the **Min** field enter the minimum length of the dialled number
- In the **Max** field enter the maximum length of the dialled number
- In the **SIP Domain** field select **ALL** or alternatively one of those configured in **Section 6.2**

Under **Originating Locations and Routing Policies**. Click **Add**, in the resulting screen (not shown), under **Originating Location** select **ALL** and under **Routing Policies** select one of the routing policies defined in **Section 6.7** Click **Select** button to save. The following screen shows an example dial pattern configured for the Session Border Controller which will route the calls out to the Telenor SIP Trunk service.

Avaya Aura® System Manager 6.1

Help | About | Change Password | Log off admin

Routing \* Home

Home / Elements / Routing / Dial Patterns- Dial Pattern Details

Dial Pattern Details

General

\* Pattern: 00353

\* Min: 12

\* Max: 14

Emergency Call: ☐

SIP Domain: -ALL-

Notes:

Originating Locations and Routing Policies

1 Item Refresh Filter: Enable

<input type="checkbox"/>	Originating Location Name 1 ▲	Originating Location Notes	Routing Policy Name	Rank 2 ▲	Routing Policy Disabled	Routing Policy Destination	Routing Policy Notes
<input type="checkbox"/>	Galway		External	0	<input type="checkbox"/>	Spera SBC	

Select : All, None

The following screen shows the test dial pattern configured for Communication Manager. Note that the last four digits are not shown.

**AVAYA**
Avaya Aura® System Manager 6.1

[Help](#) | [About](#) | [Change Password](#) | [Log off admin](#)

Routing

Home / Elements / Routing / Dial Patterns- Dial Pattern Details

Routing

Home

Dial Pattern Details

Commit

Cancel

Routing

Domains

Locations

Adaptations

SIP Entities

Entity Links

Time Ranges

Routing Policies

Dial Patterns

Regular Expressions

Defaults

General

\* Pattern: +4722XXXX

\* Min: 9

\* Max: 11

Emergency Call: ☐

SIP Domain: -ALL-

Notes:

Originating Locations and Routing Policies

Add

Remove

1 Item

Refresh

Filter: Enable

<input type="checkbox"/>	Originating Location Name 1 ▲	Originating Location Notes	Routing Policy Name	Rank 2 ▲	Routing Policy Disabled	Routing Policy Destination	Routing Policy Notes
<input type="checkbox"/>	-ALL-	Any Locations	Internal	0	<input type="checkbox"/>	Communication Manager	

Select : All, None

BG; Reviewed:  
SPOC 4/2/2012

Solution & Interoperability Test Lab Application Notes  
©2012 Avaya Inc. All Rights Reserved.

27 of 48  
TNOR\_CM601SBC

## 6.9. Administer Application for Avaya Aura® Communication Manager

From the home tab select **Session Manager** from the menu. In the resulting tab from the left panel menu select **Application Configuration → Applications** and click **New**.

- In the **Name** field enter a name for the application
- In the **SIP Entity** field select the SIP entity for the Communication Manager
- In the **CM System for SIP Entity** field select the SIP entity for the Communication Manager

Select **Commit** to save the configuration.

The screenshot shows the Avaya Aura® System Manager 6.1 web interface. The top navigation bar includes the Avaya logo, the title "Avaya Aura® System Manager 6.1", and links for "Help | About | Change Password | Log off admin". Below this is a breadcrumb trail: "Home / Elements / Session Manager / Application Configuration / Applications- Applications". The left sidebar contains a tree view with categories like "Session Manager", "Network Configuration", "Device and Location Configuration", "Application Configuration", and "System Status". The "Application Configuration" category is expanded, showing "Applications" as the selected item. The main content area is titled "Application Editor" and contains a form for creating a new application. The form has fields for "Name" (containing "cm-app"), "SIP Entity" (a dropdown menu showing "Communication Manager"), and "CM System for SIP Entity" (a dropdown menu showing "CM Instance" with a "Refresh" button). There are also links for "View/Add CM Systems". Below these fields is a "Description" text area. At the bottom, there is a section for "Application Attributes (optional)" with a table for "Name" and "Value". The table has two rows: "Application Handle" and "URI Parameters".

Avaya Aura® System Manager 6.1

Help | About | Change Password | Log off admin

Session Manager x Routing x Home

Home / Elements / Session Manager / Application Configuration / Applications- Applications

Application Editor

Commit Cancel

Application

\*Name cm-app

\*SIP Entity Communication Manager

\*CM System for SIP Entity CM Instance Refresh View/Add CM Systems

Description

Application Attributes (optional)

Name	Value
Application Handle	
URI Parameters	

## 6.10. Administer Application Sequence for Avaya Aura® Communication Manager

From the left panel navigate to **Session Manager** → **Application Configuration** → **Application Sequences** and click on **New**.

- In the **Name** field enter a descriptive name
- Under **Available Applications**, click the + sign in front of the appropriate application instance. When the screen refreshes the application should be displayed under the **Applications in this Sequence** heading

Select **Commit**.

The screenshot shows the 'Application Sequence Editor' interface. On the left is a navigation tree with 'Session Manager' expanded, showing 'Application Configuration' and 'Application Sequences'. The main area has a breadcrumb 'Home / Elements / Session Manager / Application Configuration / Application Sequences- Application Sequences'. The title is 'Application Sequence Editor' with 'Commit' and 'Cancel' buttons. Below is the 'Application Sequence' section with a 'Name' field containing 'cm-app-seq' and an empty 'Description' field. The 'Applications in this Sequence' section has 'Move First', 'Move Last', and 'Remove' buttons, followed by a table with 1 item. The table has columns: Sequence Order (first to last), Name, SIP Entity, Mandatory, and Description. The row shows 'cm-app' as the Name, 'Communication Manager' as the SIP Entity, and a checked 'Mandatory' box. Below the table is a 'Select : All, None' option. The 'Available Applications' section has a 'Refresh' button and a 'Filter: Enable' option, followed by a table with 1 item. The table has columns: Name, SIP Entity, and Description. The row shows 'cm-app' as the Name and 'Communication Manager' as the SIP Entity.

Session Manager

Dashboard

Session Manager

Administration

Communication Profile Editor

Network Configuration

Device and Location Configuration

Application Configuration

Applications

Application Sequences

Implicit Users

NRS Proxy Users

System Status

System Tools

Home / Elements / Session Manager / Application Configuration / Application Sequences- Application Sequences

Help ?

Commit Cancel

Application Sequence Editor

Application Sequence

\*Name cm-app-seq

Description

Applications in this Sequence

Move First Move Last Remove

1 Item

Sequence Order (first to last)	Name	SIP Entity	Mandatory	Description
<input type="checkbox"/>	cm-app	Communication Manager	<input checked="" type="checkbox"/>	

Select : All, None

Available Applications

1 Item Refresh Filter: Enable

Name	SIP Entity	Description
cm-app	Communication Manager	

## 6.11. Administer SIP Extensions

SIP extensions are registered with the Session Manager and use Communication Manager for their feature and configuration settings. From the Home tab select **User Management** from the menu. Then select **Manage Users** and click **New** (not shown).

On the **Identity** tab:

- Enter the user's name in the **Last Name** and **First Name** fields
- In the **Login Name** field enter a unique system login name in the form of user@domain (e.g. **2296@avaya.com**) which is used to create the user's primary handle
- The **Authentication Type** should be **Basic**
- In the **Password/Confirm Password** fields enter an alphanumeric password

AVAYA Avaya Aura® System Manager 6.1

Help | About | Change Password | Log off admin

User Management \* Session Manager \* Routing \* Home

Home / Users / User Management / Manage Users - New User Profile

Help ?

Commit Cancel

**New User Profile**

Identity \* Communication Profile \* Membership Contacts

Identity

\* Last Name: SIP

\* First Name: 9630

Middle Name:

Description:

\* Login Name: 2296@avaya.com

\* Authentication Type: Basic

\* Password: \*\*\*\*\*

\* Confirm Password: \*\*\*\*\*

Localized Display Name:

Endpoint Display Name:

On the **Communication Profile** tab enter a numeric **Communication Profile Password** and confirm it, then expand the **Communication Address** section and click **New**. For the **Type** field select **sip** from the drop-down menu. In the **Fully Qualified Address** field, enter an extension number and select the relevant domain from the drop-down menu. Click the **Add** button.

Identity \* Communication Profile \* Membership Contacts

Communication Profile ▾

Communication Profile Password: •••••

Confirm Password: •••••

New Delete Done Cancel

Name
Primary

Select : None

\* Name: Primary

Default : ☒

Communication Address ▾

New Edit Delete

Type	Handle	Domain
No Records found		

Type: Avaya SIP ▾

\* Fully Qualified Address: 2296 @ avaya.com ▾

Expand the **Session Manager Profile** section.

- Make sure the **Session Manager** check box is checked
- Select the appropriate Session Manager instance from the drop-down menu in the **Primary Session Manager** field
- Select the appropriate application sequence from the drop-down menu in the **Origination Application Sequence** field configured in **Section 6.10**
- Select the appropriate application sequence from the drop-down menu in the **Termination Application Sequence** field configured in **Section 6.10**
- Select the appropriate location from the drop-down menu in the **Home Location** field

☒ Session Manager Profile ▾

\* Primary Session Manager Session Manager ▾

Secondary Session Manager (None) ▾

Origination Application Sequence cm-app-seq ▾

Termination Application Sequence cm-app-seq ▾

Survivability Server (None) ▾

\* Home Location Galway ▾

Primary	Secondary	Maximum
3	0	3

Primary	Secondary	Maximum

Expand the **Endpoint Profile** section.

- Select the Communication Manager SIP Entity from the **System** drop-down menu
- Select **Endpoint** from the drop-down menu for **Profile Type**
- Enter the extension in the **Extension** field
- Select the desired template from the **Template** drop-down menu
- For the **Port** field select **IP**
- Select the **Delete Endpoint on Unassign of Endpoint from User or on Delete User** check box
- Select **Commit** to save changes and the System Manager will add the Communication Manager user configuration automatically

The screenshot shows the 'Endpoint Profile' configuration form. At the top, there is a section header 'Endpoint Profile' with a dropdown arrow. Below it, the 'System' field is set to 'CM Instance' and the 'Profile Type' is set to 'Endpoint'. A checkbox labeled 'Use Existing Endpoints' is unchecked. The 'Extension' field contains '2296' and has an 'Endpoint Editor' button next to it. The 'Template' field is set to 'DEFAULT\_9630SIP\_CM\_6\_0'. The 'Set Type' field is set to '9630SIP'. The 'Security Code' field is empty. The 'Port' field is set to 'IP'. The 'Voice Mail Number' field is empty. At the bottom, there is a checkbox labeled 'Delete Endpoint on Unassign of Endpoint from User or on Delete User.' which is checked.



## 7. Configure Avaya Session Border Controller Advanced for Enterprise


This section describes the configuration of the Session Border Controller. At the time of writing the Avaya Session Border Controller Advanced for Enterprise was badged as the Sipera E-SBC (Enterprise Session Border Controller) developed for Unified Communications Security (UC-Sec). The Avaya Session Border Controller Advanced for Enterprise is administered using the E-SBC Control Center.

### 7.1. Access Avaya Session Border Controller Advanced for Enterprise

Access the Session Border Controller using a web browser by entering the URL **https://<ip-address>**, where **<ip-address>** is the private IP address configured at installation. Select the **UC-Sec Control Center**



Log in with the appropriate credentials.

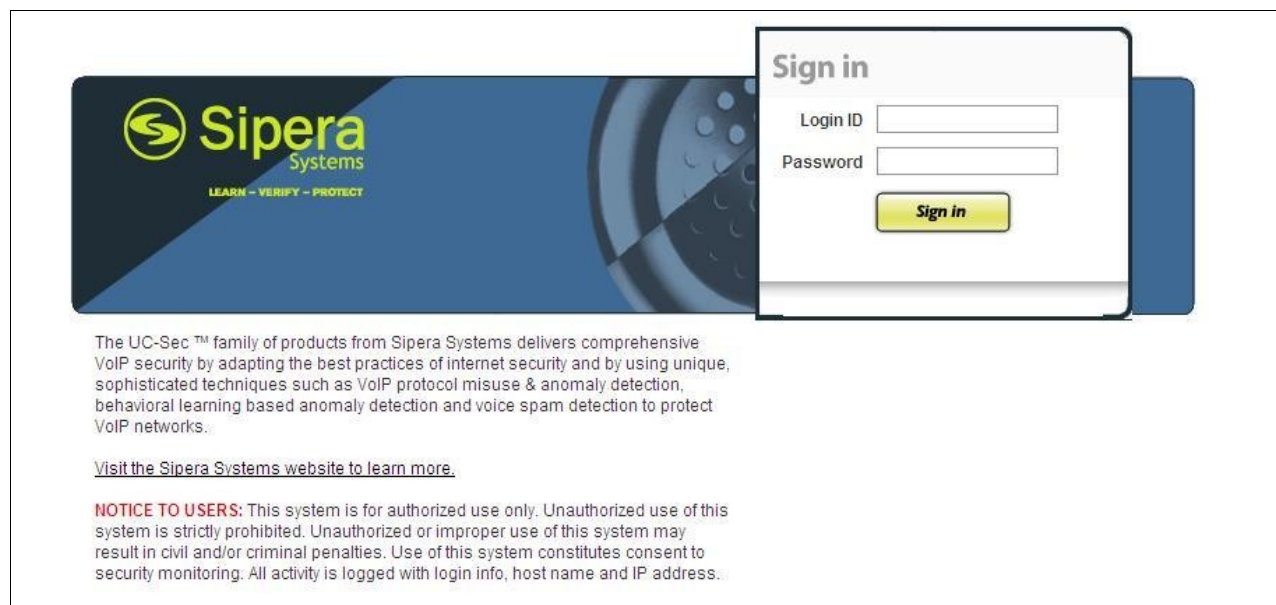

The UC-Sec™ family of products from Sipera Systems delivers comprehensive VoIP security by adapting the best practices of internet security and by using unique, sophisticated techniques such as VoIP protocol misuse & anomaly detection, behavioral learning based anomaly detection and voice spam detection to protect VoIP networks.

[Visit the Sipera Systems website to learn more.](#)

**NOTICE TO USERS:** This system is for authorized use only. Unauthorized use of this system is strictly prohibited. Unauthorized or improper use of this system may result in civil and/or criminal penalties. Use of this system constitutes consent to security monitoring. All activity is logged with login info, host name and IP address.

## 7.2. Define Network Information

Network information is required on the Avaya Session Border Controller Advanced for Enterprise to allocate IP addresses and masks to the interfaces. Note that only the **A1** and **B1** interfaces are used, typically the **A1** interface is used for the internal side and **B1** is used for external side of the Avaya Session Border Controller Advanced for Enterprise. Each side can't have more than one interface assigned. To define the network information, navigate to **Device Specific Settings → Network Management** in the **UC-Sec Control Center** menu on the left hand side and click on **Add IP**. Enter details in the blank box that appears at the end of the list:

- Define the internal IP address with screening mask and assign to interface **A1**
- Select Save (not shown) to save the information
- Click on **Add IP**
- Define the external IP address (obscured in the screenshot below) with screening mask and assign to interface **B1**
- Select Save (not shown) to save the information
- Select the **Network Configuration** tab and change the state of interfaces A1 and B1 to **Enabled**
- Click on **System Management** in the main menu
- Select **Restart Application** indicated by an icon in the status bar

UC-Sec Control Center  
Welcome ucsec, you signed in as Admin. Current server time is 10:35:58 AM GMT

Alarms Incidents Statistics Logs Diagnostics Users Logout Help

UC-Sec Control Center  
Welcome  
Administration  
Backup/Restore  
System Management  
Global Parameters  
Global Profiles  
SIP Cluster  
Domain Policies  
Device Specific Settings  
Network Management  
Media Interface  
Signaling Interface  
Signaling Forking  
SNMP  
End Point Flows  
Session Flows  
Two Factor  
Relay Services

Device Specific Settings > Network Management: GSSCP-SBC1

UC-Sec Devices  
GSSCP-SBC1

Network Configuration Interface Configuration

Modifications or deletions of an IP address or its associated data require an application restart before taking effect. Application restarts can be issued from System Management.

A1 Netmask: 255.255.255.0 A2 Netmask: B1 Netmask: 255.255.255.128 B2 Netmask:

Add IP Save Changes Clear Changes

IP Address	Public IP	Gateway	Interface
10.10.9.81		10.10.9.1	A1
xxx.xxx.xxx.xxx		xxx.xxx.xxx.xxx	B1

## 7.3. Define Interfaces

When the IP addresses and masks are assigned to the interfaces, these are then configured as signalling and media interfaces.

### 7.3.1. Signalling Interfaces

To define the signalling interfaces on the Avaya Session Border Controller Advanced for Enterprise, navigate to **Device Specific Settings → Signalling Interface** in the **UC-Sec Control Center** menu on the left hand side. Details of transport protocol and ports for the internal and external SIP signalling are entered here

- Select **Add Signalling Interface** and enter details in the pop-up menu
- In the **Name** field enter a descriptive name for the internal signalling interface
- Select an **internal** interface IP address defined in **Section 7.2**
- Select **UDP** and **TCP** port numbers, **5075** was used to be consistent with the external interface
- Select **Add Signalling Interface** and enter details in the pop-up menu
- In the **Name** field enter a descriptive name for the external signalling interface
- Select an **external** interface IP address (not shown) defined in **Section 7.2**
- Select **UDP** and **TCP** port numbers, **5075** is used by Telenor

UC-Sec Control Center

Welcome ucsec, you signed in as Admin. Current server time is 10:38:04 AM GMT

Alarms Incidents Statistics Logs Diagnostics Users Logout Help

UC-Sec Control Center

- Welcome
- Administration
  - Backup/Restore
  - System Management
    - Global Parameters
    - Global Profiles
    - SIP Cluster
    - Domain Policies
    - Device Specific Settings
      - Network Management
      - Media Interface

Device Specific Settings > Signaling Interface: GSSCP-SBC1

UC-Sec Devices

GSSCP-SBC1

Signaling Interface

Add Signaling Interface

Name	Signaling IP	TCP Port	UDP Port	TLS Port	TLS Profile	
Int_Sig	10.10.9.81	5075	5075	---	None	
Ext_Sig	xxx.xxx.xxx.xxx	5075	5075	---	None	

### 7.3.2. Media Interfaces

To define the media interfaces on the Avaya Session Border Controller Advanced for Enterprise, navigate to **Device Specific Settings → Signalling Interface** in the **UC-Sec Control Center** menu on the left hand side. Details of the RTP and SRTP port ranges for the internal and external media streams are entered here. The IP addresses for media can be the same as those used for signalling.

- Select **Add Media Interface** and enter details in the pop-up menu
- In the **Name** field enter a descriptive name for the internal media interface
- Select an **internal** interface IP address defined in **Section 7.2**
- Select RTP port ranges for the media path with the enterprise end-points
- Select **Add Media Interface** and enter details in the pop-up menu
- In the **Name** field enter a descriptive name for the external media interface
- Select an **external** interface IP address (not shown) defined in **Section 7.2**
- Select RTP port ranges for the media path with the Telenor SBC

UC-Sec Control Center

Welcome ucsec, you signed in as Admin. Current server time is 10:37:07 AM GMT

Alarms Incidents Statistics Logs Diagnostics Users Logout Help

UC-Sec Control Center

Device Specific Settings > Media Interface: GSSCP-SBC1

UC-Sec Devices

GSSCP-SBC1

Media Interface

Modifying or deleting an existing media interface will require an application restart before taking effect. Application restarts can be issued from System Management.

Add Media Interface

Name	Media IP	Port Range	
Int_Media	10.10.9.81	2048 - 3329	
Ext_Media	xxx.xxx.xxx.xxx	35000 - 40000	

## 7.4. Define Server Interworking

Server interworking is defined for each server connected to the Avaya Session Border Controller Advanced for Enterprise. In this case, the Telenor SBC is connected as the Trunk Server and the Session Manager is connected as the Call Server. To define server interworking on the Avaya Session Border Controller Advanced for Enterprise, navigate to **Global Profiles → Server interworking** in the **UC-Sec Control Center** menu on the left hand side. Highlight the avaya-ru profile which is a factory setting appropriate for Avaya equipment and select **Clone Profile**. A pop-up menu is generated headed “**Clone Profile**”

- In the **Clone Name** field enter a descriptive name for the Session Manager and click **Finish**
- Select **Edit** and enter details in the pop-up menu.
- Check the T.38 box
- Change the **Hold Support** RFC to **RFC2543** then click **Next** and **Finish**
- Highlight the completed profile and Select **Clone Profile**
- In the **Clone Name** field enter a descriptive name for server interworking profile for the Telenor SBC and click **Finish**
- Select **Edit** and enter details in the pop-up menu
- Check the T.38 box
- In **181 Handling** , select **No SDP** (required for call forwarding as described in **Section 2.2**)
- Select **Next** three times and **Finish**

The screenshot displays the UC-Sec Control Center web interface. The left sidebar shows the navigation menu with 'Global Profiles' expanded and 'Server Interworking' selected. The main panel shows the configuration for the 'TNOR\_Trunk' profile. The 'General' tab is active, showing various settings. The 'Hold Support' is set to 'RFC2543', '181 Handling' is 'No SDP', '182 Handling' is 'None', '183 Handling' is 'None', 'Refer Handling' is 'No', '3xx Handling' is 'No', 'Diversion Header Support' is 'No', 'Delayed SDP Handling' is 'No', 'T.38 Support' is 'Yes', 'URI Scheme' is 'SIP', and 'Via Header Format' is 'RFC3261'. The 'Privacy' section shows 'Privacy Enabled' as 'No' and 'User Name' as an empty field.

General	
Hold Support	RFC2543
180 Handling	None
181 Handling	No SDP
182 Handling	None
183 Handling	None
Refer Handling	No
3xx Handling	No
Diversion Header Support	No
Delayed SDP Handling	No
T.38 Support	Yes
URI Scheme	SIP
Via Header Format	RFC3261

Privacy	
Privacy Enabled	No
User Name	

## 7.5. Define Servers

Servers are defined for each server connected to the Avaya Session Border Controller Advanced for Enterprise. In this case, the Telenor SBC is connected as the Trunk Server and the Session Manager is connected as the Call Server. To define the Session Manager, navigate to **Global Profiles → Server Configuration** in the **UC-Sec Control Center** menu on the left hand side. Click on **Add Profile** and enter details in the pop-up menu

- In the **Profile Name** field enter a descriptive name for the Session Manager and click **Next**
- In the **Server Type** drop down menu, select **Call Server**
- In the **IP Addresses / Supported FQDNs** box, type the Session Manager SIP interface address which is the same as defined on the Communication Manager in **Section 5.2**
- Check **TCP** and **UDP** in **Supported Transports**
- Define the **TCP** and **UDP** ports for SIP signaling, **5075** is used for consistency with the Telenor Trunk Server
- Click **Next** three times then select the **Interworking Profile** for the Session Manager defined in **Section 7.4** from the drop down menu
- Click **Finish**

The **General** tab on the resultant screen shows the **IP addresses**, **TCP Port** and **UDP Port** entered.

The screenshot displays the UC-Sec Control Center web interface. The left sidebar shows a navigation menu with 'Server Configuration' selected. The main area is titled 'Global Profiles > Server Configuration: SM9\_Call\_Server'. It features a table of profiles with 'SM9\_Call\_Server' highlighted. To the right, the 'General' tab is active, showing configuration details for the selected profile.

General	
Server Type	Call Server
IP Addresses / FQDNs	10.10.9.61
Supported Transports	TCP, UDP
TCP Port	5075
UDP Port	5075

An 'Edit' button is located at the bottom right of the configuration table.



The **Advanced** tab on the resultant screen shows the **Interworking Profile** for the call server defined in section 7.4




To define the Telenor SBC, navigate to **Global Profiles → Server Configuration** in the **UC-Sec Control Center** menu on the left hand side. Click on **Add Profile** and enter details in the pop-up menu

- In the **Profile Name** field enter a descriptive name for the Telenor SBC and click **Next**
- In the **Server Type** drop down menu, select **Trunk Server**
- In the **IP Addresses / Supported FQDNs** box, type the IP address provided by the Service provider, typically the external IP address of their SBC
- Check **TCP** and **UDP** in **Supported Transports**
- Define the **TCP** and **UDP** ports for SIP signaling, **5075** is used for Telenor
- Click **Next** three times then select the **Interworking Profile** for the Telenor SBC defined in **Section 7.4** from the drop down menu
- Click **Finish**

The **General** tab on the resultant screen shows the **IP addresses**, **TCP Port** and **UDP Port** entered.



The **Advanced** tab on the resultant screen shows the **Interworking Profile** for the call server defined in **Section 7.4**.

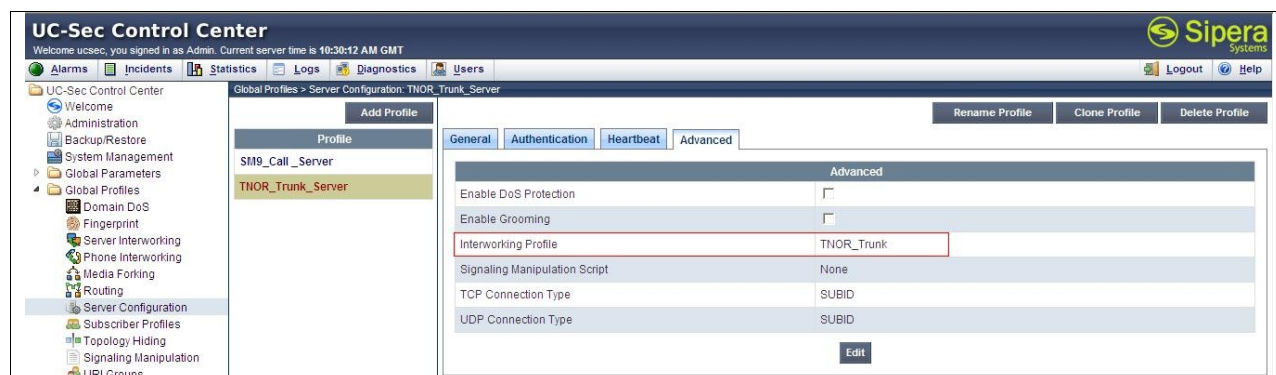


## 7.6. Define Routing

Routing information is required for routing to the Session Manager on the internal side and the Telenor SBC on the external side. The IP addresses and ports defined here will be used as the destination addresses for signalling. If no port is specified, default 5060 is used. To define routing to the Session Manager, navigate to **Global Profiles → Routing** in the **UC-Sec Control Center** menu on the left hand side. Click on **Add Profile** and enter details in the **Routing Profile** pop-up menu.

- In the **Profile Name** field enter a descriptive name for the Session Manager and click **Next**
- Enter the Session Manager SM100 IP address and port in the **Next Hop Server 1** field
- Check the **Next Hop in Dialog** box
- Select TCP for the **Outgoing Transport** and click **Finish**

Note that unless default port 5060 is used, this must be included in the next hop IP address. Note also that **Next Hop in Dialog** is required to ensure that messages are sent to the next hop address regardless of the original destination. This is necessary where the Trunk Server sends messages to the address specified in the Contact header in the original INVITE message.

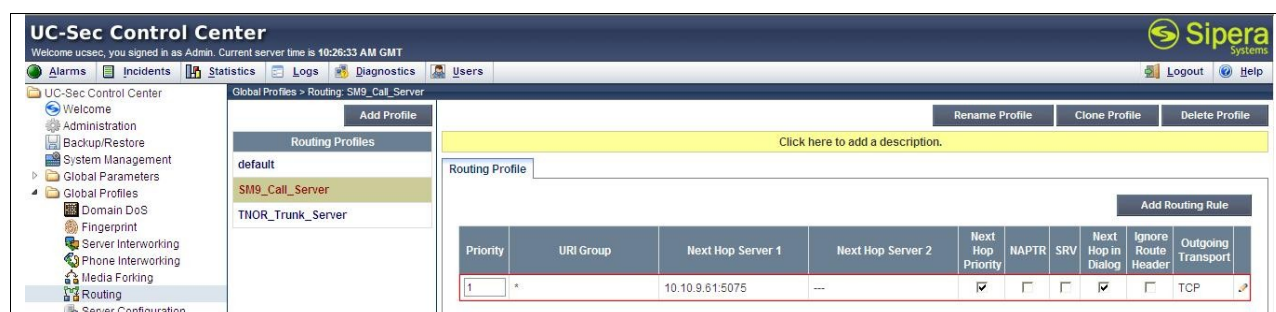



To define routing to the Telenor SBC, navigate to **Global Profiles → Routing** in the **UC-Sec Control Center** menu on the left hand side. Click on **Add Profile** and enter details in the **Routing Profile** pop-up menu.

- In the **Profile Name** field enter a descriptive name for the Telenor SBC and click **Next**
- In the **Name** field enter a descriptive name for the Telenor SBC
- Enter the Telenor SBC IP address (not shown) and port **5075** in the **Next Hop Server 1** field
- Select **UDP** for the **Outgoing Transport** and click **Finish**

The screenshot shows the UC-Sec Control Center interface. The left sidebar contains a tree view with 'Global Profiles' expanded, and 'Routing' selected. The main area shows the 'Routing Profiles' section for 'TNOR\_Trunk\_Server'. A table lists routing rules with columns: Priority, URI Group, Next Hop Server 1, Next Hop Server 2, Next Hop Priority, NAPTR, SRV, Next Hop in Dialog, Ignore Route Header, and Outgoing Transport. A single rule is shown with Priority 1, URI Group \*, Next Hop Server 1 as 'xxx.xxx.xxx.x:5075', and Outgoing Transport as 'UDP'.

Priority	URI Group	Next Hop Server 1	Next Hop Server 2	Next Hop Priority	NAPTR	SRV	Next Hop in Dialog	Ignore Route Header	Outgoing Transport
1	*	xxx.xxx.xxx.x:5075	---	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	UDP

## 7.7. Topology Hiding

Topology hiding is used to hide local information such as private IP addresses and local domain names. The local information can be overwritten or next hop IP addresses can be used. To define Topology Hiding for the Session Manager, navigate to **Global Profiles → Topology Hiding** in the **UC-Sec Control Center** menu on the left hand side. Click on **Add Profile** and enter details in the **Topology Hiding Profile** pop-up menu.

- In the **Profile Name** field enter a descriptive name for the Session Manager and click **Next**
- If the required Header is not shown, click on **Add Header**
- Select **From** as the required header from the **Header** drop down menu.
- Select the required action from the **Required Action** drop down menu, **Overwrite** was used for test
- Enter the required domain name for the Trunk Server, **avaya.com** was used for test
- Repeat for the **Request-Line** and **To** headers and **Overwrite** with a local domain name, **avaya.com** was used for test

Note that different domain names could be used for the enterprise and the Telenor network.

The screenshot shows the UC-Sec Control Center web interface. The left sidebar contains a navigation tree with 'Global Profiles' expanded, showing 'SM9\_CS' selected under 'Topology Hiding'. The main panel displays the configuration for 'SM9\_CS'. At the top, there are buttons for 'Add Profile', 'Rename Profile', 'Clone Profile', and 'Delete Profile'. Below these is a yellow bar with the text 'Click here to add a description.' The 'Topology Hiding' tab is active, showing a table with the following data:

Header	Criteria	Replace Action	Overwrite Value
Request-Line	IP/Domain	Overwrite	avaya.com
From	IP/Domain	Overwrite	avaya.com
To	IP/Domain	Overwrite	avaya.com
Record-Route	IP/Domain	Auto	---
Via	IP/Domain	Auto	---
SDP	IP/Domain	Auto	---

An 'Edit' button is located at the bottom right of the table.

To define Topology Hiding for the Telenor SBC, navigate to **Global Profiles → Topology Hiding** in the **UC-Sec Control Center** menu on the left hand side. Click on **Add Profile** and enter details in the **Topology Hiding Profile** pop-up menu.

- In the **Profile Name** field enter a descriptive name for the Telenor SBC and click **Next**
- If the required Header is not shown, click on **Add Header**
- Select **From** as the required header from the **Header** drop down menu.
- Select the required action from the **Required Action** drop down menu, **Overwrite** was used for test
- Enter the required domain name for the Session Manager, **avaya.com** was used for test
- Repeat for the **Request-Line** and **To** headers and **Overwrite** with a domain name for the Telenor SBC, **avaya.com** was used for test



## 7.8. Signalling Rules

Signalling rules are a mechanism on the Avaya Session Border Controller Advanced for Enterprise to handle any unusual signalling scenarios that may be encountered for a particular Service Provider. In the case of Telenor, as mentioned in **Section 2.2** the network is responding to OPTIONS messages from the Enterprise with a 407 “Proxy Authentication Required” message.

When the Entity Link described in **Section 6.6** is established, it initiates OPTIONS messages from the Session Manager to the Avaya Session Border Controller Advanced for Enterprise. This prompts the Avaya Session Border Controller Advanced for Enterprise to initiate OPTIONS messages to the Service Provider. If it doesn't receive a valid response from the Service Provider, it will not respond to the Session Manager. The 407 “Proxy Authentication Required” is not treated as a valid response. When this happens, the Entity Links will not be established and will be indicated as “DOWN” on the Session Manager

A signalling rule must be defined for Telenor to treat the 407 “Proxy Authentication Required” message as a 200 “OK”. To define the signalling rule, navigate to **Domain Policies → Signalling Rules** in the **UC-Sec Control Center** menu on the left hand side. Click on **Add Rule** and enter details in the **Signalling Rule** pop-up box

- In the **Rule Name** field enter a descriptive name for the Telenor signalling rule and click **Next** and **Next** again, then **Finish**
- Click on the **Responses** tab
- Click on the **Add in Response Control**
- Select **Response Code 407**
- Select **Change response** in the **In Dialog Action** field
- Define the response code as **200** and the text field as **OK**

The screenshot shows the 'UC-Sec Control Center' interface. The left sidebar contains a tree view with categories like Administration, System Management, Global Parameters, Global Profiles, Domain DoS, Fingerprint, Server Interworking, Phone Interworking, Media Forging, Routing, and Server Configuration. The main area is titled 'Domain Policies > Signalling Rules: Telenor 407'. It features a 'Filter By Device...' dropdown, buttons for 'Add Rule', 'Rename Rule', 'Clone Rule', and 'Delete Rule', and a 'Click here to add a description.' link. Below this is a tabbed interface with 'General', 'Requests', 'Responses', 'Request Headers', 'Response Headers', and 'Signaling QoS'. The 'Responses' tab is active, showing a table with one row: '1 | 407 | ALL | Change response to "200 OK" | No | IN'. Above the table are buttons for 'Add In Response Control' and 'Add Out Response Control'.

An End Point Policy Group is required to implement the signalling rule. To define this, navigate to **Domain Policies → End Point Policy Groups** in the **UC-Sec Control Center** menu on the left hand side. Click on **Add Group** and enter details in the **Policy Group** pop-up box

- In the **Group Name** field enter a descriptive name for the Telenor Policy Group and click **Next**
- In the **Application** drop down menu, select **default**
- In the **Border** drop down menu, select **No-Nat-Reg-Proxy**
- In the **Media** drop down menu, select **default-low-med**
- In the **Security** drop down menu, select **default-low**
- In the **Signalling** drop down menu, select the recently added signalling rule for Telenor (**Telenor 407**)
- In the **Time of Day** drop down menu, select **default**

The screenshot shows the 'UC-Sec Control Center' interface. The left sidebar is the same as the previous screenshot. The main area is titled 'Domain Policies > End Point Policy Groups: Telenor-low'. It features a 'Filter By Device...' dropdown, buttons for 'Add Group', 'Rename Group', and 'Delete Group', and a 'Click here to add a description.' link. Below this is a 'Policy Group' tabbed interface with a 'View Summary' button and an 'Add Policy Set' button. The 'Policy Group' tab is active, showing a table with one row: '1 | default | No-Nat-Reg-Proxy | default-low-med | default-low | Telenor 407 | default'.

## 7.9. Server Flows

Server Flows combine the previously defined profiles into an outgoing flow from the Session Manager to the Telenor SBC and an incoming flow from the Telenor SBC to the Session Manager. This configuration ties all the previously entered information together so that calls can be routed from the Session Manager to the Telenor SBC and vice versa. To define an outgoing Server Flow, click on **Device Specific Settings** to expand the menu and select **End Point Flows**.

- Click on the **Server Flows** tab
- Select **Add Flow**
- In the **Name** field enter a descriptive name for the outgoing server flow
- In the **Received Interface** field, select the SIP signalling interface for the Telenor SBC
- In the **Signalling Interface** field, select the SIP signalling interface for the Session Manager
- In the **Media Interface** field, select the media interface for the Session Manager
- In the **Routing Profile** field, select the routing profile of the Telenor SBC
- In the **Topology Hiding Profile** field, select the topology hiding profile of the Session Manager

An incoming Server Flow is defined as a reversal of the outgoing Server Flow

- Select **Add Flow**
- In the **Name** field enter a descriptive name for the incoming server flow
- In the **Received Interface** field, select the SIP signalling interface for the Session Manager
- In the **Signalling Interface** field, select the SIP signalling interface for the Telenor SBC
- In the **Media Interface** field, select the media interface for the Telenor SBC
- In the **End Point Policy Group** field, select the End Point Policy Group defined in **Section 7.8**
- In the **Routing Profile** field, select the routing profile of the Session Manager
- In the **Topology Hiding Profile** field, select the topology hiding profile of the Telenor SBC

The screenshot displays the Avaya Session Manager configuration interface. On the left, a navigation tree shows 'Device Specific Settings' expanded, with 'End Point Flows' selected. The main panel shows the 'Server Flows' tab. At the top right is an 'Add Flow' button. Below it is a yellow banner that says 'Hover over a row to see its description.' Two tables are shown, each with a title: 'Server Configuration: SM9\_Call\_Server' and 'Server Configuration: TNOR\_Trunk\_Server'. Each table has 12 columns: Priority, Flow Name, URI Group, Transport, Remote Subnet, Received Interface, Signaling Interface, Media Interface, End Point Policy Group, Routing Profile, Topology Hiding Profile, File Transfer Profile, and a set of action icons (up, down, delete, add).

Priority	Flow Name	URI Group	Transport	Remote Subnet	Received Interface	Signaling Interface	Media Interface	End Point Policy Group	Routing Profile	Topology Hiding Profile	File Transfer Profile	
1	SM9_Call_Server	*	*	*	Ext_Sig	Int_Sig	Int_Media	default-low	TNOR_Trunk_Server	SM9_CS	None	⬆ ⬇ ⬇ ⬆

Priority	Flow Name	URI Group	Transport	Remote Subnet	Received Interface	Signaling Interface	Media Interface	End Point Policy Group	Routing Profile	Topology Hiding Profile	File Transfer Profile	
1	TNOR_Trunk	*	*	*	Int_Sig	Ext_Sig	Ext_Media	Telenor-low	SM9_Call_Server	TNOR_Trunk	None	⬆ ⬇ ⬇ ⬆

## 8. Service Provider Configuration

The configuration of the Telenor equipment used to support the Telenor SIP Trunk service is outside of the scope of these Application Notes and will not be covered. To obtain further information on Telenor equipment and system configuration please contact an authorised Telenor representative.

## 9. Verification Steps

This section provides steps that may be performed to verify that the solution is configured correctly.

1. From System Manager Home Tab click on Session Manager and navigate to **Session Manager → System Status → SIP Entity Monitoring**. Select the relevant SIP Entity from the list and observe if the **Conn Status** and **Link Status** are showing as **up**.

The screenshot shows the Avaya Aura System Manager 6.1 web interface. The left sidebar contains a navigation menu with options like Session Manager, Dashboard, Session Manager Administration, Communication Profile Editor, Network Configuration, Device and Location Configuration, Application Configuration, and System Status. The main content area is titled 'SIP Entity, Entity Link Connection Status' and shows 'All Entity Links to SIP Entity: SBC'. A table displays connection details for 'Session Manager 1' with a status of 'Up'.

Details	Session Manager Name	SIP Entity Resolved IP	Port	Proto.	Conn. Status	Reason Code	Link Status
► Show	Session Manager 1	10.10.9.67	5060	TCP	Up	200 OK	Up

2. From the Communication Manager SAT interface run the command **status trunk n** where **n** is a previously configured SIP trunk. Observe if all channels on the trunk group display **In service/ idle**.

```
status trunk 1

TRUNK GROUP STATUS

Member    Port      Service State      Mtce Connected Ports
              Busy
0001/001  T00001    in-service/idle    no
0001/002  T00002    in-service/idle    no
0001/003  T00003    in-service/idle    no
0001/004  T00004    in-service/idle    no
0001/005  T00005    in-service/idle    no
0001/006  T00006    in-service/idle    no
0001/007  T00007    in-service/idle    no
0001/008  T00008    in-service/idle    no
0001/009  T00009    in-service/idle    no
0001/010  T00010    in-service/idle    no
```



3. Verify that endpoints at the enterprise site can place calls to the PSTN and that the call remains active.
4. Verify that endpoints at the enterprise site can receive calls from the PSTN and that the call can remain active.
5. Verify that the user on the PSTN can end an active call by hanging up.
6. Verify that an endpoint at the enterprise site can end an active call by hanging up.

## 10. Conclusion

These Application Notes describe the configuration necessary to connect Avaya Aura® Communication Manager, Avaya Aura® Session Manager and Avaya Session Border Controller Advanced for Enterprise to Telenor SIP Trunk Service. Telenor SIP Trunk Service is a SIP-based Voice over IP solution providing businesses a flexible, cost-saving alternative to traditional hardwired telephony trunks. The service was successfully tested with a number of observations listed in **Section 2.2**.

## 11. References

This section references the documentation relevant to these Application Notes. Additional Avaya product documentation is available at <http://support.avaya.com>.

- [1] *Installing and Configuring Avaya Aura® System Platform*, Release 6.0.3, February 2011.
- [2] *Administering Avaya Aura® System Platform*, Release 6.0.3, February 2011.
- [3] *Administering Avaya Aura® Communication Manager*, Release 6.0.1, April 2011.
- [4] *Avaya Aura® Communication Manager Feature Description and Implementation*, August 2010, Document Number 555-245-205.
- [5] *Installing and Upgrading Avaya Aura® System Manager Release 6.1*, November 2010.
- [6] *Installing and Configuring Avaya Aura® Session Manager*, April 2011, Document Number 03-603473
- [7] *Administering Avaya Aura® Session Manager*, May 2011, Document Number 03-603324.
- [8] *E-SBC (Avaya Session Border Controller Advanced for Enterprise) Administration Guide*, November 2011
- [9] RFC 3261 *SIP: Session Initiation Protocol*, <http://www.ietf.org/>

---

**©2012 Avaya Inc. All Rights Reserved.**

Avaya and the Avaya Logo are trademarks of Avaya Inc. All trademarks identified by ® and ™ are registered trademarks or trademarks, respectively, of Avaya Inc. All other trademarks are the property of their respective owners. The information provided in these Application Notes is subject to change without notice. The configurations, technical data, and recommendations provided in these Application Notes are believed to be accurate and dependable, but are presented without express or implied warranty. Users are responsible for their application of any products specified in these Application Notes.

Please e-mail any questions or comments pertaining to these Application Notes along with the full title name and filename, located in the lower right corner, directly to the Avaya DevConnect Program at [devconnect@avaya.com](mailto:devconnect@avaya.com).