



Avaya Solution & Interoperability Test Lab

Application Notes for Configuring Avaya Aura[®] Communication Manager R6.0.1, Avaya Aura[®] Session Manager R6.1 to Support BT Wholesale/HIPCOM SIP Trunk Service – Issue 1.0

Abstract

These Application Notes describe the steps to configure Session Initiation Protocol (SIP) trunking between BT Wholesale (BTW)/HIPCOM's SIP Trunk Service and an Avaya SIP enabled enterprise solution. The Avaya solution consists of Avaya Aura[®] Session Manager and Avaya Aura[®] Communication Manager. BT is a member of the DevConnect Service Provider program.

Information in these Application Notes has been obtained through DevConnect compliance testing and additional technical discussions. Testing was conducted via the DevConnect Program at the Avaya Solution and Interoperability Test Lab.

1. Introduction

These Application Notes describe the steps to configure Session Initiation Protocol (SIP) trunking between BT Wholesale/HIPCOM SIP Trunk Service and an Avaya SIP enabled enterprise solution. The Avaya solution consists of Avaya Aura[®] Session Manager and Avaya Aura[®] Communication Manager Evolution Server Customers using this Avaya SIP-enabled enterprise solution with the BT Wholesale/HIPCOM SIP Trunk Service are able to place and receive PSTN calls via a dedicated Internet connection and the SIP protocol. This converged network solution is an alternative to traditional PSTN trunks. This approach generally results in lower cost for the enterprise.

2. General Test Approach and Test Results

The general test approach was to configure a simulated enterprise site using an Avaya SIP telephony solution consisting of Session Manager and Communication Manager. The enterprise site was configured to use the SIP Trunk Service provided by BTW/HIPCOM.

2.1. Interoperability Compliance Testing

The interoperability test included the following:

- Incoming calls to the enterprise site from the PSTN were routed to the DID numbers assigned by BTW/HIPCOM. Incoming PSTN calls were made to H.323, SIP, Digital and Analogue telephones at the enterprise.
- Outgoing calls from the enterprise site were completed via BTW/HIPCOM to PSTN destinations. Outgoing calls from the enterprise to the PSTN were made from H.323, SIP, Digital and Analogue telephones.
- Calls using G.729, G.711A and G.711Mu codec's.
- Fax calls to/from a group 3 fax machine to a PSTN connected fax machine using the T.38 mode.
- DTMF transmission using RFC 2833 with successful Vector navigation for inbound and outbound calls.
- User features such as hold and resume, transfer, conference, call forwarding, etc.
- Caller ID Presentation and Caller ID Restriction.
- Direct IP-to-IP media (also known as “shuffling”) with SIP and H.323 telephones was turned off during this test.
- Call coverage and call forwarding for endpoints at the enterprise site.

2.2. Test Results

Interoperability testing of the sample configuration was completed with successful results for the BTW/HIPCOM SIP Trunk Service with the following observations:

- All tests were completed using H.323, SIP, Digital and Analogue phone types. The Avaya one-X Communicator was used to test Soft client functionality.
- No inbound toll free numbers were tested, however routing of inbound DID numbers and the relevant number translation was successfully tested.
- Routing to emergency numbers (such as 999) was not tested.

2.3. Support

For technical support on BTW/HIPCOM products please contact the following website:

<http://www.hipcom.co.uk/support> or <http://ipvoicesupport.btwholesale.com>

3. Reference Configuration

Figure 1 illustrates the test configuration. The test configuration shows an enterprise site connected to the BTW/HIPCOM SIP Trunk Service. Located at the enterprise site is a Session Manager and Communication Manager. Endpoints are Avaya 9600 series IP telephones, Avaya 4600 series IP telephones (with H.323 firmware), Avaya 2400 series Digital Telephone, an Analogue Telephone and Fax Machine. For security purposes, any public IP addresses or PSTN routable phone numbers used in the compliance test are not shown in these Application Notes.

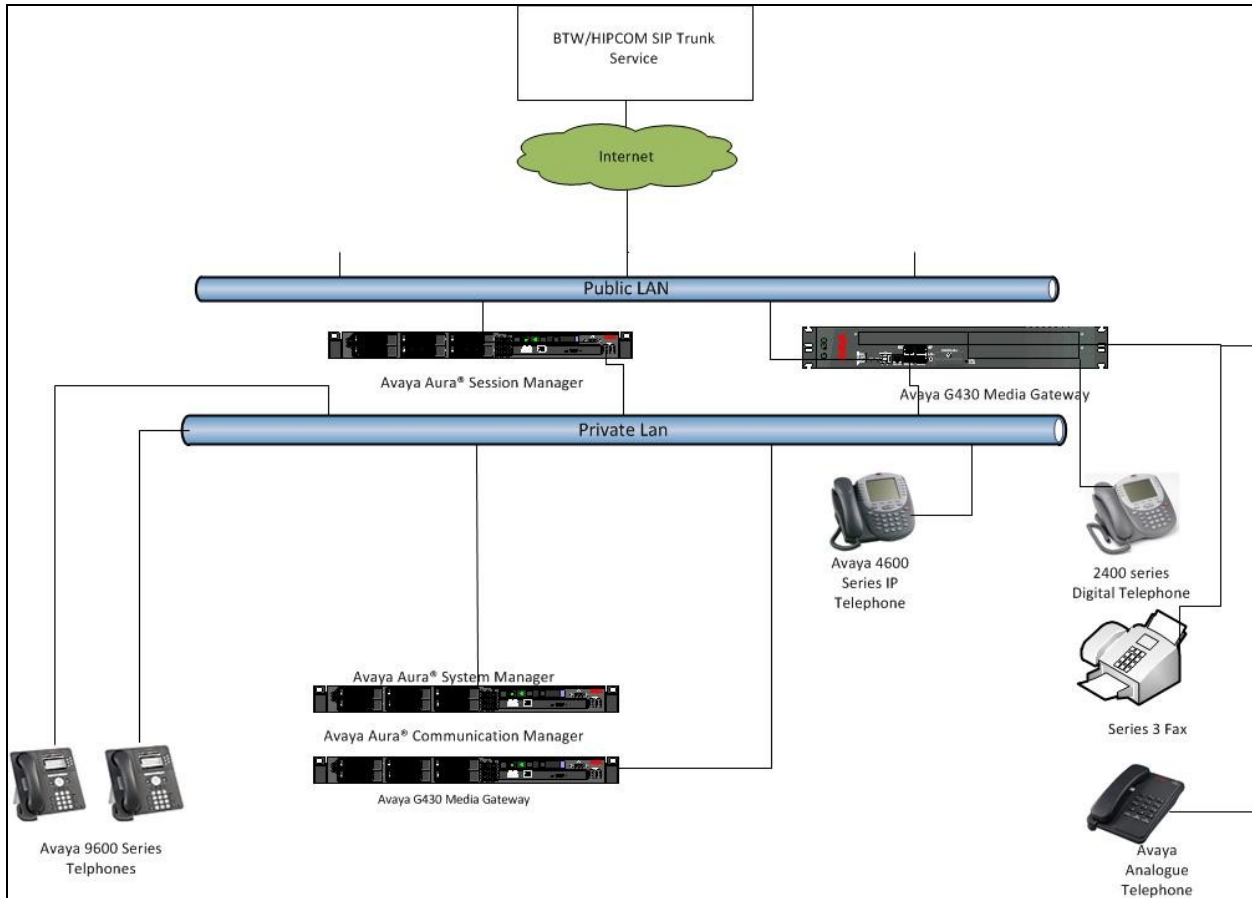


Figure 1: BTW/HIPCOM SIP Solution Topology

4. Equipment and Software Validated

The following equipment and software were used for the sample configuration provided:

Equipment	Software
Avaya S8800 Server	Avaya Aura® Communication Manager R6.0.1 (R016x.00.1.510.1-18860)
Avaya G430 Media Gateway MM711 Analogue MM712 Digital	HW31 FW093 HW07 FW009
Avaya S8800 Server	Avaya Aura® Session Manager R6.1 (6.1.0.0.610023)
Avaya S8800 Server	Avaya Aura® System Manager R6.1 (6.1.0.4.5072-6.1.4.113)
Avaya 9620 Phone (H.323)	3.11
Avaya 9620 Phone (SIP)	2.6.4.0
Avaya 4621 Phone (H.323)	2.9.1
Avaya 2420 Digital Phone	N/A
Analog Phone	N/A
BTW/HIPCOM SIP Trunk Service	Acme Packet 4500 Net-Net SBC ver SCX6.1.0 Broadsoft - ver 14 Sevice Pack 9 Configuration version - HIPCOM v8.1

5. Configure Avaya Aura® Communication Manager

This section describes the steps for configuring Communication Manager for SIP Trunking. SIP trunks are established between Communication Manager and Session Manager. These SIP trunks will carry SIP Signaling associated with BTW/HIPCOM SIP Trunk Service. For incoming calls, the Session Manager receives SIP messages from BTW/HIPCOM and directs the incoming SIP messages to Communication Manager. Once the message arrives at Communication Manager, further incoming call treatment, such as incoming digit translations and class of service restrictions may be performed. All outgoing calls to the PSTN are processed within Communication Manager and may be first subject to outbound features such as automatic route selection, digit manipulation and class of service restrictions. Once Communication Manager selects a SIP trunk, the SIP signaling is routed to the Session Manager. The Session Manager directs the outbound SIP messages to the BTW/HIPCOM network. Communication Manager configuration was performed using the System Access Terminal (SAT). Some screens in this section have been abridged and highlighted for brevity and clarity in presentation. The general installation of the Avaya S8800 Server and Avaya G430 Media Gateway is presumed to have been previously completed and is not discussed here.

5.1. Confirm System Features

The license file installed on the system controls the maximum values for these attributes. If a required feature is not enabled or there is insufficient capacity, contact an authorized Avaya sales representative to add additional capacity. Use the **display system-parameters customer-options** command and on **Page 2**, verify that the **Maximum Administered SIP Trunks** supported by the system is sufficient for the combination of trunks to the BTW/HIPCOM network, and any other SIP trunks used.

```
display system-parameters customer-options                               Page 2 of 11
                                OPTIONAL FEATURES

IP PORT CAPACITIES                                                    USED
      Maximum Administered H.323 Trunks: 12000 0
      Maximum Concurrently Registered IP Stations: 18000 3
      Maximum Administered Remote Office Trunks: 12000 0
Maximum Concurrently Registered Remote Office Stations: 18000 0
      Maximum Concurrently Registered IP eCons: 414 0
      Max Concur Registered Unauthenticated H.323 Stations: 100 0
      Maximum Video Capable Stations: 18000 0
      Maximum Video Capable IP Softphones: 18000 0
      Maximum Administered SIP Trunks: 24000 30
```

On Page 4, verify that **IP Trunks** field is set to **y**.

```

display system-parameters customer-options
                                Page 4 of 11
                                OPTIONAL FEATURES

Emergency Access to Attendant? y          IP Stations? y
  Enable 'dadmin' Login? y
  Enhanced Conferencing? y              ISDN Feature Plus? y
    Enhanced EC500? y                    ISDN/SIP Network Call Redirection? y
Enterprise Survivable Server? n          ISDN-BRI Trunks? y
  Enterprise Wide Licensing? n          ISDN-PRI? y
    ESS Administration? n                Local Survivable Processor? n
  Extended Cvg/Fwd Admin? y             Malicious Call Trace? y
  External Device Alarm Admin? y        Media Encryption Over IP? n
Five Port Networks Max Per MCC? n       Mode Code for Centralized Voice Mail? n
  Flexible Billing? n
Forced Entry of Account Codes? y         Multifrequency Signaling? y
  Global Call Classification? y          Multimedia Call Handling (Basic)? y
  Hospitality (Basic)? y                 Multimedia Call Handling (Enhanced)? y
Hospitality (G3V3 Enhancements)? y     Multimedia IP SIP Trunking? n
                                IP Trunks? y

IP Attendant Consoles? y
(NOTE: You must logoff & login to effect the permission changes.)

```

5.2. Administer IP Node Names

The node names defined here will be used in other configuration screens to define a SIP signaling group between Communication Manager and Session Manager. In the **IP Node Names** form, assign the node **Name** and **IP Address** for the Session Manager. In this case, **smpub** and **192.168.1.18** are the **Name** and **IP Address** for the Session Manager. Also note the **procr** name as this is the interface that Communication Manager will use as the SIP signaling interface to Session Manager.

```

display node-names ip
                                IP NODE NAMES

  Name          IP Address
procr         10.10.7.52
smpub         192.168.1.18
default         0.0.0.0

```

5.3. Administer IP Network Region

Use the **change ip-network-region 1** command to set the following values:

- The **Authoritative Domain** field is configured to match the domain name configured on Session Manager. In this configuration, the domain name is **lab.ic.static.hipcom.co.uk**.
- By default, **IP-IP Direct Audio** (both **Intra-** and **Inter-Region**) is set to yes to allow audio traffic to be sent directly between endpoints without using gateway VoIP resources. In this configuration this must be set to **no**.
- The **Codec Set** is set to the number of the IP codec set to be used for calls within the IP network region. In this case, codec set **1** will be used.

```
change ip-network-region 1                                     Page 1 of 20
                                                           IP NETWORK REGION
Region: 1
Location: 1          Authoritative Domain: lab.ic.static.hipcom.co.uk
Name: Default NR
MEDIA PARAMETERS          Intra-region IP-IP Direct Audio: no
Codec Set: 1             Inter-region IP-IP Direct Audio: no
UDP Port Min: 2048      IP Audio Hairpinning? n
UDP Port Max: 3329
DIFFSERV/TOS PARAMETERS
Call Control PHB Value: 46
Audio PHB Value: 46
Video PHB Value: 26
802.1P/Q PARAMETERS
Call Control 802.1p Priority: 6
Audio 802.1p Priority: 6
Video 802.1p Priority: 5
AUDIO RESOURCE RESERVATION PARAMETERS
H.323 IP ENDPOINTS          RSVP Enabled? n
H.323 Link Bounce Recovery? y
Idle Traffic Interval (sec): 20
Keep-Alive Interval (sec): 5
```

5.4. Administer IP Codec Set

Use the **change ip-codec-set** command for the codec set specified in the **IP Network Region** form. Enter the list of audio codec's eligible to be used in order of preference. For the interoperability test, the codec's supported by BTW/HIPCOM were configured, namely **G.711A**, **G.711MU** and **G.729**.

```
change ip-codec-set 1                                       Page 1 of 2
                                                           IP Codec Set
Codec Set: 1
Audio      Silence      Frames      Packet
Codec      Suppression  Per Pkt    Size(ms)
1: G.711A      n             2          20
2: G.729      n             2          20
3: G.711MU    n             2          20
```


BTW/HIPCOM SIP Trunk Service supports the T.38 fax protocol. Configure the T.38 fax protocol by setting the **Fax Mode** to **t.38-standard** on **Page 2** of the codec set form as shown below.

```
change ip-codec-set 1 Page 2 of 2
```

IP Codec Set

Allow Direct-IP Multimedia? n

	Mode	Redundancy
FAX	t.38-standard	0
Modem	off	0
TDD/TTY	US	3
Clear-channel	n	0

5.5. Administer SIP Signaling Groups

This signaling group (and trunk group) will be used for inbound and outbound PSTN calls to BTW/HIPCOM SIP Trunk Service and will be configured using TCP (Transmission Control Protocol) and the default tcp port of 5060. Configure the **Signaling Group** using the **add signaling-group n** command as follows:

- Set the **Group Type** field to **sip**
- The **Transport Method** field is set to **tcp**
- Set the **Near-end Node Name** to the processor interface (node name **procr**). This value is taken from the **IP Node Names** form shown in **Section 5.2**
- Set the **Far-end Node Name** to the node name defined for the Session Manager (node name **smpub**), also shown in **Section 5.2**
- Ensure that the recommended TCP port value of **5060** is configured in the **Near-end Listen Port** and the **Far-end Listen Port** fields
- In the **Far-end Network Region** field, enter the IP Network Region configured in **Section 6.2**. This field logically establishes the **far-end** for calls using this signaling group as network region **1**
- Set the **Far-end-Domain** to BTW/HIPCOM domain name, in this case **lab.ic.static.hipcom.co.uk**
- The **Direct IP-IP Audio Connections** field is set to **n**
- The **DTMF over IP** field should remain set to the default value of **rtp-payload**. This value enables Communication Manager to send DTMF transmissions using RFC 2833

The default values for the other fields may be used.

```
add signaling-group 1
                                SIGNALING GROUP
Group Number: 1                 Group Type: sip
                                Transport Method: tcp
IMS Enabled? n

Near-end Node Name: procr       Far-end Node Name: smpub
Near-end Listen Port: 5060     Far-end Listen Port: 5060
                                Far-end Network Region: 1
Far-end Domain: lab.ic.static.hipcom.co.uk

Incoming Dialog Loopbacks: eliminate
                                Bypass If IP Threshold Exceeded? n
                                RFC 3389 Comfort Noise? n
DTMF over IP: rtp-payload      Direct IP-IP Audio Connections? n
Session Establishment Timer(min): 3
                                IP Audio Hairpinning? n
                                Enable Layer 3 Test? n
                                Direct IP-IP Early Media? n
H.323 Station Outgoing Direct Media? n
                                Alternate Route Timer(sec): 6
```

5.6. Administer SIP Trunk Group

A trunk group is associated with the signaling group described in **Section 5.5**. Configure the trunk group using the **add trunk-group x** command, where **x** is an available trunk group. On **Page 1** of this form:

- Set the **Group Type** field to **sip**
- Choose a descriptive **Group Name**
- Specify a trunk access code (**TAC**) consistent with the dial plan, i.e. **135**
- The **Direction** is set to **two-way** to allow incoming and outgoing calls
- Set the **Service Type** field to **tie**
- Specify the signaling group associated with this trunk group in the **Signaling Group** field as previously configured in **Section 5.5**
- Specify the **Number of Members** supported by this SIP trunk group

```
add trunk-group 1                                     Page 1 of 21
                                     TRUNK GROUP
Group Number: 1                                     Group Type: sip          CDR Reports: y
  Group Name: smpub                                COR: 1                  TN: 1          TAC: 135
  Direction: two-way                               Outgoing Display? n
Dial Access? n                                     Night Service:
Queue Length: 0
Service Type: tie                                  Auth Code? n
                                               Signaling Group: 1
                                               Number of Members: 30
```

On **Page 2** of the trunk-group form the **Preferred Minimum Session Refresh Interval (sec)** field should be set to a value mutually agreed with BTW/HIPCOM to prevent unnecessary SIP messages during call setup.

```
add trunk-group 1                                     Page 2 of 21
  Group Type: sip
TRUNK PARAMETERS
  Unicode Name: auto
                                               Redirect On OPTIM Failure: 8000
  SCCAN? n                                         Digital Loss Group: 18
                                               Preferred Minimum Session Refresh Interval(sec): 1800
```

On **Page 3**, set the **Numbering Format** field to **unk-pvt**. This allows the number to be sent to BTW/HIPCOM without the + used in the E164 numbering format.

```

add trunk-group 1                                     Page 3 of 21
TRUNK FEATURES
    ACA Assignment? n                               Measured: none
                                                    Maintenance Tests? y

    Numbering Format: unk-pvt
    UI Treatment: service-provider
    Replace Restricted Numbers? n
    Replace Unavailable Numbers? n

Modify Tandem Calling Number:
  
```

On **Page 4**, set the **Mark Users as Phone** to **y**, this field inserts a parameter to SIP requests indicating to any receiving SIP entity that the user part of the request URI should be treated as a telephone number. Set **Send Transferring Party Information** to **y**, to allow trunk to trunk transfers. Set **Telephone Event Payload Type** to **101** the value preferred by BTW/HIPCOM.

```

add trunk-group 1                                     Page 4 of 21
                                                    PROTOCOL VARIATIONS

    Mark Users as Phone? y
    Prepend '+' to Calling Number? n
    Send Transferring Party Information? y
    Network Call Redirection? n
    Send Diversion Header? n
    Support Request History? y
    Telephone Event Payload Type: 101
  
```

5.7. Administer Calling Party Number Information

5.7.1. Set Private Unknown Numbering

Use the **change private-unknown-numbering** command to configure Communication Manager to send the calling party number. In the sample configuration, all stations with a **4-digit** extension beginning with **13** will send the calling party number **44203xxxxxxx** to BTW/HIPCOM SIP Trunk Service. This calling party number will be sent in the SIP From, Contact and PAI headers, and displayed on display-equipped PSTN telephones. Public DID numbers have been masked for security purposes.

```

change private-unknown-numbering 0                   Page 1 of 2
    NUMBERING - PUBLIC/UNKNOWN FORMAT
    Ext Ext      Trk   CPN      Total
    Len Code    Grp(s) Prefix   CPN
    Len Code    Grp(s) Prefix   Len
    4 13        1     44203xxxxxxx 12
    Total Administered: 1
    Maximum Entries: 240
  
```

5.8. Administer Route Selection for Outbound Calls

In these Application Notes, the Automatic Route Selection (ARS) feature will be used to route outbound calls via the SIP trunk to BTW/HIPCOM SIP Trunk Service. In the sample configuration, the single digit **9** is used as the ARS access code. Avaya telephone users will dial **9** to reach an outside line. Use the **change feature-access-codes** command to configure or observe **9** as the **Auto Route Selection (ARS) - Access Code 1**.

```

change feature-access-codes                                     Page 1 of 9
                                FEATURE ACCESS CODE (FAC)
Abbreviated Dialing List1 Access Code:
Abbreviated Dialing List2 Access Code:
Abbreviated Dialing List3 Access Code:
Abbreviated Dial - Prgm Group List Access Code:
Announcement Access Code: *37
Answer Back Access Code: *12
Attendant Access Code:
Auto Alternate Routing (AAR) Access Code: 7
Auto Route Selection (ARS) - Access Code 1: 9      Access Code 2: *99
Automatic Callback Activation:      Deactivation:
Call Forwarding Activation Busy/DA: *87      All: *88      Deactivation: #88
Call Forwarding Enhanced Status:      Act:      Deactivation:
  
```

Use the **change ars analysis** command to configure the routing of dialed digits following the first digit 9. A small sample of dial patterns are illustrated here. Further administration of ARS is beyond the scope of these Application Notes. The example entries shown will match outgoing calls to numbers beginning **0** or **00**. Calls are sent to **Route Pattern 1**, which contains the previously configured SIP Trunk Group.

```

change ars analysis 02                                       Page 1 of 2
                                ARS DIGIT ANALYSIS TABLE
                                Location: all                  Percent Full: 1
Dialed      Total      Route      Call      Node      ANI
String      Min      Max      Pattern   Type      Num      Reqd
0          10   11   1       lpvt    n
00         11   15   1       lpvt    n
  
```

Use the **change route-pattern** command to add the SIP trunk group to the route pattern that ARS selects. In this configuration, route pattern **1** is used to route calls to trunk group 1. Set the **Numbering Format** to **unk-unk** for the first route selected to allow CLI to be sent without a + to the BTW/HIPCOM network.

```

change route-pattern 1                                     Page 1 of 3
                Pattern Number: 1   Pattern Name: tosm100
                SCCAN? n           Secure SIP? n
  Grp FRL NPA Pfx Hop Toll No.  Inserted          DCS/ IXC
  No   Mrk Lmt List Del Digits          QSIG
                Dgts                    Intw
1: 1    0
2:
3:
4:
5:
6:
                BCC VALUE   TSC CA-TSC   ITC BCIE Service/Feature PARM No. Numbering LAR
                0 1 2 M 4 W   Request          Dgts Format
                Subaddress
1: y y y y y n n           rest          unk-unk  none
2: y y y y y n n           rest          none    none

```

5.9. Administer Incoming Digit Translation

This step configures the settings necessary to map incoming DID calls to the proper Communication Manager extension(s). The incoming digits sent in the INVITE message from BTW/HIPCOM can be manipulated as necessary to route calls to the desired extension. In the examples used in the compliance testing, the incoming DID numbers provided by BTW/HIPCOM correlate to the internal extensions assigned within Communication Manager. The entries displayed below translates incoming DID numbers 44203xxxxxx and 44203xxxxxx to a 4 digit extension by deleting all of the incoming digits and inserting an extension. Public DID numbers have been masked for security purposes.

```

change inc-call-handling-trmt trunk-group 1             Page 1 of 3
                INCOMING CALL HANDLING TREATMENT
  Service/      Number   Number      Del Insert
  Feature       Len      Digits
public-ntwrk   12     44203xxxxxx  all  1306
public-ntwrk   12     44203xxxxxx  all  1307

```

Save Communication Manager changes by enter **save translation** to make them permanent.


6. Configuring Avaya Aura® Session Manager

This section provides the procedures for configuring Session Manager. The Session Manager is configured via the System Manager. The procedures include the following areas:

- Log in to Avaya Aura® System Manager
- Administer SIP domain
- Administer SIP Entities
- Administer Entity Links
- Administer Routing Policies
- Administer Dial Patterns
- Administer Avaya Aura® Communication Manager as Managed Element
- Administer Application for Avaya Aura® Communication Manager
- Administer Application Sequence for Avaya Aura® Communication Manager
- Administer SIP Extensions

6.1. Log in to Avaya Aura® System Manager

Access the System Manager using a Web Browser by entering **http://<FQDN >/SMGR**, where <FQDN> is the fully qualified domain name of System Manager. Log in using appropriate credentials (not shown) and the Home tab will be presented with menu options shown below.

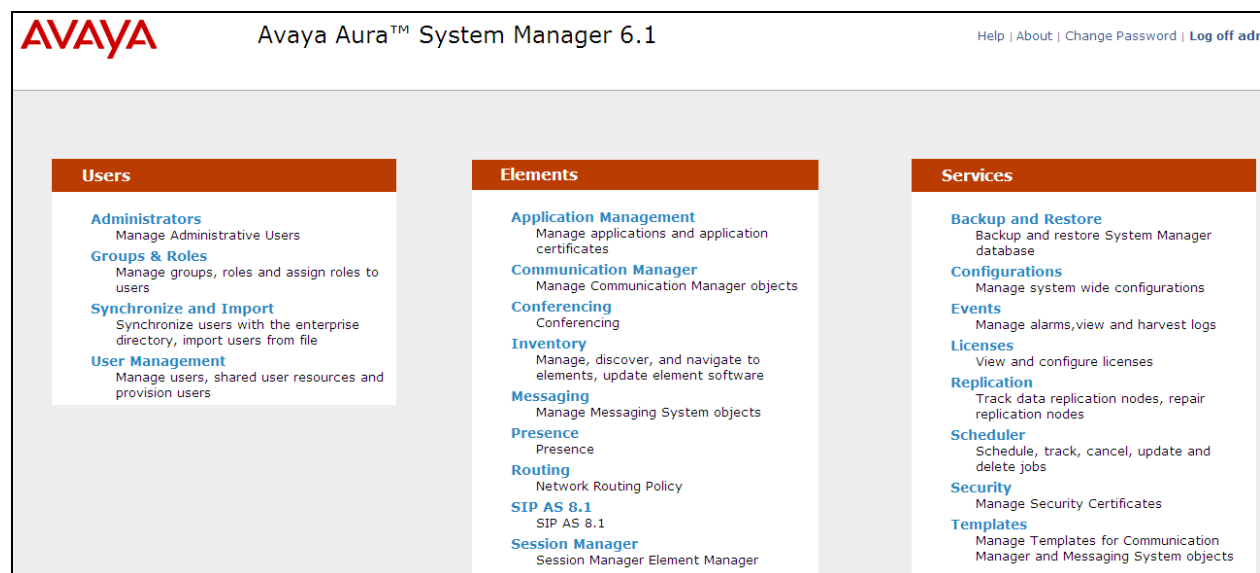

The screenshot displays the Avaya Aura System Manager 6.1 web interface. The header includes the Avaya logo, the product name "Avaya Aura™ System Manager 6.1", and navigation links for "Help | About | Change Password | Log off adi". The main content area is divided into three columns: "Users", "Elements", and "Services".

Users	Elements	Services
Administrators Manage Administrative Users	Application Management Manage applications and application certificates	Backup and Restore Backup and restore System Manager database
Groups & Roles Manage groups, roles and assign roles to users	Communication Manager Manage Communication Manager objects	Configurations Manage system wide configurations
Synchronize and Import Synchronize users with the enterprise directory, import users from file	Conferencing Conferencing	Events Manage alarms, view and harvest logs
User Management Manage users, shared user resources and provision users	Inventory Manage, discover, and navigate to elements, update element software	Licenses View and configure licenses
	Messaging Manage Messaging System objects	Replication Track data replication nodes, repair replication nodes
	Presence Presence	Scheduler Schedule, track, cancel, update and delete jobs
	Routing Network Routing Policy	Security Manage Security Certificates
	SIP AS 8.1 SIP AS 8.1	Templates Manage Templates for Communication Manager and Messaging System objects
	Session Manager Session Manager Element Manager	

6.2. Administer SIP domain

To add the SIP domain that will be used with Session Manager, select **Routing** from the **Home** tab menu (not shown) and in the resulting tab select **SIP Domains** from left hand menu. Click the **New** button to create a new SIP domain entry. In the **Name** field enter the domain name (e.g., **lab.ic.static.hipcom.co.uk**) and optionally a description for the domain in the **Notes** field. Click **Commit** to save changes (not shown).

Routing / Elements / Routing / Domains- Domain Management

Domain Management

Edit New Duplicate Delete More Actions

1 Item Refresh Filter

<input type="checkbox"/>	Name	Type	Default	Notes
<input type="checkbox"/>	lab.ic.static.hipcom.co.uk	sip	<input type="checkbox"/>	

Select : All, None

6.3. Administer Locations

Locations can be used to identify logical and/or physical locations where SIP Entities reside, for the purposes of bandwidth management. One location is added to the sample configuration for the enterprise SIP entities. On the **Routing** tab select **Locations** from the left hand menu. Under **General**, in the **Name** field enter an informative name for the location. Scroll to the bottom of the page and under **Location Pattern**, click **Add**, then enter an **IP Address Pattern** in the resulting new row, * is used to specify any number of allowed characters at the end of the string. Below is the location configuration used for the simulated enterprise

Routing / Elements / Routing / Locations- Location Details

Location Details Commit

General

* Name: Galway

Notes:

Overall Managed Bandwidth

Managed Bandwidth Units: Kbit/sec

Add Remove

2 Items Refresh Filter

<input type="checkbox"/>	IP Address Pattern	Notes
<input type="checkbox"/>	*86.47.122.*	
<input type="checkbox"/>	*10.10.9.*	

6.4. Administer SIP Entities

A SIP Entity must be added for each SIP-based telephony system supported by a SIP connection to the Session Manager. To add a SIP Entity, select **SIP Entities** on the left panel menu and then click on the **New** button (not shown). The following will need to be entered for each SIP Entity.

Under **General**:

- In the **Name** field enter an informative name
- In the **FQDN or IP Address** field enter the IP address of Session Manager or the signaling interface on the connecting system
- In the **Type** field use **Session Manager** for a Session Manager SIP entity, **CM** for a Communication Manager SIP entity and **Gateway** for the SBC SIP entity
- In the **Location** field select the appropriate location from the drop down menu
- In the **Time Zone** field enter the time zone for the SIP Entity

In this configuration there are three SIP Entities.

- Session Manager SIP Entity
- Communication Manager SIP Entity
- Session Border Controller SIP Entity

6.4.1. Avaya Aura® Session Manager SIP Entity

The following screens show the SIP entity for Session Manager. The **FQDN or IP Address** field is set to the IP address of the Session Manager SIP signaling interface.

The screenshot shows the configuration page for a SIP Entity. The left-hand navigation pane includes: Routing, Domains, Locations, Adaptations, SIP Entities (highlighted), Entity Links, Time Ranges, Routing Policies, Dial Patterns, Regular Expressions, and Defaults. The main content area is titled 'SIP Entity Details' and includes a 'Commit' button. The 'General' tab is selected, displaying the following fields:

- Name:** Session Manager 1
- FQDN or IP Address:** [Redacted]
- Type:** Session Manager
- Notes:** [Empty]
- Location:** Galway
- Outbound Proxy:** [Empty]
- Time Zone:** Europe/Dublin
- Credential name:** [Empty]

Below these fields is a section for **SIP Link Monitoring**, where the **SIP Link Monitoring** dropdown is set to 'Use Session Manager Configuration'.

The Session Manager must be configured with the port numbers on the protocols that will be used by the other SIP entities. To configure these scroll to the bottom of the page and under **Port**, click **Add**, then edit the fields in the resulting new row.

- In the **Port** field enter the port number on which the system listens for SIP requests
- In the **Protocol** field enter the transport protocol to be used for SIP requests
- In the **Default Domain** field, from the drop down menu select **lab.ic.static.hipcom.co.uk** as the default domain

The screenshot shows a table with the following data:

Port	Protocol	Default Domain	Notes
5060	TCP	lab.ic.static.hipcom.co.uk	
5060	UDP	lab.ic.static.hipcom.co.uk	
5061	TLS	lab.ic.static.hipcom.co.uk	

6.4.2. Avaya Aura® Communication Manager SIP Entity

The following screens show the SIP entity for Communication Manager. The **FQDN or IP Address** field is set to the IP address of the Interface that will be providing SIP signaling. The entity **Type** is set to **CM**.

The screenshot shows the configuration for a SIP Entity named 'Communication Manager'. The 'FQDN or IP Address' field is set to '10.10.9.52'. The 'Type' is set to 'CM'. The 'Adaptation' is set to 'Galway' and the 'Location' is set to 'Europe/Dublin'. The 'SIP Timer B/F (in seconds)' is set to '4'. The 'SIP Link Monitoring' is set to 'Use Session Manager Configuration'.

6.4.3. BTW/HIPCOM SIP Trunk Service SIP Entities

Each SBC used by BTW/HIPCOM for the SIP trunk provision must be added to Session Manager as a SIP entity. The **FQDN or IP Address** field is set to the IP address of the SBC provided by BTW/HIPCOM, this has been hidden for security purposes.

The screenshot displays the 'SIP Entity Details' configuration page. The left sidebar shows a navigation menu with 'SIP Entities' highlighted. The main content area is titled 'SIP Entity Details' and includes a 'Commit' button in the top right corner. The 'General' section contains the following fields:

- Name:** Hipcom SBC
- FQDN or IP Address:** 85. [REDACTED]
- Type:** Gateway
- Notes:** [Empty text box]
- Adaptation:** [Dropdown menu]
- Location:** Galway
- Time Zone:** Europe/Dublin
- Override Port & Transport with DNS SRV:**
- * SIP Timer B/F (in seconds):** 4
- Credential name:** [Empty text box]
- Call Detail Recording:** none

The 'SIP Link Monitoring' section contains the following field:

- SIP Link Monitoring:** Use Session Manager Configuration

6.5. Administer Entity Links

A SIP trunk between a Session Manager and another system is described by an Entity Link. To add an Entity Link, select **Entity Links** on the left panel menu and click on the **New** button . Fill in the following fields in the new row that is displayed.

- In the **Name** field enter an informative name
- In the **SIP Entity 1** field select **SessionManager**
- In the **Port** field enter the port number to which the other system sends its SIP requests
- In the **SIP Entity 2** field enter the other SIP Entity for this link, created in **Section 6.4**
- In the **Port** field enter the port number to which the other system expects to receive SIP requests
- Select the **Trusted** tick box to make the other system trusted
- In the **Protocol** field enter the transport protocol to be used to send SIP requests

Click **Commit** (not shown) to save changes. The following screen shows the Entity Links used in this configuration.

The screenshot shows the 'Entity Links' configuration page. The left sidebar has 'Entity Links' highlighted. The main area shows a table with 3 items. The table has columns: Name, SIP Entity 1, Protocol, Port, SIP Entity 2, Port, Trusted, and No. The data rows are:

<input type="checkbox"/>	Name	SIP Entity 1	Protocol	Port	SIP Entity 2	Port	Trusted	No
<input type="checkbox"/>	CM Link	Session Manager 1	TCP	5060	Communication Manager	5060	<input checked="" type="checkbox"/>	
<input type="checkbox"/>	Hipcom_SBC Link	Session Manager 1	UDP	5060	Hipcom SBC	5060	<input checked="" type="checkbox"/>	
<input type="checkbox"/>	SBC Link	Session Manager 1	TCP	5060	SBC	5060	<input checked="" type="checkbox"/>	

Below the table, there is a 'Select : All, None' option.


6.6. Administer Routing Policies

Routing policies must be created to direct how calls will be routed to a system. To add a routing policy, select **Routing Policies** on the left panel menu and then click on the **New** button (not shown).

Under **General**:

- Enter an informative name in the **Name** field
- Under **SIP Entity as Destination**, click **Select**, and then select the appropriate SIP entity to which this routing policy applies

The following screen shows the routing policy for Communication Manager:

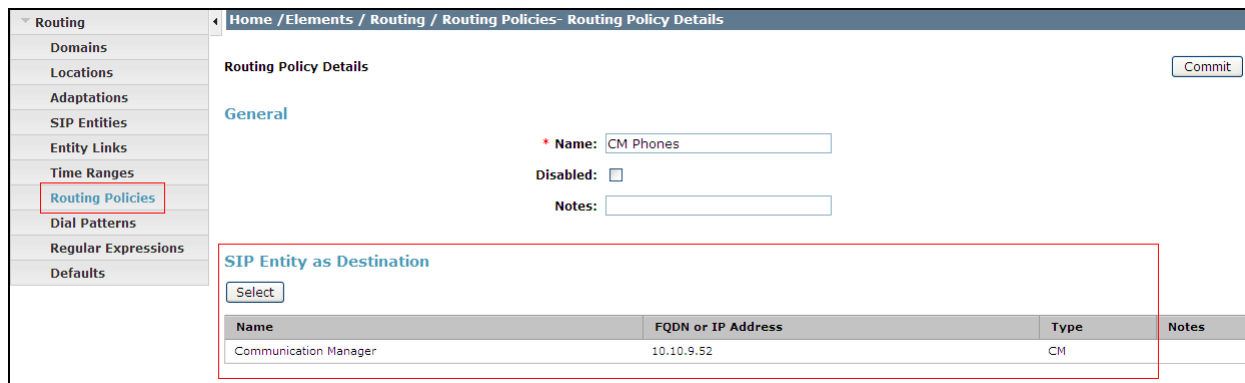

Routing Policy Details

Commit

General

* Name:

Disabled:


Notes:

SIP Entity as Destination

Select

Name	FQDN or IP Address	Type	Notes
Communication Manager	10.10.9.52	CM	

The following screen shows the routing policy for BTW/HIPCOM's SBC:

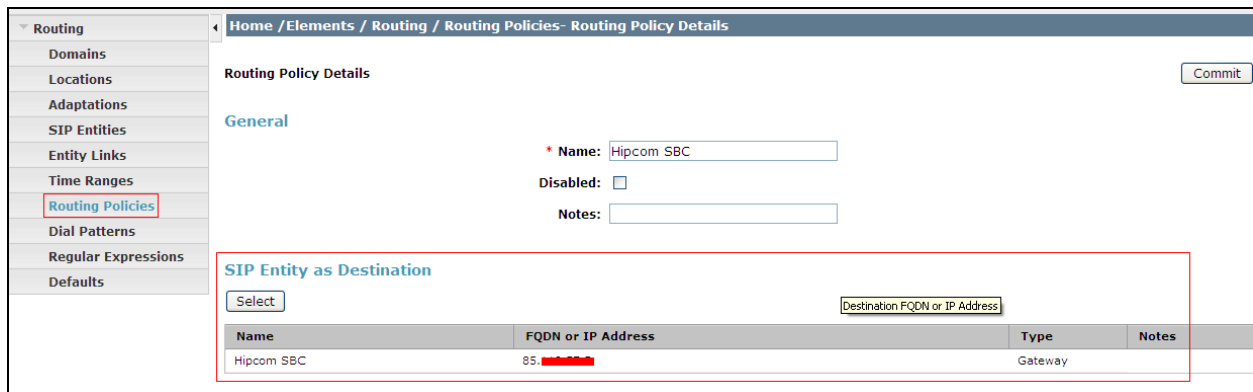

Routing Policy Details

Commit

General

* Name:

Disabled:

Notes:

SIP Entity as Destination

Select

Destination FQDN or IP Address

Name	FQDN or IP Address	Type	Notes
Hipcom SBC	85. [redacted]	Gateway	

6.7. Administer Dial Patterns

A dial pattern must be defined to direct calls to the appropriate telephony system. To configure a dial pattern select **Dial Patterns** on the left panel menu and then click on the **New** button (not shown).

Under **General**:

- In the **Pattern** field enter a dialed number or prefix to be matched
- In the **Min** field enter the minimum length of the dialed number
- In the **Max** field enter the maximum length of the dialed number
- In the **SIP Domain** field select the domain configured in **Section 6.2**

Under **Originating Locations and Routing Policies**. Click **Add**, in the resulting screen (not shown) under **Originating Location** select **Locations** created in **Section 6.3** and under **Routing Policies** select one of the routing policies defined in **Section 6.7**. Click **Select** button to save (not shown). The following screen shows an example dial pattern configured for BTW/HIPCOM SIP Trunk Service.

Routing / Home / Elements / Routing / Dial Patterns- Dial Pattern Details

Dial Pattern Details Commit

General

* Pattern:

* Min:

* Max:

Emergency Call:

SIP Domain:

Notes:

Originating Locations and Routing Policies

Add Remove

1 Item Refresh Filter

<input type="checkbox"/>	Originating Location Name ¹ ▲	Originating Location Notes	Routing Policy Name	Rank ² ▲	Routing Policy Disabled	Routing Policy Destination	Routing Notes
<input type="checkbox"/>	Galway		Hipcom SBC	0	<input type="checkbox"/>	Hipcom SBC	

The following screen shows an example dial pattern configured for the Communication Manager.

The screenshot displays the 'Dial Pattern Details' configuration page. The left sidebar shows a navigation menu with 'Dial Patterns' highlighted. The main content area is titled 'Dial Pattern Details' and includes a 'Commit' button. The 'General' section contains the following fields:

- * Pattern: 44203
- * Min: 5
- * Max: 12
- Emergency Call:
- SIP Domain: -ALL-
- Notes: (empty text box)

Below the general section is the 'Originating Locations and Routing Policies' section, which includes an 'Add' button, a 'Remove' button, and a table with 1 item. The table has the following columns: Originating Location Name, Originating Location Notes, Routing Policy Name, Rank, Routing Policy Disabled, Routing Policy Destination, and Routing Notes.

<input type="checkbox"/>	Originating Location Name 1 ▲	Originating Location Notes	Routing Policy Name	Rank 2 ▲	Routing Policy Disabled	Routing Policy Destination	Routing Notes
<input type="checkbox"/>	-ALL-	Any Locations	CM Phones	0	<input type="checkbox"/>	Communication Manager	

7. BT Wholesale/HIPCOM Configuration

The configuration required by BTW/HIPCOM to allow the tests to be carried is not covered in this document and any further information required shown be obtained through the local BTW/HIPCOM representative.

8. Verification Steps

This section provides steps that may be performed to verify that the solution is configured correctly.

1. From System Manager Home Tab click on Session Manager and navigate to **Session Manager → System Status → SIP Entity Monitoring**. Select the relevant SIP Entity from the list and observe if the **Conn Status** and **Link Status** are showing as **up**.

This is the SIP Entity link to the Communication Manager:

Details	Session Manager Name	SIP Entity Resolved IP	Port	Proto.	Conn. Status	Reason Code	Link Status
Show	Session Manager 1	10.10.9.52	5060	TCP	Up	200 OK	Up

This is the SIP Entity link to the BTW/HIPCOM'S SBC:

Details	Session Manager Name	SIP Entity Resolved IP	Port	Proto.	Conn. Status	Reason Code	Link Status
Show	Session Manager 1	85.100.100.100	5060	UDP	Up	200 OK	Up

From the Communication Manager SAT interface run the command **status trunk x** where **x** is a previously configured SIP trunk. Observe if all channels on the trunk group display **In service/ idle**.

```
status trunk 1
```

TRUNK GROUP STATUS			
Member	Port	Service State	Mtce Connected Ports Busy
0001/001	T00001	in-service/idle	no
0001/002	T00007	in-service/idle	no
0001/003	T00008	in-service/idle	no
0001/004	T00009	in-service/idle	no
0001/005	T00010	in-service/idle	no

2. Verify that endpoints at the enterprise site can place calls to the PSTN and that the call remains active.
3. Verify that endpoints at the enterprise site can receive calls from the PSTN and that the call can remain active.
4. Verify that the user on the PSTN can end an active call by hanging up.
5. Verify that an endpoint at the enterprise site can end an active call by hanging up.

9. Conclusion

These Application Notes describe the configuration necessary to connect Avaya Aura® Communication Manager and Avaya Aura® Session Manager to BTW/HIPCOM SIP Trunk Service. The testing was successfully performed with BTW/HIPCOM, refer to **Section 2.2** for more details.

10. References

This section references the documentation relevant to these Application Notes. Additional Avaya product documentation is available at <http://support.avaya.com>.

- [1] *Installing and Configuring Avaya Aura® System Platform*, Release 6.03, February 2011.
- [2] *Administering Avaya Aura® System Platform*, Release 6.03, February 2011.
- [3] *Administering Avaya Aura® Communication Manager*, August 2010, Document Number 03-300509.
- [4] *Avaya Aura® Communication Manager Feature Description and Implementation*, May 2009, Document Number 555-245-205.
- [5] *Installing and Upgrading Avaya Aura® System Manager Release 6.1*, November 2010.
- [6] *Installing and Configuring Avaya Aura® Session Manager*, January 2011, Document Number 03-603473
- [7] *Administering Avaya Aura® Session Manager*, March 2011, Document Number 03-603324.
- [8] RFC 3261 *SIP: Session Initiation Protocol*, <http://www.ietf.org/>

©2011 Avaya Inc. All Rights Reserved.

Avaya and the Avaya Logo are trademarks of Avaya Inc. All trademarks identified by ® and ™ are registered trademarks or trademarks, respectively, of Avaya Inc. All other trademarks are the property of their respective owners. The information provided in these Application Notes is subject to change without notice. The configurations, technical data, and recommendations provided in these Application Notes are believed to be accurate and dependable, but are presented without express or implied warranty. Users are responsible for their application of any products specified in these Application Notes.

Please e-mail any questions or comments pertaining to these Application Notes along with the full title name and filename, located in the lower right corner, directly to the Avaya DevConnect Program at devconnect@avaya.com.